

ONE TOUCH

300

301

302

303

English

A L C ▲ T E L

CONTENTS

■	Safety and Precautions	p. 2
■	1. Your telephone	p. 4
	1.1 - Keys	p. 5
	1.2 - Icons	p. 6
	1.3 - Conventions used in this User's Guide	p. 7
■	2. Getting started	p. 8
	2.1 - SIM card and battery	p. 8
	2.2 - Switching your phone on	p.10
	2.3 - Switching your phone off	p.10
■	3. First steps	p. 11
	3.1 - Making a call	p. 11
	3.2 - Receiving a call	p. 11
	3.3 - Accessing your voice mail	p.12
	3.4 - Displaying your number	p.12
	3.5 - Accessing the MENU and scrolling	p.13
	3.6 - MENU structure	p.14
	3.7 - Changing the ring tone	p.15
	3.8 - Creating a file	p.15
	3.9 - Reading your new short messages	p.16
■	4. Directory	p.17
	4.1 - Accessing your directory	p.17
	4.2 - Creating a file	p.17
	4.3 - Options	p.18
■	5. Calls	p.19
	5.1 - Making a call	p.19
	5.2 - Receiving a call	p.20
	5.3 - During a call	p.21
■	6. Call memory	p.23
	6.1 - Accessing and resending	p.23
	6.2 - Options	p.24

■ 7. Short messages	p.25
7.1 - Accessing short messages	p.25
7.2 - Reading your short messages	p.26
7.3 - Composing a short message	p.27
■ 8. Calculator	p.33
8.1 - Accessing the calculator	p.33
8.2 - Calculation example	p.33
■ 9. Currency converter	p.34
9.1 - Accessing the currency converter	p.34
9.2 - Conversion example	p.34
9.3 - Selecting currencies	p.35
■ 10. Games	p.36
10.1 - Accessing games	p.36
10.2 - Options	p.37
■ 11. Creating melodies	p.38
11.1 - Accessing the “Melody” MENU	p.38
11.2 - Composing a melody	p.38
11.3 - Options	p.39
■ 12. Mobile internet	p.40
12.1 - How to access the Internet services	p.40
12.2 - Keypad layout	p.40
12.3 - Available options	p.41
12.4 - Information line	p.41
■ 13. MENU	p.42
13.1 - Customising your MENU	p.42
13.2 - Audio	p.43
13.3 - Clock	p.44
13.4 - Numbers	p.45
13.5 - Services	p.46
13.6 - Set up	p.54
■ 14. Warranty	p.56
14.1 - Warranty	p.57
14.2 - Information	p.58
■ 15. Accessories	p.60

SAFETY AND PRECAUTIONS

We recommend that you read this chapter carefully before use.

● CONDITIONS OF USE:

Switch the phone off before boarding an aircraft. Use could lead to legal action against the user. Switch the phone off when in health care facilities except in areas specified. Like many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices in their proximity. Persons with a medical device (such as a pacemaker, hearing aid, insulin pump) should not carry the phone in a place close to the device. When placing or receiving a call, persons with a pacemaker or hearing aid should use the ear on the opposite side to the device. Switch your phone off when near gas or flammable liquids. Strictly obey all signs and instructions when in a fuel depot or chemical plant, at a refuelling point (service station) or in any potentially explosive atmosphere. Do not let small children use the phone without supervision. Do not attempt to open or repair it yourself. Use only the batteries, battery chargers and accessories approved by the manufacturer. The manufacturer disclaims any liability for damage caused by use of other batteries, chargers or accessories. Switch your phone off before removing the battery. Do not expose the phone to unfavorable environmental conditions (humidity, rain, ingress of liquid, dust, sea air, etc.). Outside the manufacturer's recommended operating temperature range (-20° C to +55° C), the legibility of the phone's display may be impaired, though this is temporary.

● ENVIRONMENT:

Do not attempt to open the battery because it contains chemical substances. Do not dispose of used batteries in household waste. Batteries must be disposed of in accordance with locally applicable environmental legislation.

● TRAFFIC SAFETY:

Remember to always check whether local legislation allows operation of a mobile phone while driving a vehicle. It is vital to connect the phone to an external antenna when it is used in a vehicle. Electromagnetic waves may otherwise interfere with the vehicle electronics. Check that the antenna is mounted and located away from the driver and passengers or separated from them by a metal screen (e.g. car roof). We recommend that you park your car before using the phone. However if you intend to use your phone while driving, you must use it connected to the Alcatel Car Kit accessory. Check with your car dealer or car manufacturer that the car's electronic systems (anti-lock brakes (ABS), airbag) are adequately shielded from mobile phone RF energy. Always avoid placing the phone on the dashboard.

● GENERAL INFORMATION:

As with all radio transceivers, your mobile phone emits electromagnetic waves. This phone conforms to international regulations insofar as when used under normal conditions and in accordance with the instructions contained herein.


There has been speculation about the safety of mobile phones. Several expert groups belonging to or having been appointed by official national or international bodies have analyzed all the existing publications and, to this date, have concluded that there is a lack of evidence as to any credible or convincing hazardous effects of mobile phones on health. These studies have, in particular, focused on the fact that mobile handsets receive and emit electromagnetic waves via their antennae. Experts from such organizations as the European Commission and the International Commission on Non-Ionising Radiation Protection (ICNIRP) have established thresholds on a handset's emissions to the human body. The main measurement standard is known as SAR (Specific Absorption Rate). ALCATEL can formally state that all its GSM mobile phones generate a SAR that is significantly below these thresholds.

Furthermore, ALCATEL actively supports national and international research into this issue carried out by authoritative and independent organizations. If you still have concerns on this issue, you may use your mobile phone with a headset, or using the handsfree feature integrated in the phone and, while driving, with the car kit. The part numbers of these accessories can be found in Chapter 15 on page 60.

The manufacturer disclaims any liability for damage which may result as a consequence of improper use or use contrary to the instructions contained herein.

January 2000

YOUR TELEPHONE

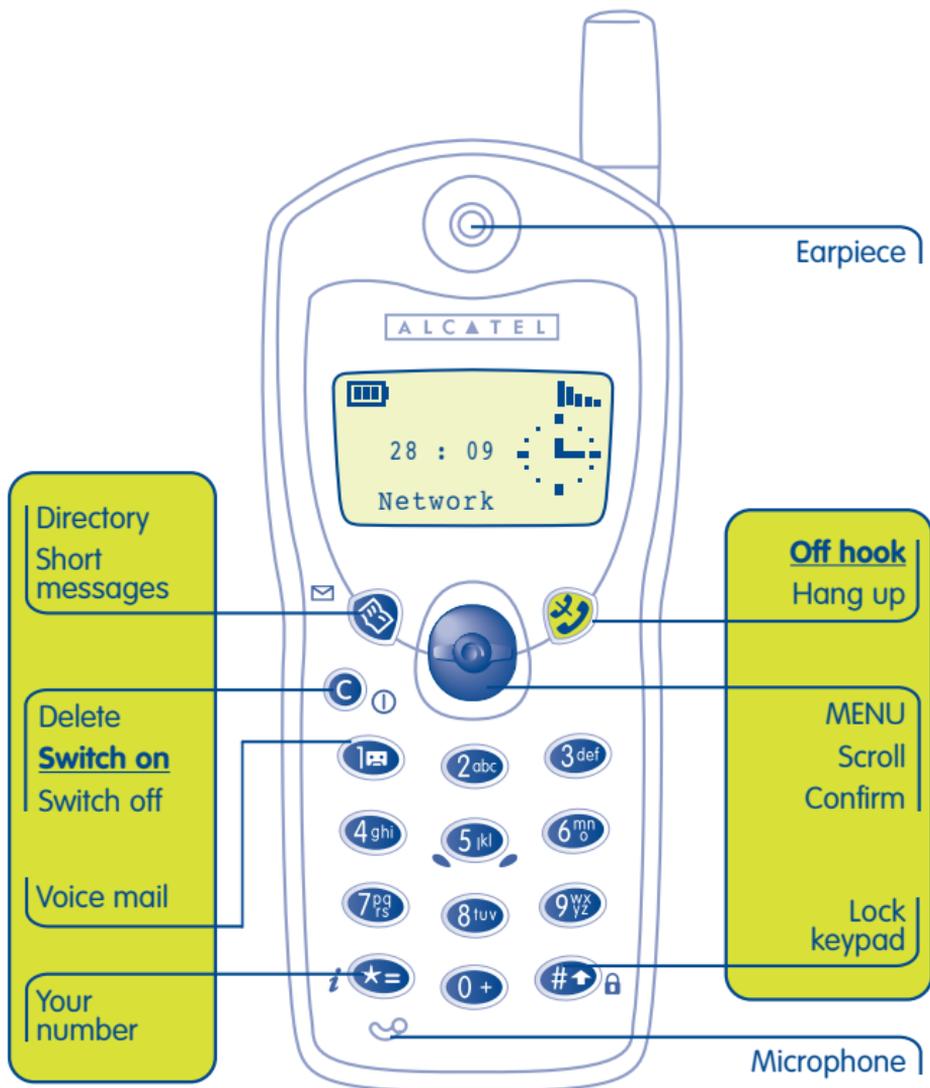

1.1 - KEYS

-  Access your directory (short keypress).
-   Access your short messages: SMS (long keypress).
-  Delete (short keypress).
-  Return to previous screen (long keypress).
-  **Switch phone ON/OFF**
(long keypress).
-  Access your voice mail (long keypress).
-  Display your number (long keypress).
-  **Off hook/Hang up**
Access call memory (Redial).
-  Lock keypad (long keypress).



Access the MENU.
Confirm an option.



Volume control during a call.
Scroll to select an option.

1.2 - ICONS*



Battery charge level.

(See Chapter 2, page 10)



Vibrator mode: your telephone vibrates and emits no ring tone or appointment reminder.



“Silent” mode: your telephone emits no ring tone or appointment reminder, and does not vibrate.

(See Chapter 13, page 43)



Unanswered incoming call: you have been called but have not answered. The icon clears when all the unanswered incoming calls stored in the call memory have been consulted.

(See Chapter 6, page 23)



Voice mail received: you must call your voice mail to listen to your messages.

(See Chapter 3, page 12)



Unread short message (SMS): you have received a short message but have not read it. The icon clears when all the messages have been read in full.

(See Chapter 7, page 26)



Short message list (SMS) is full: your terminal cannot store any more messages. You must access the short message list and delete at least one message.

(See Chapter 7, page 27)



Call forwarding activated: your calls are forwarded.

(See Chapter 13, page 49)



Appointment (or alarm) scheduled.

(See Chapter 13, page 44)

 Signal strength indicator.


 Preferred tariff area.

 Keypad locked.

 “Manual Network Search” mode.
(See Chapter 13, page 53)

 Roaming in your subscription country.

1.3 - CONVENTIONS USED IN THIS USER'S GUIDE

The following symbols are used in the text which follows:



Briefly press the scroll key in order to confirm an option.



Move the scroll key up or down in order to select an option.



Use the keypad keys to enter digits and letters.

*Icons and other illustrations shown in this User's Guide are for information only.

2 GETTING STARTED

2.1 - SIM CARD AND BATTERY

● INSERTING THE SIM CARD

You must insert your SIM card in order to use your phone.



Fit SIM card with chip facing downwards




Slide the SIM card into its compartment




Check that it is properly inserted

● FITTING THE BATTERY

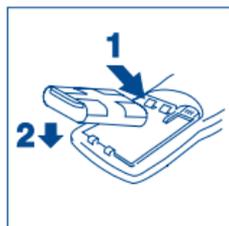

Insert the battery

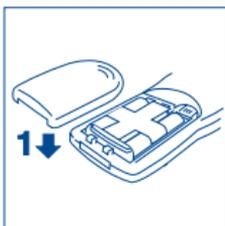


Fit the cover



Slide it into position

● CHARGING THE BATTERY

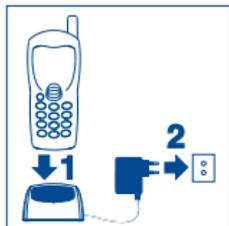

Connect the battery charger



Wait for on-screen indicator to stop flashing



Disconnect the battery charger once charging is complete

A beep will sound when charging begins.


It takes a brief while before the charging indicator icon starts to flash.

The mains socket outlet must be close to the phone and easily accessible.

● REMOVING THE BATTERY



Unclip and slide the cover.

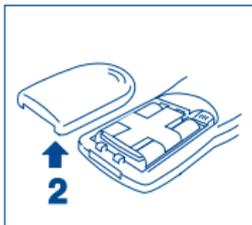

Remove it




Remove the battery



When you first use your phone you must charge the battery for approximately 3 hours.

2.2 - SWITCHING YOUR PHONE ON

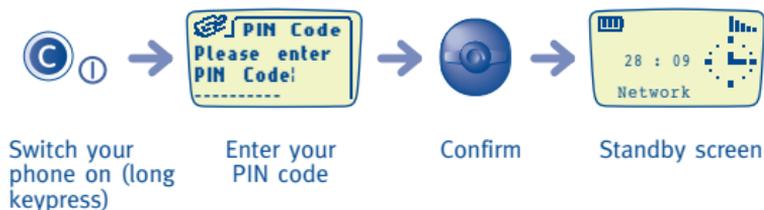

If you do not know your PIN code, please contact your network operator. Do not leave your PIN code near your phone and store your card in a safe place when you are not using it.

You are prompted to enter the time and date, enter new data if necessary, then confirm by .

If cell broadcast messages are displayed, use the  key to browse through them in full or press the  key to return to the standby screen.

While the phone is searching for a network, <<<-->>> is displayed. (???-??? is displayed if your SIM card is rejected by the network, in this case please contact your operator).


2.3 - SWITCHING YOUR PHONE OFF

From the standby screen, press the  key (long keypress).

3 FIRST STEPS

In order to make or receive a call, you must switch your phone on.

3.1 - MAKING A CALL

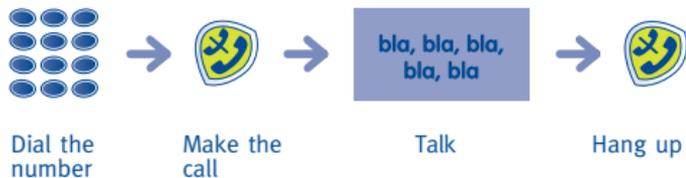

If you make a mistake, use the  key to delete digits.


3.2 - RECEIVING A CALL



The caller's number is displayed if it is provided by the network (check the availability of this service with your operator).

3.3 - ACCESSING YOUR VOICE MAIL

The network provides the voice mail service to ensure that you do not miss any calls: it works like an answering machine which you can interrogate at any time.

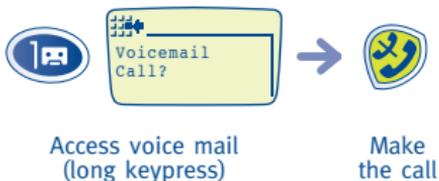

If your operator's voice mail access number is not shown, dial the number that was supplied to you with your subscription. To later modify this number use the **“Numbers/Voicemail”** MENU option, page 45.



To use your voice mail abroad, contact your operator before setting out on your trip.

3.4 - DISPLAYING YOUR NUMBER

You can display your own number by pressing the **i**  key (long keypress).

If your number is not displayed, enter it and confirm by pressing the  key.

To later modify it, see the **“Numbers/Your number”** MENU option, page 45.

3.5 - ACCESSING THE MENU AND SCROLLING

 
● ACCESSING THE MENU

The MENU can be accessed from the standby screen by pressing the  key.



Direct access to this function depends on your operator and the SIM card which you are using.

● CHOOSING AN OPTION



List of options

Select an option



Confirm


● RETURN TO PREVIOUS SCREEN

Press  (short keypress).

● RETURN TO STANDBY SCREEN


Press  (long keypress).

3.6 - MENU STRUCTURE

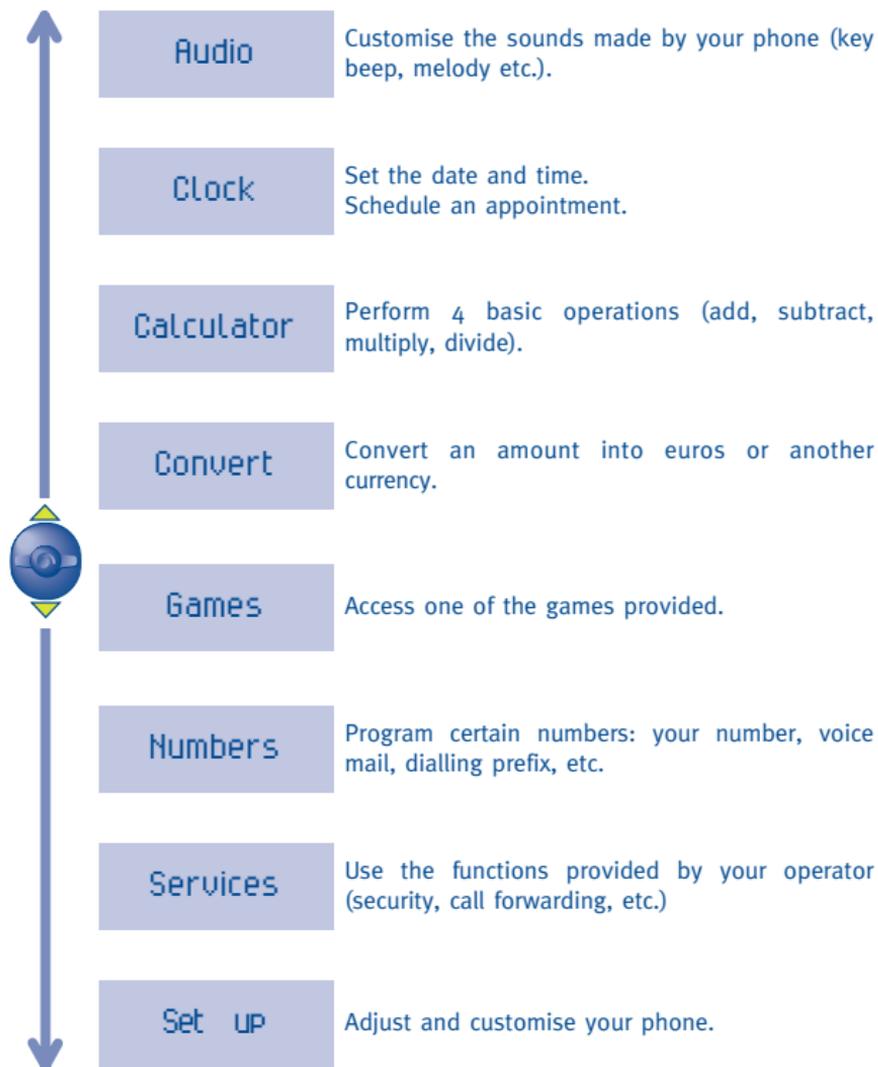


3.7 - CHANGING THE RING TONE

From **“Audio”** in the MENU:

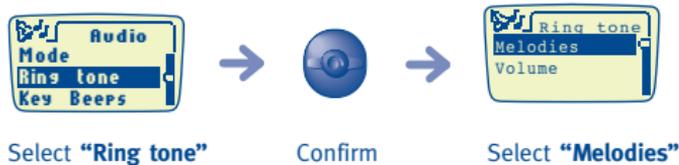

3.8 - CREATING A FILE

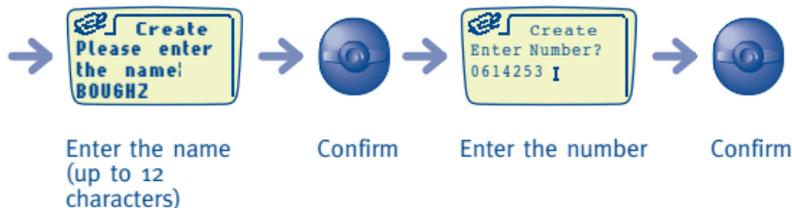


If you wish to use your directory abroad, store the numbers in international format with **“+”**.



If your directory is empty, you will see the prompt: **“Directory empty. Create a file?”**:
Create by pressing the  key or decline by pressing the  key.

3.9 - READING YOUR NEW SHORT MESSAGES (1)

The  icon and a beep⁽²⁾ indicate that a message has been received.

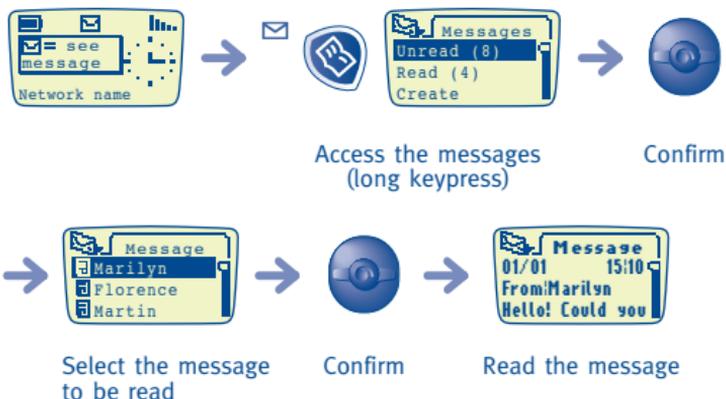

UNREAD RECEIVED MESSAGES

The  icon **disappears** as soon as you have read all the messages.



- (1) Check the availability of this service with your operator.
- (2) To deactivate the beep, see the **“Audio/Message alert”** MENU option, page 43

4 DIRECTORY

4.1 - ACCESSING YOUR DIRECTORY

Press the  key to access the directory from the standby screen.

● SEARCHING FOR A NAME BY ITS FIRST LETTER

You can also search for the name of the person you wish to contact by pressing the key associated with the first letter of their name.

Example: press the  key twice to find the first name beginning with "N". Then scroll the list to the name you want by using the  key.

● DISPLAYING A PHONE NUMBER

Press the  directory key while the name is selected.

● CALLING

Press the  key while the name is selected.

4.2 - CREATING A FILE



4.3 - OPTIONS

From the list of names in your directory, you can access the following options by using the  key:




Create	Create a file (name and telephone number) which will be stored in your SIM card (SIM card capacity depends on your operator).
See number	Display a complete file: name and number.
Modiy number	Modify the phone number corresponding to the selected name.
Modify name	Modify the selected name.
File Number	Modify the number of the selected file.
Delete	Delete the selected file (name and phone number).
Exit	Return to the names list in the directory.



To return to the standby screen, press the  key (long keypress).

5.1 - MAKING A CALL

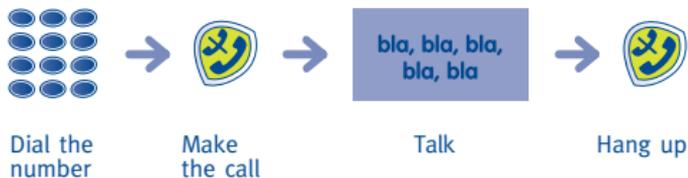

If you make a mistake, you can delete digits by pressing the **C** key.



To enter the characters “+” or “P” (pause), make a long keypress on the **0+** key (the following characters scroll: **0, +, *, P**).

● MAKING AN EMERGENCY CALL

If your telephone is within the area covered by a network, to make an emergency call, dial **112** or any other number provided by your operator.

● MAKING AN INTERNATIONAL CALL



Once the country code is displayed, dial the rest of the number and make the call.

5.2 - RECEIVING A CALL



If the  icon is displayed, the vibrating system is enabled and no ring tone is heard.

If the  icon is displayed, the vibrator and ring tone are deactivated.



The caller's number is displayed if provided by the network (check the availability of this service with your operator).

SWITCHING THE RING TONE OFF (without losing the call)


Press the  key when the phone is ringing: you can still answer the call by pressing the  key.

Pressing the  key again rejects the call.

5.3 - DURING A CALL

● AVAILABLE OPTIONS

During a call, you can use the ● key to access the following options:

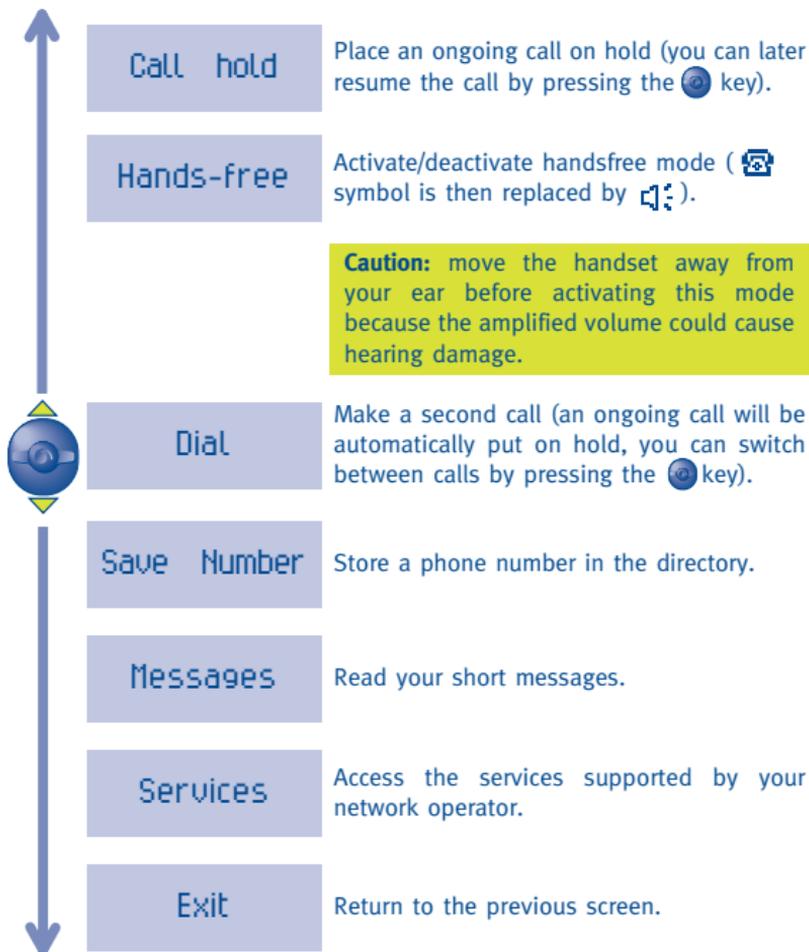

HANDLING A SECOND INCOMING CALL

You already have a call:



If you press the  key, the incoming call is accepted and the ongoing call is automatically put on hold: you can then swap between calls by pressing the  key.

If you press the  key, you will access other options (the incoming call is accepted by ending the ongoing call, etc.).



The caller's number is displayed if provided by the network (check the availability of this service with your operator).

6.1 - ACCESSING AND RESENDING




Each call is identified by one of the following symbols:

-  Answered incoming call.
-  Unanswered incoming call.
-  Outgoing call.

6.2 - OPTIONS

From the stored numbers list, you can access the following options by using the  key:

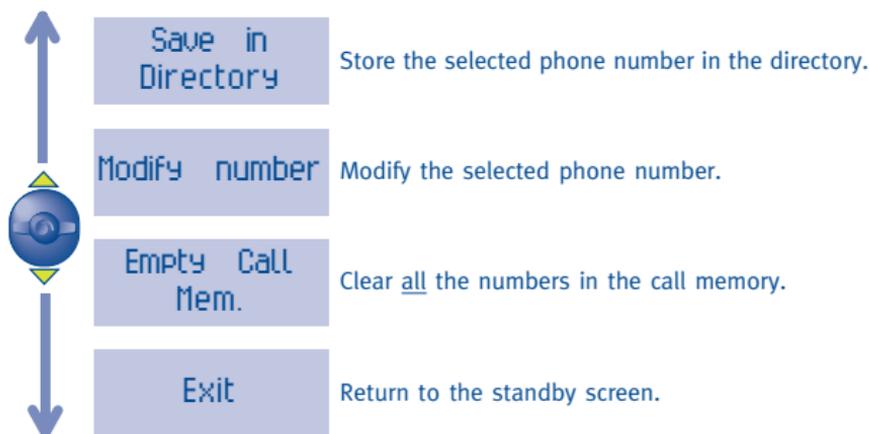

To return to the standby screen, press the  key (long keypress).

7 SHORT MESSAGES⁽¹⁾

7.1 - ACCESSING SHORT MESSAGES

To access short messages (SMS) from the standby screen, make a long keypress on the  key.



Access short messages (SMS)
(long keypress)

The following categories appear:

- | | |
|------------|---|
| Unread | Read new messages. |
| Read | Read old messages: already read or written. |
| Create | Create a new message. |
| Parameters | Configure parameters, especially the number of the service centre if it is not automatically suggested (you cannot send a short message without this number). |



(1) Check the availability of this service with your operator.

7.2 - READING YOUR SHORT MESSAGES

The messages are stored in your SIM card and classified in 2 categories: **unread messages and read messages.**



The capacity of your SIM card depends on your operator. The  icon is displayed when the list of stored messages is full: delete at least one message!

● **UNREAD MESSAGES:**

Unread received messages: see page 16.

● **READ MESSAGES:**

Received messages that have already been read and messages that have been written, sent or stored.

Messages may be preceded by the following symbols:




Message sent and acknowledgement received.



Message sent and no acknowledgement received, or message not delivered (in this case you must try to send the message again).

● AVAILABLE OPTIONS:

While reading a message, you can access the following options by using the  key:

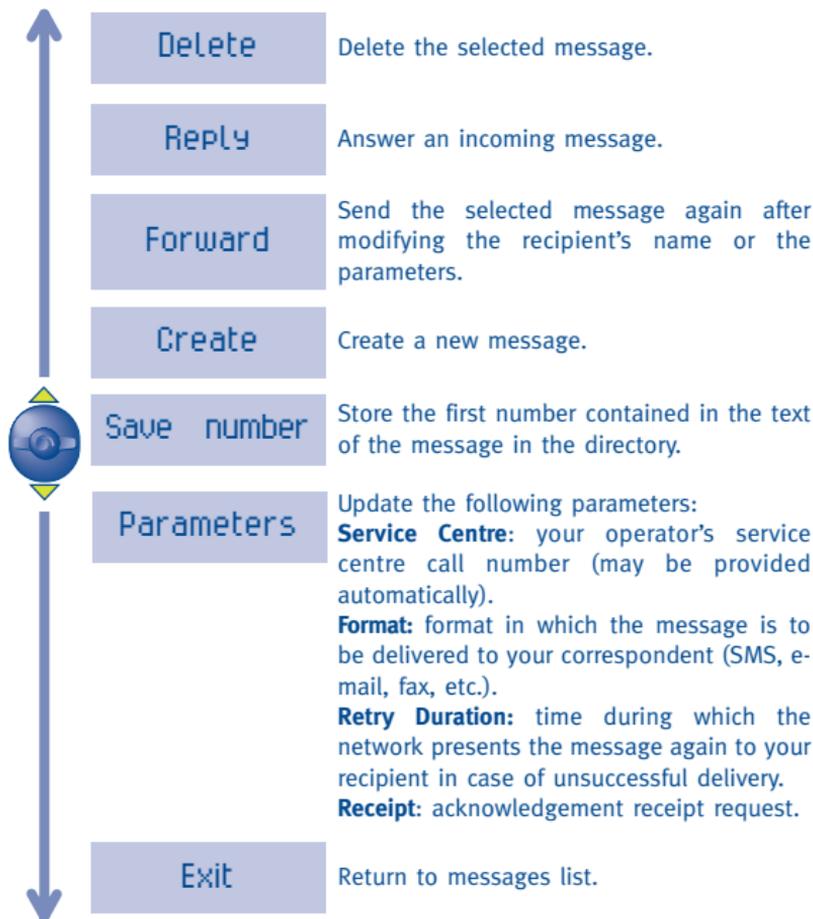

7.3 - COMPOSING A SHORT MESSAGE

You can create a message or supplement a (canned) stored message.

COMPOSING A MESSAGE:


To make it easier to write short messages, your phone has an **assisted data entry system** ⁽¹⁾ (predictive data entry). To create a word, all that is needed is a single keypress on the key for any of the letters which the word contains. Example: to enter a “b”, press the  key once.



Important: the displayed letter does not always match the desired letter; the most common word is suggested. Ignore words suggested at first, searching will become more accurate as you enter more letters.

To confirm the entered word, press the  key downwards twice.

Example: you want to write “bleu”:

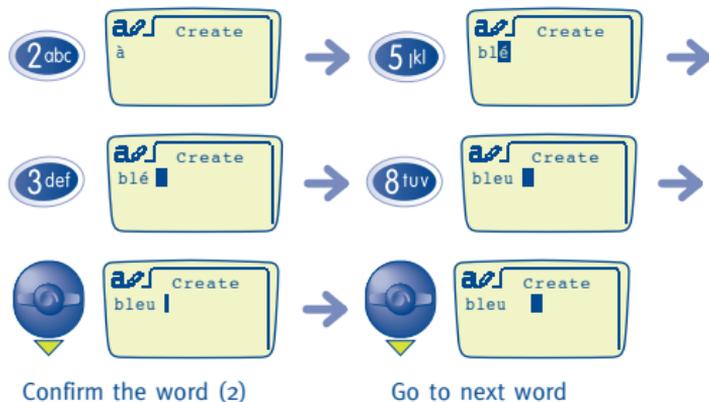


- (1) Depending on your phone model and language.
- (2) At this stage you can make grammatical agreements if they are not suggested (e.g. in this case add an “s” 4 successive keypresses on 7 to display “bleus” before going to the next word (cf. page 33).


The cursor shape depends on the selected entry mode:

- predictive mode ■
- normal mode |

While composing the message, you can use the  key to access the following options:

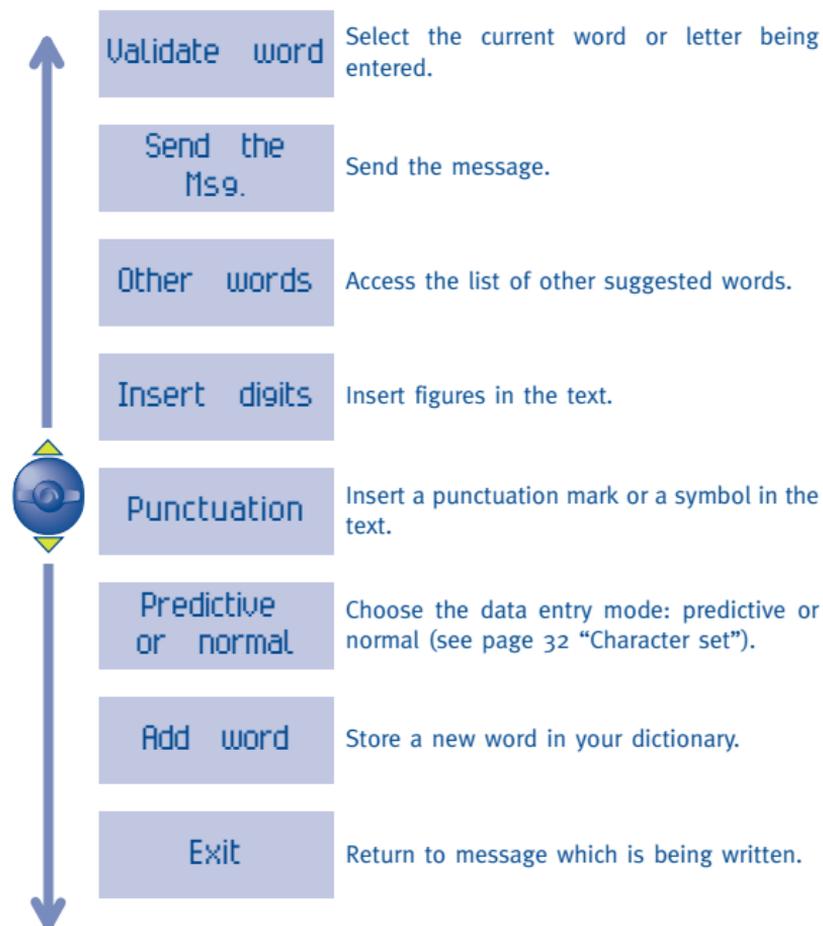

You can also use the following **shortcut keys**:

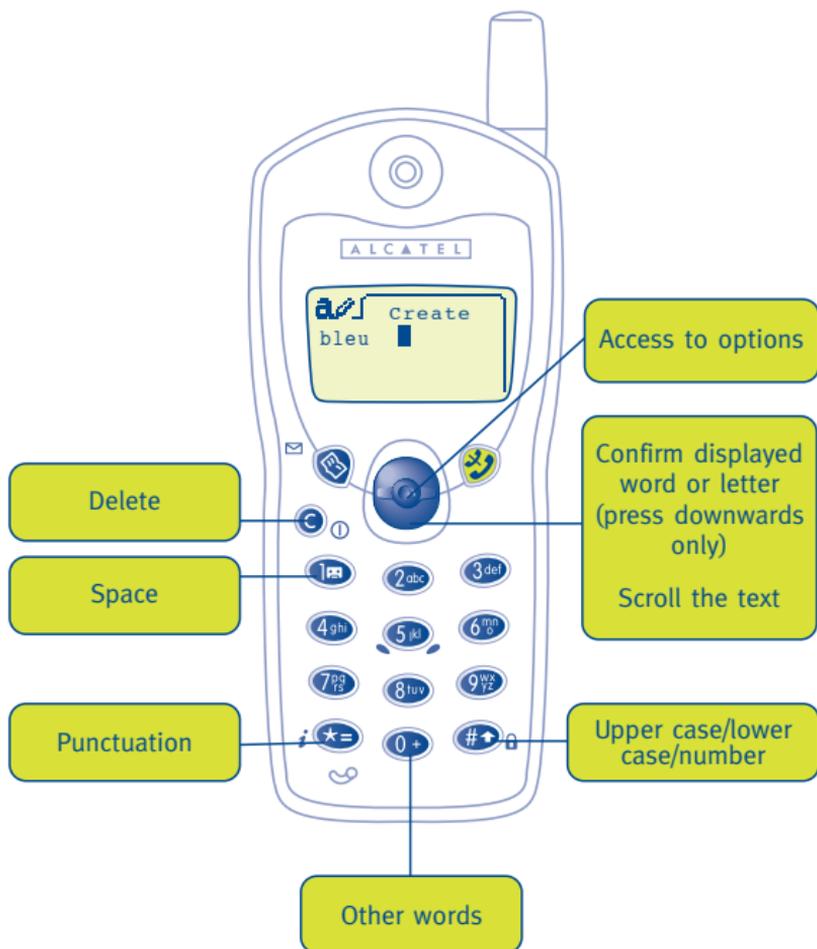


There is a dictionary in which you can add, modify or delete words. Add a word while composing a message by pressing the  key and selecting the **“Add word”** option.

● SUPPLEMENTING A CANNED MESSAGE:

You can:

- Use an existing canned message.
- Create your own canned messages.

From the list of canned messages, you can use the  key to access the following options:

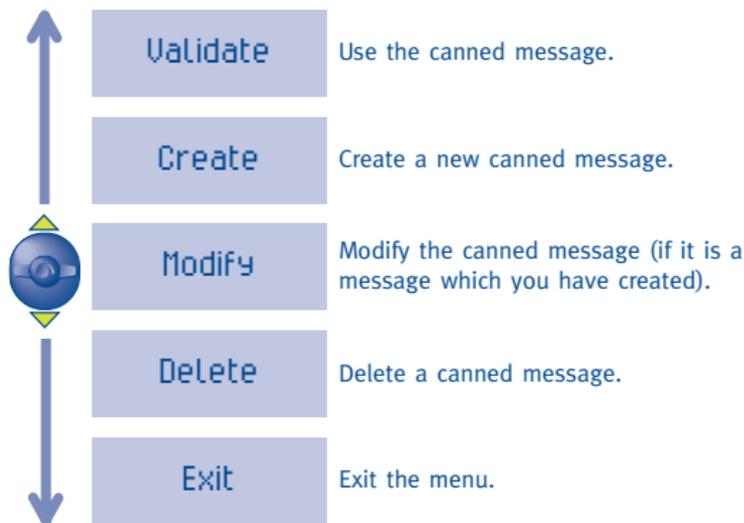

Press the  key (long keypress) to return to the standby screen.

CHARACTER SET

In normal data entry mode, you can access the following character set:

Key	Number of keypresses to get character											
	1	2	3	4	5	6	7	8	9	10	11	12
	␣	1	_	,	'	"	:	;	?	¿	!	
	A	B	C	2	Å	Ä	Æ	ç				
	D	E	F	3	É	Δ	Φ					
	G	H	I	4	Γ							
	J	K	L	5	Λ							
	M	N	O	6	Ñ	Ö	Ω	Ø				
	P	Q	R	S	7	Β	Π	Σ				
	T	U	V	8	Ü	θ						
	W	X	Y	Z	9	Ξ	Ψ					
	+	0	•	-	#	/	%	()	<	>	
	*	=	@	\	~	€	\$	£	¥	&	§	
	#	↑										

␣ : space.

To enter a word, press the key which corresponds to the desired letter several times until the letter you want appears.

8.1 - ACCESSING THE CALCULATOR

From the standby screen, you can access the calculator in two ways.

- Press the  key and select the “CALCULATOR” option.
- Enter a digit directly via the keypad, then press the  key and select the “CALCULATOR” option.

8.2 - CALCULATION EXAMPLE



To enter a decimal point (“.”), press the  key (long keypress). To return to the standby screen, press the  key (long keypress).

9 CURRENCY CONVERTER

Using the currency converter, you can:

- Convert a currency directly into euros and vice versa.
- Convert an amount into another currency (e.g. convert dollars to French francs).


9.1 - ACCESSING THE CURRENCY CONVERTER

From the standby screen, you can access the currency converter in two ways:

- A) Press the  key, then select the “**CONVERT**” option.
- B) Enter a digit via the keypad, then press the  key and select the “**CONVERT**” option.


9.2 - CONVERSION EXAMPLE

From the “**CONVERT**” option:

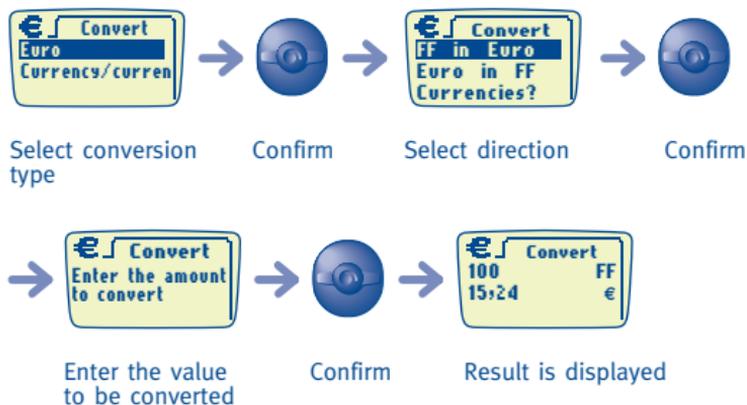

9.3 - SELECTING CURRENCIES

From the “**Currencies?**” option, access the currency table. From this table use the  key to access the following options:

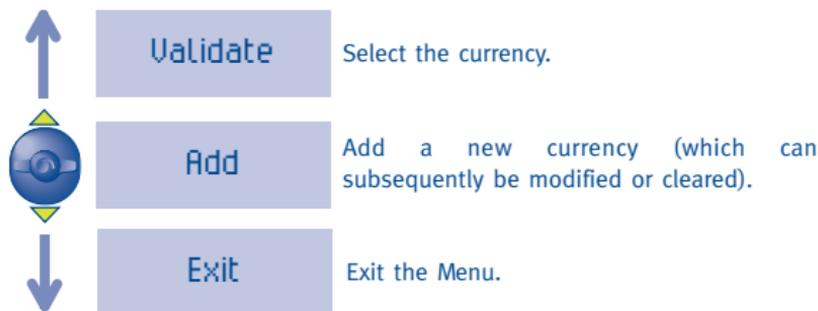

If you are in the euro converter:

Once the currency has been selected or created, you must enter the exchange rate of the currency in euros (or confirm it if it is already shown).

If you are in the currency converter:

Having selected or created the first currency, repeat the same operation for the second currency, then enter the rate for exchanging these 2 currencies.



To return to the standby screen, press the  key.

10 GAMES

There are 3 games:

● PUZZLE:

The aim is to redraw the original image as quickly as possible. To do this, move the squares by pressing the , ,  and  keys.

● MUSIC:

The aim is to reproduce the musical sequence played by your phone. To do this, press phone keys  to .


● SECRET:

The aim is to find the secret number combination generated by the phone. Once you have entered and confirmed your combination, you are given the following information:

- Correct numbers in the right place: ex.  2
- Correct numbers in the wrong place: ex.  3


10.1 - ACCESSING GAMES



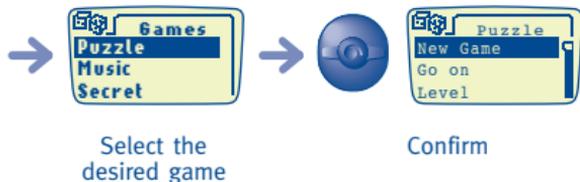

10.2 - OPTIONS

During a game, press the  key to access the following options:

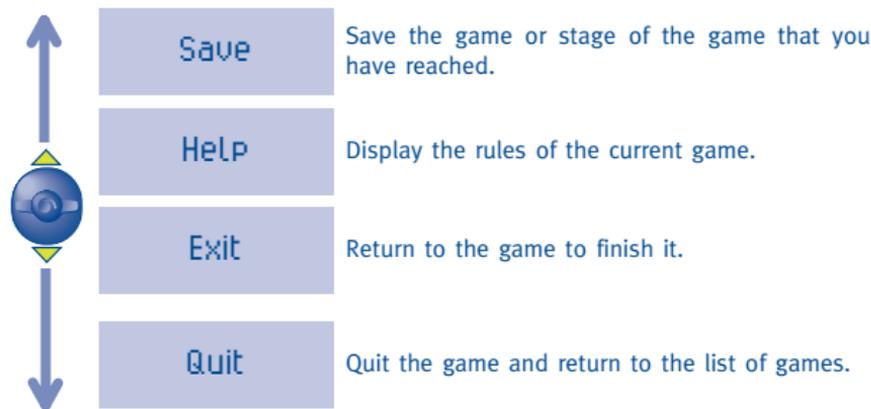

To return to the standby screen, press the  key (long keypress).

11

CREATING MELODIES

11.1 - ACCESSING THE "MELODY" MENU

From the **"Ring tones"** option, you can create two tunes which the phone plays (**"My melody"**).




Select the **"Melodies"** option

Select the **"My melody"** option

Select the **"Modify melody"** option


11.2 - COMPOSING A MELODY

To compose your melody, use the keypad as shown below:

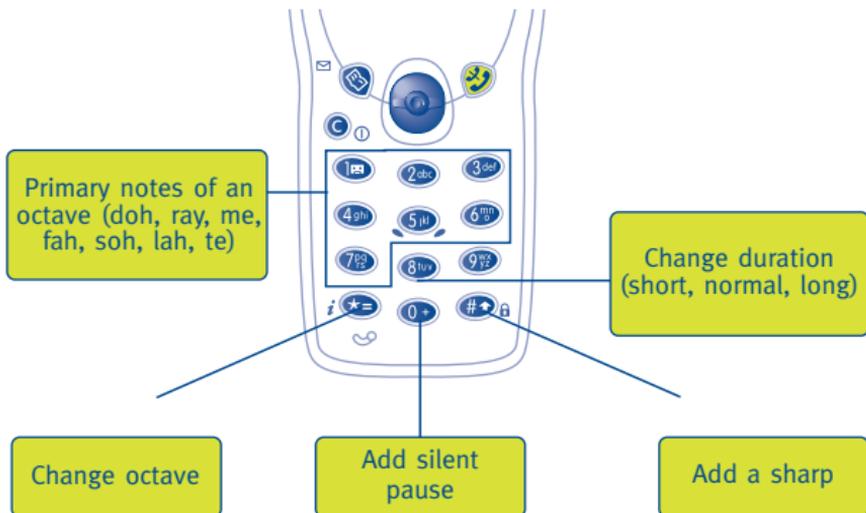

11.3 - OPTIONS

While you are composing your tune, use the  key to access the following options:

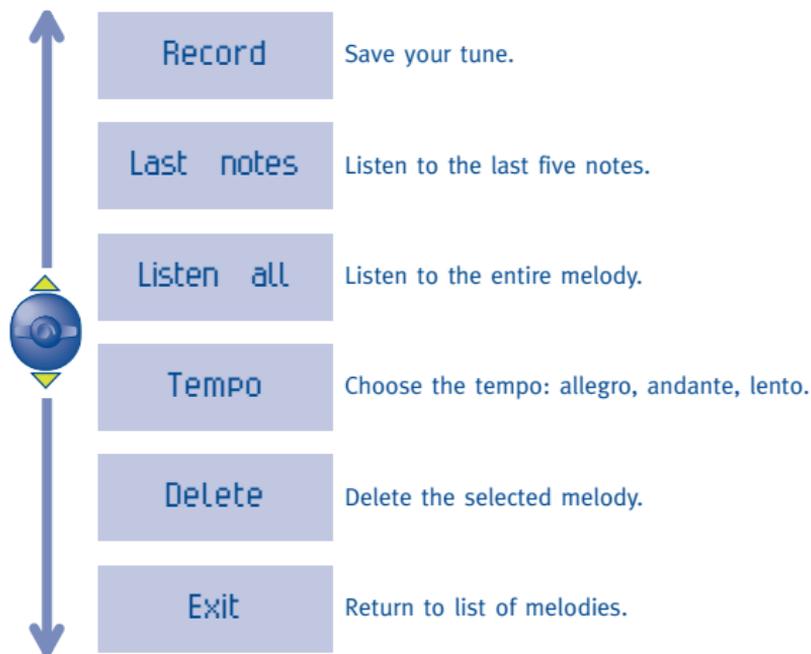

To return to the standby screen, press the  key (long keypress).

12 MOBILE INTERNET⁽¹⁾


12.1 - HOW TO ACCESS THE INTERNET SERVICES⁽²⁾

Access the internet services from the **standby screen** by pressing the  key, then select "**Services**" from the menu.



When you use the telephone for the first time, you'll be asked to enter your phone number using the international format.

12.2 - KEYPAD LAYOUT

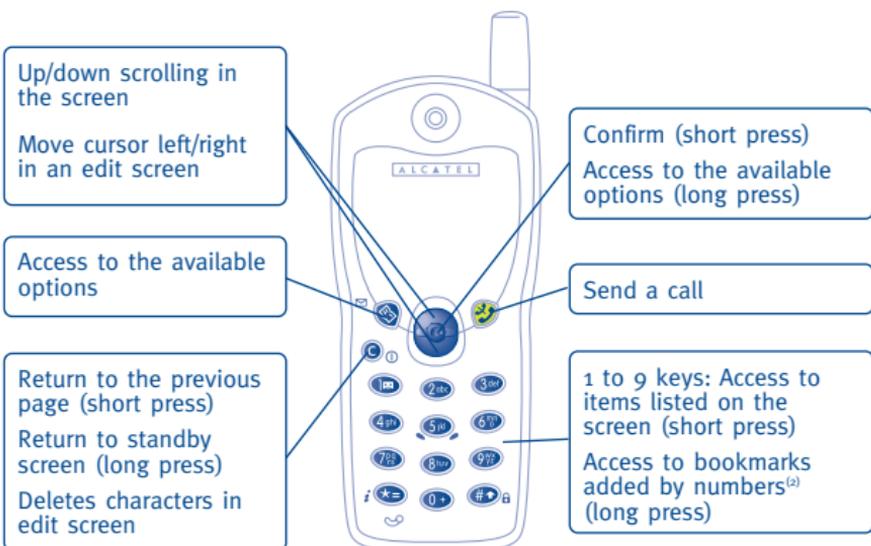

(1) Depending on the telephone.

(2) Available if provided by the network

12.3 - AVAILABLE OPTIONS

When you have accessed the Web pages, press  and the following options are available to you:

	...	Can be accessed from the current page.
	Help	Display on line help messages.
	Bookmark	The current page may be added to your bookmarks (1).
	Home page	Go back to the homepage directly.
	Alert List	Access a list of alerts (1).
	Connect. status	Display the icon bar during an internet session.
	Exit Internet	Stop viewing the services provided.
	Quit	Close the contextual menu and go back to the current page.

12.4 - INFORMATION LINE

This information line is displayed as soon as you are connected to the Net, or when you access a new page or when an alert is displayed.



One message is waiting in your mailbox

There is an incoming alert

The current connection is not encrypted

Access time

Animation for data transmission and reception

(1) Available if provided by the network

13 MENU


13.1 - CUSTOMISING YOUR MENU

You can make the options that you use most frequently more accessible (up to 9).

For example, if you want to place the **“Clock/Appointment”** option before the **“Audio”** option in the menu: select this option and press **1** (long keypress) to place it in first position.

The  icon appears after the **“Clock/Appointment”** option.

When you access the MENU again, it now looks as follows:

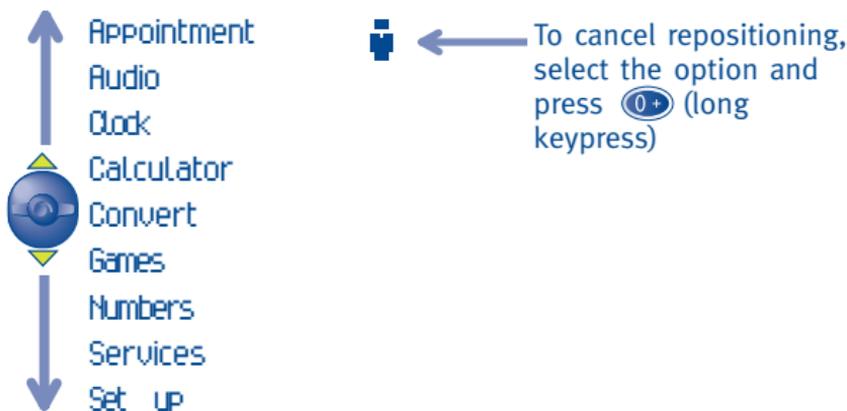

The procedure is the same to demote or promote **any other MENU option**: press **2** (long keypress) to place it in 2nd position, press **3** (long keypress) to place it in 3rd position, etc.

13.2 - AUDIO

MODE Depends on the model and the connected accessory:

Normal Normal ring tone (incremental).

Discreet Normal ring tone (incremental) preceded by vibrating system.

Vibrator No sound is emitted (ring tone, message or appointment beep, battery low) but the vibrating system is activated. The  icon is displayed.

Silent No sound is emitted and the vibrator is deactivated. The  icon is displayed.

RING TONE

Melodies Melodies (use  to select and press  to confirm).

Volume Volume of the ring tone (use the volume control key  to adjust it).

KEY BEEPS

Short press Activates/cancels the beep sound with every short keypress.

Long press Activates/cancels beep sound with every long keypress.

MESSAGE ALERT

Activates/cancels the beep indicating an incoming short message.

13.3 - CLOCK

TIME/DATE

Set the time and date of your phone.

APPOINTMENT

Scheduling an appointment (enter the date and time - confirm by  - enter the subject of the appointment - confirm by ) and confirm daily activation. As soon as this function is activated, the  icon is displayed. Only one appointment can be scheduled at a time. The alarm will sound whether the phone is on or off, pressing any key will switch the alarm off. When this option is activated, deactivation is automatically proposed.

FORMAT

Date and time display format.

UPDATE ⁽¹⁾

Depending on your phone model and the chosen option, the date and time of your phone will be updated by the network:

Automatic	Without any action on your part.
Manual	After you have accepted an update.
None	No updating is possible apart from updating produced by the “Clock/Time/Date” option.

(1) Check the availability of this service with your operator.

13.4 - NUMBERS

YOUR NUMBER

Display your telephone number, usually stored in the SIM card (enter the number - confirm by pressing ).


VOICEMAIL ⁽¹⁾

Voice mail number (enter the number - confirm by pressing ).

KEYPAD

Direct dial numbers: these numbers, once entered, can be dialled from the standby screen only by a long keypress on keys “2” to “9”.

If no numbers are stored:

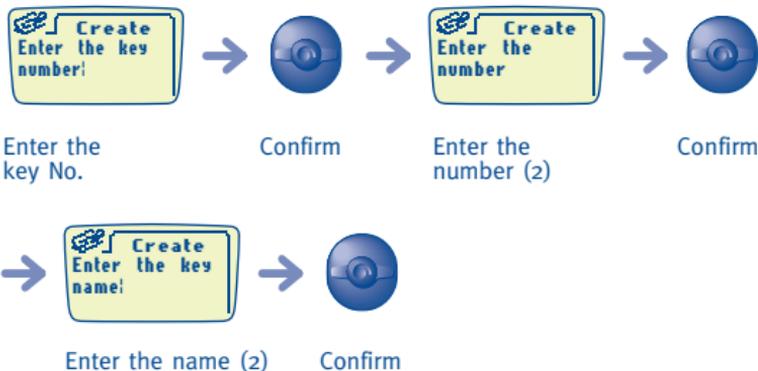

- (1) Contact your operator, if necessary, before first use.
- (2) If you make a mistake, you can erase a character by pressing the  key (short keypress).

If a number is stored:



PREFIX

Activates/cancels the prefix which will be added automatically in front of the phone number entered when making the call (enter the number - confirm by pressing ).

13.5 - SERVICES

SECURITY

PIN⁽¹⁾ Code Protection code for the SIM card, requested every time the phone is switched on if the code is activated.

Activ./Deactiv. Activate (or cancel) the code.

Change Update the code (4 to 8 digits).

PIN₂⁽¹⁾ Code Protection code for certain functions on the SIM card (Billing/Cost/FDN etc.) requested when functions are used if the code is activated.

(1) Contact your operator if necessary.

Change	Update the code (4 to 8 digits).
Network Code ⁽¹⁾	Password requested for the “ Call bars ” options associated with the network.
Menu Code	Protection code for certain MENU options (Services, Set up/Languages) requested when options are used <u>if</u> the code is activated.
Activ./Deactiv.	Activates (or cancels) the code.
Change	Update the code (4 to 8 digits).
Product Code	Phone protection code, requested every time the phone is switched on <u>if</u> the code is activated.
Activ./Deactiv.	Activates (or cancels) the code.
Change	Update the code (4 to 8 digits)

(1) Contact your operator if necessary.

BILLING

Duration	Management of call time.
Last call	Duration of the last call.
Avail.Duration	Remaining time available compared to the time under “Inclusive time” (for user’s information only).
Cumul. Duration	Total duration of calls made.
Inclusive time	Duration of subscription (enter the time - confirm by ).
Reset to zero	Reset (immediately or periodically) the total duration of calls made.
Beep duration	Activates/cancels the beep which sounds during a call at an interval set by the user (enter the interval - confirm by ).
Expense ⁽¹⁾	Management of call charges.
Last call	Cost of the last charged call.
Credit ⁽¹⁾	Remaining credit compared to “Set Credit” .
Cumulative cost	Total cost of charged calls.
Set Credit ⁽¹⁾	Maximum credit beyond which all charged calls are barred (enter credit - confirm by ).
Reset to zero	Reset the total cost of charged calls.

(1) Check the availability of this service with your operator.

Unit value Cost of one telecom unit in the chosen currency (select the “Other?” option for another currency and press the  key to enter a decimal point).

CALL FORWARD ⁽¹⁾

Activates/cancels call forwarding to a specified number (enter the number - confirm by ). This option applies in the following cases:

- | | |
|--------------------|--|
| All calls | All your calls are forwarded. The  icon is displayed. |
| Conditional | Calls are forwarded if the line is busy, the call isn't answered or the phone is out of range of the network. |
| If busy | Calls are forwarded only if your line is busy. |
| No reply | Calls are forwarded only if the call isn't answered. |
| Unreachable | Only if the phone is out of range of the network. |
| Data | Data calls are forwarded to the specified number. |
| Fax | Fax calls are forwarded to the specified number. |
| Activated | List of call forwarding operations activated from this phone. |
| Cancel All | Cancels all activated call forwarding. |

(1) Check the availability of this service with your operator.

CALLS

Answer	Used to choose the way in which a call is answered.
Auto. Answer	Automatically (no keypress) after approximately 2 rings (this option is only available if your phone is connected to an audio accessory (HF kits), cf. pages 60-61.
Key 	Only after pressing the  key.
Any key	After pressing any key on the keypad (1 to #).
Call wait ⁽¹⁾	Activates/cancels signalling of a second incoming call by a beep.
Conceal ID ⁽¹⁾ (CLIR)	Activates/cancels the option which makes your calls anonymous (your number is no longer provided to recipients).
Caller ID ⁽¹⁾ (CLIP)	Activates/cancels presentation of the caller's number (or name if it is stored in the directory) with every call.

Auto redial⁽¹⁾

Activ./Deactiv. Activates/cancels automatic call back if the first call was unsuccessful.

Forbidden num. List of numbers where automatic call back was unsuccessful (10 unsuccessful attempts).

Reset to 0 Reset the black list.

CALL BARS

Outgoing Activates/cancels call barring. This option is applicable in the following cases:

Except Dir Calls to a number not stored in the phone's directory are barred.

All ⁽²⁾ All outgoing calls are barred.

International ⁽²⁾ Outgoing international calls are barred.

Except-→Home ⁽²⁾ Outgoing calls except those to the subscription country are barred.

(1) Depending on your phone model.

(2) Check the availability of this service with your operator.

Except FDN ⁽¹⁾	Filter outgoing calls compared to a specific “FDN” directory stored in the SIM card.
Activate/ Deactivate	All calls which do not start with numbers stored in the “FDN” directory are barred.
Change	If the “Exc. FDN” option is activated, you can update the “FDN” directory after entering the PIN2 code (update “FDN” directory by ).
Incoming	Activates/cancels incoming call barring. This option is applicable in the following cases:
Except Dir.	<u>All</u> calls from a number not stored in the phone’s directory are barred.
All ⁽¹⁾	<u>All</u> incoming calls are barred.
If abroad ⁽¹⁾	Incoming calls are barred if you are abroad.
Activated	List of call barring operations activated.

(1) Check the availability of this service with your operator.

NETWORKS

SMS CB ⁽¹⁾	Messages broadcast over the network (weather, traffic, etc.) are automatically displayed on the standby screen.
CB codes list	List of network codes used to monitor the broadcast messages.
Reception	Depending on the selected option, the phone displays broadcast messages.
Full:	The phone permanently scans the network and displays received messages in accordance with your list (see “CB list” option).
Limited:	Phone intermittently scans the network and displays certain messages in accordance with your list (see “CB list” option).
None:	The phone receives no message.
Searching	Search for a home network.
Available	Networks available in the radio environment.
Search Mode	Depending on the selected option, search mode is:
Automatic:	First searched network is the last one used.
Manual:	User chooses the home network.

(1) Check the availability of this service with your operator.

Preferred	List of networks for priority connection (update this list by ).
Forbidden	List of forbidden networks (update the list by ).

13.6 - SET UP

LANGUAGES ⁽¹⁾

Message display language (use  to select it). **“Automatic”** option selects the language which corresponds to the subscription network (if available in the terminal).

DICTIONARY

There is a dictionary to which you can add your own words to those in the data entry help system. When you consult your dictionary you can add, modify or delete words using the options available when using the  key.

WELCOME MSG. ⁽¹⁾

A welcome message is displayed every time the phone is switched on: up to 4 lines of text are available for this message (see Character set, page 32).

(1) Option is available depending on your phone model.

DISPLAY

- Backlight** Backlighting intensity (use  to adjust it): we recommend minimum intensity in order to save battery power.
- Contrast** Contrast of the display (use  to adjust it).

BATT.SAVE

- Power off** When this option is activated, the phone is automatically switched off if it is not used for a certain period of time (no keypress, no calls, no incoming message) chosen by the user (enter the duration - confirm by ).
- Keypad lock** When this option is activated, the keypad will be automatically locked (if you are not going to use your phone for a prolonged period of time).

14 WARRANTY

14.1 WARRANTY

Congratulations for choosing this mobile phone - we hope that this product will satisfy all your needs.

Notwithstanding any other applicable statutory warranties, this mobile phone (and the battery charger) are guaranteed for parts and workmanship for a period of ONE (1) year from the date of purchase shown on your invoice.

Nevertheless, if the statutory warranty in force in your country exceeds one (1) year, the statutory warranty will apply in place of the manufacturer's warranty.

Under the terms of this warranty, you must inform your dealer or any maintenance centre (see list of maintenance centres at our website - www.alcatel.com) without delay of any defect and present the invoice given to you at the time of purchase.

The manufacturer or dealer reserves the right to deny service under this warranty in respect of any equipment on which markings or serial numbers have been removed or altered.

The dealer will decide whether to replace or repair, as appropriate, all or any part of the equipment found to be defective. This warranty covers the cost of parts and labour but excludes any other costs.

Servicing under the terms of this warranty, especially repair, modification or replacement of parts shall not extend the warranty period unless there are statutory provisions to the contrary. Repair or replacement may be carried out using reconditioned components offering equivalent functionality. All defective parts replaced under the terms of this warranty will become the manufacturer's property.

This warranty shall not apply to damage or defects caused by:

- Misuse or improper use, including but not exhaustively (a) use of the equipment for a purpose other than that for which it was designed or not in conformity with the manufacturer's or dealer's instructions regarding the use and maintenance of the equipment and (b) installation or use of the equipment not in conformity with applicable technical and safety standards in the country where the equipment is used;
- Accidents, force majeure or any other external cause outside the equipment, especially the consequences of theft, acts of vandalism, lightning, fire, humidity, ingress of liquid, atmospheric influences, RF interference produced by other equipment, fluctuations in mains voltage and/or voltages on telephone lines, etc.;
- Combination or integration of the equipment in hardware not supplied by the manufacturer or dealer unless the latter gave written, explicit consent for such;
- Defects and deterioration caused by normal wear;
- Modifications or alterations made to the equipment even if they are mandatory due to changes in regulations and/or modification of network parameters;
- Connection faults resulting from unsatisfactory radio propagation or caused by the absence of radio relay coverage.

Apart from the statutory warranty, the above provisions constitute the only claims which can be made against the manufacturer and dealer on the grounds of equipment defects, this warranty excluding any other explicit or implied warranty associated with sale of the equipment.

14.2 INFORMATION

- Web site: www.alcatel.com
- Alcatel hotline No.: see “Alcatel Services” leaflet (calls charged at applicable local rate in your country).

Your telephone is designed to emit and receive calls. It operates on GSM networks with 900 MHz and 1800 MHz bands.

Guarantee for batteries and accessories other than battery charger

Notwithstanding any other applicable statutory warranty, the battery of your phone and accessories other than the battery charger are guaranteed for a period of 3 months from the date of purchase shown on your invoice. Nevertheless, if the statutory warranty in force in your country exceeds 3 months, the statutory warranty will apply in place of the manufacturer’s warranty.

In case of defect, return the battery to your dealer for replacement.

This warranty shall not, however, apply in the case of use not conforming with the instructions in the User’s Guide, damage due to external causes or repairs or modifications carried out by parties not authorised by the manufacturer or dealer.

Unless there are statutory provisions to the contrary, batteries and accessories that are replaced under the terms of this warranty shall not be covered by any specific warranty extending beyond the initial warranty period.

The CE mark indicates that your telephone and battery comply with applicable EC directives, namely:

- directive 73/23/EEC (electrical safety)
- directive 89/336/EEC (electromagnetic compatibility)
- directive 1999/5/EEC (R&TTE)

15 ACCESSORIES

New Alcatel GSM phones have a handsfree feature so that you can hear and talk using the phone when it is located a certain distance away from you, e.g. placed on a desk. For those who wish to maintain the privacy of their conversations, a combined earphone and microphone is available as an accessory: the headset.




Headset
M 11



**Cigar lighter
charger**
C 51



**NiMH
battery**
B 50

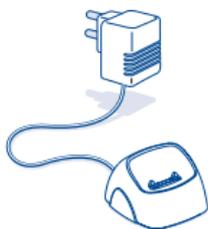

**Mini desktop
charger**
C 53



**Belt
clip**
BC 10B



**Carrying
case**
HC 24



**Basic
car kit
MP 73**



**Easy-to-install
HF car kit
MP 75**



**Antenna
cable
A 1**



**Antenna
kit
A 2**



Buy on line: www.alcatel.fr




Changeable front(*) FB or FC(*)

Fitting the front




Insert the top of the
front case

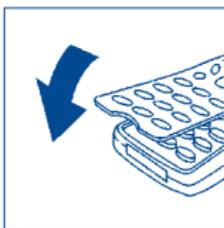

Fit the bottom of
the front case

Removing the front

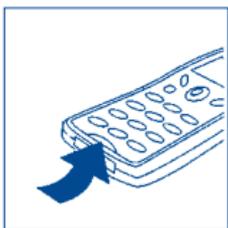

Remove the front case from
the bottom of the phone

(*) Depending on model

©1999. All rights reserved.

ALCATEL reserves the right, in customer's interest, to alter material or technical specifications without prior notice

3DS06962AAAA 01

www.alcatel.com

ALCATEL