

ONE TOUCH 511



ALCATEL

CONTENTS

Safety and precautions	p. 4
Information	p. 7
1. Your telephone	p. 8
1.1 Keys	p. 9
1.2 Icons	p. 10
1.3 Conventions used in this User's Guide	p. 11
2. Getting started	p. 12
2.1 SIM card and battery	p. 12
2.2 Switching your phone on	p. 14
2.3 Switching your phone off	p. 15
3. Calls	p. 16
3.1 Making a call	p. 16
3.2 Call your voice mail	p. 17
3.3 Receiving a call	p. 17
3.4 During the call	p. 18
4. Call memory	p. 22
4.1 Accessing and calling back	p. 22
4.2 Available options	p. 23
5. MENU	p. 24
6. Events	p. 27
7. Directory	p. 29
7.1 Accessing your directory	p. 29
7.2 Creating a file	p. 31
7.3 Available options	p. 33
7.4 Assigning a file to a family	p. 34

7.5	Using voice recognition	p. 34
7.6	Assigning a ring tone to a family	p. 36
7.7	Temporary SIM card	p. 36
8. Vibrator		p. 37
8.1	Activating / deactivating the vibrator	p. 37
9. Messages		p. 38
9.1	Accessing messages	p. 38
9.2	Reading your messages	p. 39
9.3	Composing a message	p. 43
9.4	Icons, sounds, smileys	p. 44
9.5	Data entry system	p. 45
9.6	Sending a message	p. 49
10. My setup		p. 50
10.1	Sounds	p. 50
10.2	Main screen	p. 55
10.3	Information	p. 55
10.4	Zoom	p. 56
10.5	Switch ON/OFF screens	p. 57
10.6	Numbers	p. 57
11. Alarms		p. 59
11.1	Wake up	p. 59
11.2	Appointments	p. 60
11.3	Birthdays	p. 60
11.4	Options	p. 60
12. Memo		p. 61
12.1	Recording a voice memo	p. 61
12.2	Using a voice memo	p. 62

13. FM Radio		p. 63
13.1	Switching on the FM radio	p. 63
13.2	Available options	p. 64
13.3	Listening to the radio	p. 64
13.4	Searching for a radio station	p. 65
13.5	Pre-setting a radio station	p. 66
13.6	An incoming call	p. 66
14. Calculator/converter		p. 67
14.1	Calculator	p. 67
14.2	Convert	p. 68
14.3	Currency selection	p. 69
15. Setup		p. 71
15.1	Services	p. 71
15.2	Clock	p. 79
15.3	Languages	p. 79
15.4	Dictionary	p. 80
15.5	Display	p. 80
15.6	Automatic call pick up	p. 80
15.7	Automatic power off	p. 81
15.8	Keypad lock	p. 81
16. WAP		p. 82
16.1	Accessing Mobile Internet Services	p. 82
16.2	Available options	p. 83
16.3	Setting up your access	p. 84
17. Games		p. 86
18. Warranty		p. 89
19. Accessories		p. 92

SAFETY AND PRECAUTIONS

We recommend that you read this chapter carefully before use. The manufacturer disclaims any liability for damage which may result as a consequence of improper use or use contrary to the instructions contained herein.

• CONDITIONS OF USE:

Switch the phone off before boarding an aircraft. Use could lead to legal action against the user. Switch the phone off when in health care facilities except in areas specified. Like many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices in their proximity. Persons with a medical device (such as a pacemaker, hearing aid, insulin pump) should not carry the phone in a place close to the device. When placing or receiving a call, persons with a pacemaker or hearing aid should hold the telephone against the ear on the opposite side to the device if any.

Switch your phone off when near gas or flammable liquids. Strictly obey all signs and instructions when in a fuel depot or chemical plant, at a refuelling point (service station) or in any potentially explosive atmosphere. Do not let small children use the phone without supervision. Do not attempt to open or repair it yourself. Use only the batteries, battery chargers and accessories approved by the manufacturer. The manufacturer disclaims any liability for damage caused by use of other batteries, chargers or accessories. Do not expose the phone to unfavourable environmental conditions (humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -20 °C to +40 °C. Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

• BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off.

Battery use precautions are: Do not attempt to open the battery (chemical substances may cause burns). Do not pierce nor cause a short-circuit in a battery. Do not burn or dispose of a used battery in household waste or store it at temperatures above 60 °C. Batteries must be disposed of in accordance with locally applicable environmental legislation. Batteries should not be used for other purpose than the one they are designed for. Never use damaged batteries.

• TRAFFIC SAFETY:

Remember to always check whether local legislation allows operation of a mobile phone while driving a vehicle. When it is said that the use of mobile phones while driving a vehicle is a risk factor, we strongly recommend that you park the car before using the phone. However if you intend to use your phone while driving, you must use it connected to the Alcatel Car Kit accessory.

Your mobile phone when powered emits radiation likely to interfere with the vehicle electronic systems such as anti-lock brakes (ABS, airbag). Consequently, you should:

- avoid placing the phone on the dashboard.
- connect imperatively the phone to an external antenna. The antenna should be mounted and located away from the driver and passengers or separated from them by a metal screen (e.g. the car roof).
- check with the car manufacturer that the dashboard is adequately shielded from mobile phone RF energy.

• ELECTRONIC WAVES:

THIS MOBILE PHONE COMPLIES WITH EUROPEAN REQUIREMENTS ON ELECTROMAGNETIC WAVES.

Validation of conformity with European directive 1995/5/EC (R&TTE) is a requirement prior to launching any mobile phone model on the market. Protection of public health and safety, in particular the mobile phone user's is the main aspect in this directive.

Your mobile phone is a radio transceiver. It has been designed to operate under certain thresholds of exposure to Radio frequencies (RF) recommended by the European Union Council (1) for people and users. They were established by independent expert groups based on scientific evaluations which are carried out regularly and in detail. These limits allow for significant safety margin in order to ensure everyone's security whatever his or her age or health condition.

Standard of exposure for mobile phones is determined by a measurement standard called Specific Absorption Rate (SAR). The SAR limit recommended by the European Union Council is 2.0 w/kg (2). Testing has been performed on telephones emitting at maximal strength level for all frequency bandwidths, on the basis of standard using modes as defined by the current specifications. Although the SAR is tested at the highest strength possible, the actual SAR level in a mobile phone in current use is normally way below the maximum values obtained during the tests. Your mobile phone is designed to operate at a level of strength strictly necessary to allow for its connection to the network. In principle, the closer you are to a base station antenna, the lower the mobile phone's SAR strength level. Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

(1) EC Recommendation 1999/519/EC

(2) SAR limit on mobile phones in general is 2.0 watts/kg at average for 10 g of human tissue. The limit includes a significant safety margin to increase the user's protection and take into account measurements variation.

INFORMATION

- Web site: www.alcatel.com
- Wap address: wap.alcatel.com
- Alcatel hotline No.: see "Alcatel Services" leaflet (calls charged at applicable local rate in your country).

Your telephone is designed to emit and receive calls. It operates on GSM networks with 900 MHz and 1800 MHz bands.

The **CE 0165** mark indicates that your telephone complies with EC directive 1999/5/EC (R&TTE) and the accessories with applicable EC directives. The entire copy of the Declaration of Conformity for your telephone can be obtained on Alcatel website www.alcatel.com.

1

YOUR TELEPHONE



- ! (1) Depending on your phone model.
- (2) Depending on the accessory in use.

1.1 Keys

- Delete (short keypress).
Return to previous screen (long keypress).
- Switch phone ON/OFF** (long keypress).
- Access the MENU / Directory / Short messages,
Confirm an option.
- Volume control during a call.
Scroll to select an option.
Switch to a different pre-set FM station (2).
Access the directory (1) (keypress downwards).
Access the messages (1) (keypress upwards).
- Answer/Hang up**
Access call memory (Redial).
Use the voice recognition functions (long keypress).
- Access your voice mail (long keypress).
- Switch ON/OFF the backlighting** (long keypress).
Access Internet services (WAP) (long keypress) (1).
- Lock keypad (long keypress).
Enter upper/ lower case letters, digits, punctuations.
- Activate / deactivate the vibrator (long keypress)(1).

- ! (1) Depending on your phone model.
- (2) Depending on the accessory in use.

1.2 Icons (I)



Battery charge level.



Vibrator mode: your telephone vibrates but emits no ring tone nor beep. (See page 52)



Silent mode: your telephone emits no ring tone, no beep and does not vibrate. (See page 52)



Events (Consult information): You can access your voice mail where all unanswered calls, unread short messages, unlistened voice memos are gathered. (See page 27)



Short message list is full: your terminal cannot store any more messages. You must access the short message list and delete at least one message. (See page 39)



Forward: your calls are forwarded. (See page 74)



Appointments, birthdays and anniversaries, or wake-up. (See page 59)



Signal strength indicator.



(I) Icons and other illustrations shown in this User's Guide are for information only.



Preferred tariff area.(I)



Keypad locked.



“Manual Network Search” mode. (See page 79)



Roaming within your subscription country.

1.3 Conventions used in this User's Guide

The following symbols are used in the text which follows:



Briefly press the scroll key in its centre in order to confirm an option.



Move the scroll key up or down in order to select an option.



Use the keypad keys to enter digits, letters, and punctuations.



(I) Check the availability of this service with your operator.

2

GETTING STARTED


2.1 SIM card and battery

Inserting and removing the SIM card

You must insert a SIM card in order to use your phone.



Fit SIM card with chip facing downwards

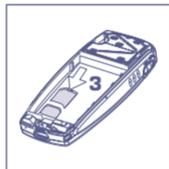

Slide the SIM card into its compartment. Check that it is properly inserted



Push the SIM card with your finger to release it

Fitting the battery



Insert the battery




Close the battery as shown



Click into place


Charging the battery

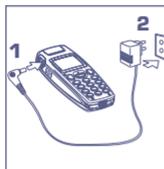

Connect the battery charger



The on-screen indicator stops flashing when charging is over

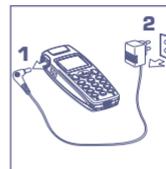

Disconnect the battery charger once charging is complete

- A beep will sound when charging begins.
- The charging indicator icon may take several minutes to start to flash.
- The mains socket outlet must be close to the phone and easily accessible.
- Avoid using excessive force when connecting the battery charger to the telephone.



When you first use your phone you must charge the battery for approximately 3 hours.

Removing the battery



Push and lift



Remove the battery

2.2 Switching your phone on



Switch your phone on (long keypress)



Enter your PIN code |



Confirm |



Main screen

If you do not know your PIN code, please contact your network operator.

Do not leave your PIN code near your phone and store your card in a safe place when you are not using it.

You are prompted to enter the time and date, enter new data if necessary, then confirm by .

If cell broadcast messages are displayed, use the  key to browse through them in full or press the  key to return to the main screen.

While the phone is searching for a network, <<<->>> is displayed. (??-?? is displayed if your SIM card is rejected by the network, in this case please contact your operator).

2.3 Switching your phone off

From the main screen, press the  key (long keypress).

3

CALLS

3.1 Making a call



bla,bla,bla
bla,bla



Dial the number | Make the call | Talk | Hang up

If you make a mistake, you can delete digits by pressing the key.

 


To enter characters "+" or "P" (pause), make a long keypress on the key (the following characters scroll: 0, +, o, P).

Making an emergency call

If your telephone is within the area covered by a network, to make an emergency call, dial 112 or any other number provided by your operator.

Making an international call



Display the "+" prefix (long keypress) | Display the list of countries | Select the country | Confirm

Once the country code is displayed, dial the rest of the number and make the call.

3.2 Call your voice mail

The network provides voice mail service to ensure that you do not miss any calls; it works like an answering machine which you can interrogate at any time.



Access your voice mail (long keypress) | Make the call



To use your voice mail abroad, contact your operator before leaving.

If your operator's voice mail access number is not shown, dial the number that was supplied to you with your subscription. To later modify this number, use the "Numbers" MENU option, page 57.

3.3 Receiving a call



bla,bla,bla
bla,bla



Incoming call | Take the call | Talk | Hang up

If the  icon is displayed, the vibrating system is enabled and no ring tone is heard.

If the  icon is displayed, the vibrator and ring tone are both deactivated.

! The caller's number is displayed if it is provided by the network (check the availability of this service with your operator).

Switching the ring tone off (without losing the call!)

Press the  key while the phone is ringing; you can still answer the call by pressing the  key.

Pressing the  key again rejects the call.

3.4 During the call

! During a call, you can use the  key to adjust the volume.

During a call, you can use the  key to access the following options:

	Volume	Increase or decrease the sound level
	Handsfree	Activate/deactivate handsfree mode (the  symbol is then replaced by )
		Caution: move the handset away from your ear before activating this mode because the amplified volume could cause hearing damage
	Hold call (1)	Place an ongoing call on hold (you can later resume the call by pressing the )
	Dial	Make a second call (an ongoing call will be automatically put on hold and you can switch between calls by pressing the )
	Save Number	Store a phone number in the directory
	Directory	Access the directory
	Messages	Read your messages
	Services (1)	Access the services supported by your network operator
	Back	Return to the previous screen

! (1) Check the availability of this service with your operator.

Handling a second incoming call (1)

You already have a call and a second call comes in:

If you accept the new call, the ongoing call is automatically put on hold; you can then switch between the calls by pressing the  key and then the  key.

To refuse the second call, press the  key twice.



Conference calls (1)

Your telephone allows you to converse with several persons at the same time.

 (1) Check the availability of this service with your operator.



The conference starts |

• A third call comes in



Pressing on the  key hangs up the communication you had with the caller you have selected.

To end the conference call, click on the  key and select the "End Conf. Call" option.

4

CALL MEMORY

4.1 Accessing and calling back




Each call is identified by one of the following symbols:

-  Answered incoming call
-  Unanswered incoming call
-  Outgoing call

 The caller's number is displayed if it was transmitted by the network (check the availability of this service with your operator).

4.2 Available options

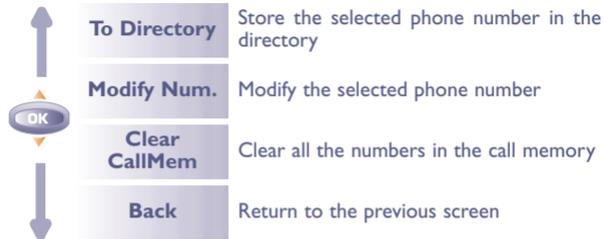

 To return to the main screen, press the  key (long keypress).

5


MENU

From the main screen, press the  key to go to the MENU.



! Direct access to the MENU depends on your operator and on the SIM card which you are using.

Choosing a MENU function

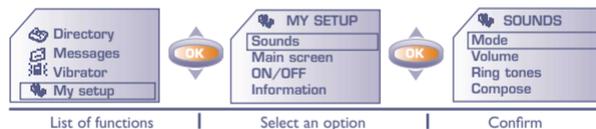

Return to the screen:

Previous screen: Press  (short press).

Main screen: Press  (long press).

Organisation of functions

For each of the listed functions, refer to the appropriate chapter in this User's Guide.



Directory:

Access / store and make calls from your directory.



Vibrator:

Activate / deactivate the vibrator when you don't want to be disturbed.



Messages (SMS):

Read, write and send your short messages.



My setup:

Customise your ring tones, icons, switch ON/OFF screens, your direct dial numbers, your keypad and prefixes.



Alarms:

Set your telephone's alarms (appointments, birthdays, anniversaries, wake-up, etc.).



Memo:

Record and listen to voice messages.



FM Radio (1) :

Listen to the radio and pre-set your FM stations.



Games:

Play games on your telephone.



Calculator/Converter:

Perform basic calculations and currency conversions (Euros, etc.).



Setup:

Set up your telephone (displays, formats, etc.) and take advantage of the features provided by your operator (security, call forwarding, etc.).



Events:

Access your voice mail, unanswered incoming calls, unread short messages, voice memos, and information received in the handset as well as WAP notifications (1).

You can customise your MENU by changing the order of the options, for example, you can choose to display **“Messages”** after **“Directory”**. Select this option, make a long keypress on the **(1)** key to place it in the first position, on **(2)** to place it in the second position...

To cancel, make a long keypress on the **(0)** key.




- (1) Depending on the accessory in use.
- (2) Depending on your model, the language and availability of this service with your operator.

6

EVENTS

You can access all of the events which occurred on your telephone in your absence and which you have not yet accessed.

Voice messages which you have not yet listened to, unread short messages, unanswered incoming calls and voice memos are gathered under this icon.

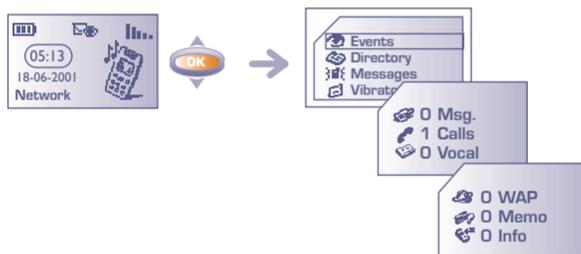

**Short messages (Msg.):**

Access unread short messages. (See page 38).

**Unanswered incoming calls (Calls):**

Display the numbers of callers who tried to reach you in your absence. (See page 22)

**Voice mail (Vocal):**

Call your voice mailbox to listen to your new voice messages. See page 17.

**Notifications (WAP) (I) :**

Access the WAP notifications you received.

**Voice memos (Memo):**

Listen to the voice memos you recorded. (See page 62).

**Information received (Info):**

Access the received information you have downloaded.



(I) Check the availability of this service with your operator.

7

DIRECTORY

7.1

Accessing your directory

- Press the  key to access the directory from the main screen.(I)
- Or using the MENU (see page 24),access the directory by pressing the  key.



To search for the name you are looking for.



(I) Depending on your phone model.

Searching for a name by its first letter

You can also search for the name of the person you wish to contact by pressing the key associated with the first letter of his/her name.

Example: press the **2abc** key twice to find the first name beginning with "B", then scroll the list to the name you are looking for using the



Calling from the directory

You can assign 3 different numbers to the same name: home, mobile, office. (See page 31) If you want to call a party who has several numbers, first you must choose the number you wish in the list.




Choose the appropriate number


Displaying a phone number



7.2 Creating a file

From the list of names in your directory, press the **OK** key to create a file.

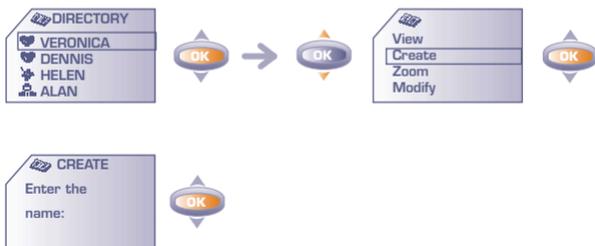

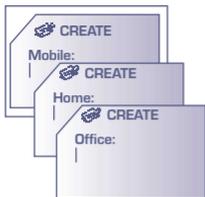

You can save the information you have entered at any time by pressing the  key and by choosing "Save".

 
 
 If you use your telephone abroad, store the numbers in the directory in the international format with the "+" prefix (see page 16).

The files you create are organized in alphabetical order. It is also possible to organize them by family: Private , Profession. , and Others  (see page 34).

 You don't have to fill in all the information, but at least one number must be entered for each name.
The directory's capacity depends on the operator.

7.3 Available options

From the list of names in your directory, you can access the following options by pressing the  key:

	View	Display the contents of each file
	Create	Create a file
	Zoom	Change the character size
	Modify	Modify the file contents
	Alphabetical/ By family	Display files by family: Private, Professional, Others, None
	Delete	Delete the selected file
	Classify	Classify the selected file in the appropriate family
	Ring tones	Assign a melody to a family
	Voice reco.	Record a voice recognition command for a file
	File number	Change the file number
	Back to list	Return to the previous screen


7.4 Assigning a file to a family

To differentiate your files, you can classify them in groups called "families": Private , Profession. , Others , or None. A different ring tone can be assigned to each family. This classification will allow you to easily distinguish a professional call from a private call. It is possible to screen incoming calls by family (see page 76).

7.5 Using voice recognition

Recording a voice recognition command

Select a contact from the directory for which you would like to record a voice recognition command.

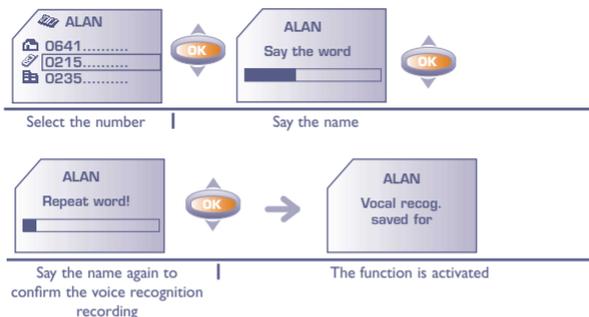

Contacts for which you have stored a voice recognition command are identified by the  icon. Fifty names can be accessed by using the voice recognition function.

Using the voice recognition command

From the main screen



Say the name of the person to be called.

Long keypress

7.6 Assigning a ring tone to a family

When you receive a call from a contact classified in a particular family, the ring tone for the incoming call will be the one assigned to that family. An icon is also assigned to each of the family, allowing you to easily recognize your caller's family.

7.7 Temporary SIM card

When you create a file, you can include 3 different numbers (Home, Office, Mobile).

If you change SIM cards, an informational message will be displayed when the telephone is switched on. You must then decide if this card will become your new SIM card or if it is being inserted temporarily:

- If the SIM card is to become your main card, you can modify your directory as you wish. If you reinsert your old SIM card, you will no longer find the 3 numbers that were formerly associated with the same name on that card.
- If the SIM card is being inserted temporarily, you will not be authorized to create files including 3 numbers. If you then reinsert the first card (your main card), you will find all the information it originally contained.

8

VIBRATOR

You can enable the vibrator in public places (such as restaurants, museums, etc.) allowing you to keep your telephone switched on while remaining as discreet as possible. When you receive a call, your telephone will vibrate instead of ringing or beeping.

8.1 Activating / deactivating the vibrator

- By pressing (long keypress) the **5** key from the main screen (1).
- Or by pressing the **OK** key from the MENU (see page 24).




(1) Depending on your product.

9

MESSAGES (1)

9.1 Accessing messages

- Make a keypress on the  key from the main screen.
- Or press the  key from the MENU (see page 24).

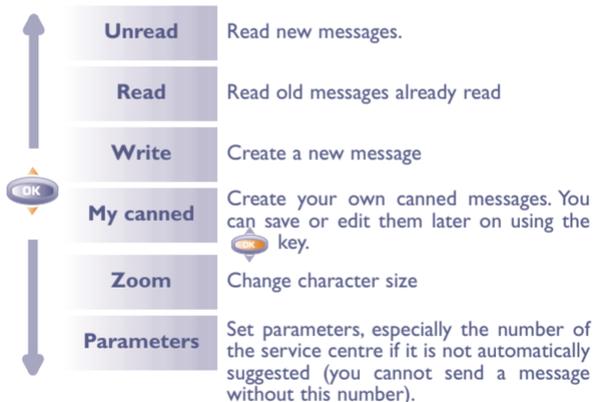

! (1) Check the availability of this service with your operator.

9.2 Reading your messages

The messages are stored in your SIM card and classified in 2 family: unread messages and read messages.

! The capacity of your SIM card depends on your operator. The  icon is displayed when there are too many stored messages: delete some messages.

When a new message is received, an audible signal (1) is emitted and the  icon is displayed.

The  icon disappears as soon as you have read all of the new messages.

Reading a new message



! (1) To deactivate the audible signal, see page 50.

Consulting read messages

Received messages that have already been read and messages that have been written, sent or stored.

Messages may be preceded by the following symbols:



Message sent and acknowledgement received.



Message sent and no acknowledgement received, or message not delivered (in this case you should send the message again).

Your friends can send you messages containing icons, animations, smileys, sounds and text. When you receive messages, in addition to the options listed below, you may also store the icons, smileys, sounds, and animations so that you can use them later.

If a message contains several icons, sounds, or animations, select the desired object using the arrows.

While reading a message, you can access the following options by using the  key:

	Delete	Delete the selected message
	Answer	Answer an incoming message
	Forward	Send the selected message again after modifying the recipient's name or the parameters
	Save Number	Store the first number contained in the text of the message in the directory
	Save icon (1)	Store an icon in the list of icons
	Save Animation (1)	Store an animation in the list of animations
	Save sound (1)	Store a sound in the list of sounds
	Save message	Store this message as a canned message



(1) If the received message contains sounds, images, icons, smileys.

Parameters

Update the following parameters:

Serv. Centre: your operator's service centre call number (may be provided automatically)

E-mail : calling number for sending an e-mail (can be automatically presented to you)

Format: format in which the message is to be delivered to your correspondent (SMS, e-mail, fax, etc.)

Validity: time during which the network presents the message again to your recipient in case of unsuccessful delivery

Receipt: acknowledgement receipt request

Zoom

Change the character size

Back

Return to the current message

9.3

Composing a message

- Make a keypress upwards on the  key from the main screen.
- Or on the  key from the MENU (See page 24) .

You can create a message or add to a (canned) stored message.

You can create a message with text only but can also assign icons or sounds, or smileys. (See page 44)



9.4 Icons, sounds, smileys

Your messages can be customised with icons, sounds or smiley to reflect your emotion:



Ironic



Upset



Smiling



Amazed



Skeptical



Crying

You can also create your own smileys using the alphabetical characters (example: :-)).

You can view the message once it is created: the icons, sounds, and smileys that you have inserted will be displayed.

You can add more icons and sounds to your phone by downloading them from the internet. (See page 55)

The recipient of the message must have a compatible EMS mobile phone in order to display icons and smileys, and listen to the sounds attached to your message.



The icon or sound that you inserted is represented by a symbol (🎵 or 📎).

9.5 Data entry system

To make it easier to write short messages, your phone has an assisted data entry system (predictive data entry) (1). To create a word, all that is needed is a single keypress on the key for any of the letters which the word contains.



The character displayed may not correspond to the one you entered; the system suggests the most usual word. Do not worry about the words initially suggested, go on typing, the system will make better suggestions as you type.

The cursor shape varies with the selected entry mode:

predictive mode 

 
normal mode 

To confirm a word, press the  key downwards or the  key (a space will be automatically inserted).



(1) Depending on the language.

While writing the message in predictive mode, you can access the following options by pressing the  key:



Send to	Send the message
Insert icon	Add icons
Insert sound	Add sounds
Insert Smiley	Add smileys
Preview	Preview the message
 Save message	Save the message



Confirm word	Accept the word suggested
OtherWords	Access the list of other suggested words
Insert digits	Insert a digit
Punctuation	Insert a punctuation mark or a symbol in the text
Normal mode	Switch to normal or predictive mode
Add word	Add a word to the dictionary
Back	Return to the main screen

You may also use the following keys:




There is a dictionary in which you can add, modify or delete words. Add a word while composing a message by pressing the and selecting the “**Add word**” option.

From the MENU (See page 24), it is possible to manage your own dictionary.

9.6 Sending a message

You can send a message:

- Manually (keying in your correspondent's number)

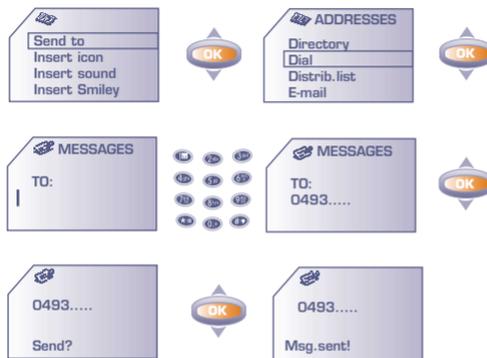

- To a recipient from the directory (See page 29).
- To several recipients by selecting the group of recipients (choose the “**Distrib.list**” option).
- To a recipient with an e-mail, address.

10

MY SETUP

For each of the functions described in the rest of this chapter, select the desired option.

From the main screen, press the  key to access the MENU.



10.1 Sounds

From the “**Sounds**” menu, press the  key to access the various options.



	Mode	Select the mode (see below)
	Volume	Adjust the volume with
	Ring tones	Select the ring tone for incoming calls with
	Compose	Compose a melody
	Key beeps	Activate/deactivate the beep played with each short or long keypress
	Msg. alert	Choose a sound to announce the arrival of a message
	ON sound	Choose the sound which will be played when the phone is switched on
	OFF sound	Choose the sound which will be played when the phone is switched off

Mode

You can choose from the following modes:

Sound Normal ring tone (increasing volume).

Vibrator + tone Vibrator is activated followed by a normal ring tone (increasing volume).



Vibrator No sound is emitted (ring tone, message or appointment alert, low battery beep) but the vibrating system is activated, the  icon is displayed (see page 37).

Silent No sound is emitted and the vibrator is deactivated. The  icon is displayed.

Compose my melody

From the "Compose" option, you can create your own tunes.

To compose your melody, use the keypad as shown below:

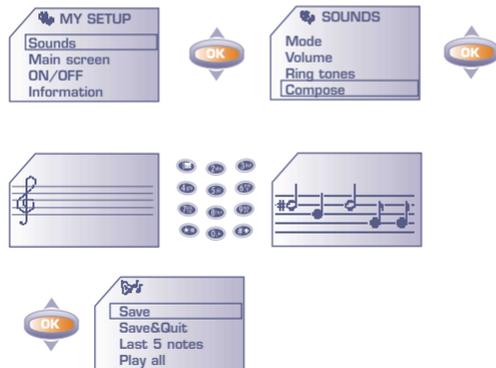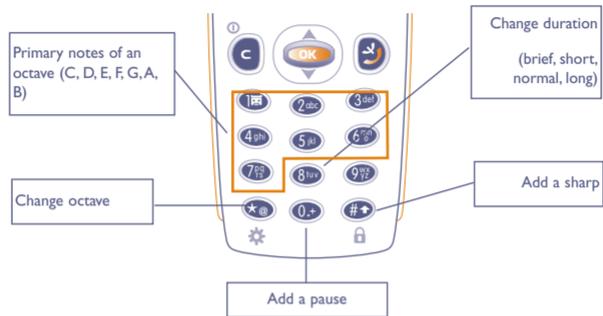

Available options

While you are composing your tune, use the  key to access the following options:

	Save	Save your tune
	Save&Quit	Save your tune and return to the previous screen
	Last 5 notes	Listen to the last five notes
	Play all	Listen to the entire melody
	Modify title	Change the title of the melody
	Instrument	Choose an instrument: piano, percussion, etc.
	Tempo	Choose the tempo: allegro, andante, lento
	Delete	Delete the selected melody
	Back	Return to the previous screen

 To return to the main screen, press the  key (long keypress).

10.2 Main screen

 
The main screen is displayed when your telephone is switched on and/or when no feature is in use (calls, sending short messages, etc.). From the MENU, you can personalise your screen by changing the icon and display format for the date.

10.3 Information

Your telephone is equipped with a system allowing you to download icons, sounds, animations, and canned messages. Downloading is performed from a computer. Once you are connected to a website offering this service on the internet, (I) select the object you wish to download. Once the download is completed, you will receive an SMS containing the selected object.

 You have the option of displaying, saving, or refusing an object being downloaded at any time.

 (I) Depending on the country.



The saved data will then appear in the appropriate lists (sounds, main/switch on/switch off screens).

10.4 Zoom (1)

Your telephone can display different sized characters (small or large). If you want to display more information (Wap, directory, SMS, MENU), select the zoom function.



(1) Depending on your phone model and the language.

10.5 Switch ON/OFF screens

You can personalise the welcome message, the animation or icon which appears when your telephone is switched on.

You can also personalise your telephone's switch off screen by choosing an icon or an animation.

10.6 Numbers

My number

Save your telephone number, (usually given on your SIM card). Enter the number - confirm by pressing .

Voicemail

Change your voice mail number (enter the number - confirm by pressing ).

Keyboard (1)

Direct dial numbers, once entered, can be dialled directly from the main screen by a long keypress on keys "2" to "4" and "6" to "9" on the keyboard.

• If no numbers are programmed:



• If a number has already been programmed:



Prefix

Activates/cancels the prefix which will be added automatically in front of the phone number when making the call (enter the number - confirm by pressing).

(1) Check the availability of this service with your operator.

11

ALARMS

Access the alarms features from the MENU (see page 24) by pressing the key.



11.1 Wake up

Set the alarm time and confirm by pressing .

Once this feature is activated, the icon appears on the main screen. Under "**Options**", you can choose to program the alarm clock with a melody or the FM radio (1). The alarm will sound whether the phone is switched on or off, but pressing any key will shut it off.

(1) Depending on the accessory in use.

11.2 Appointments

You can schedule your appointments (enter the date and time – confirm by pressing  – enter the purpose of the appointment – confirm by pressing ) and program how often they occur (once, daily, weekly).

Once an appointment is scheduled, the  icon appears. You can schedule up to five appointments. The alarm will sound whether the phone is switched on or off, but pressing any key will shut it off.

You can also change or cancel an appointment. In addition, you can program a short message to be sent (with icons, and/or a melody) at the appointment time.

11.3 Birthdays

You schedule birthdays and anniversaries in the same way as appointments but on an annual basis. You can schedule up to five anniversary dates.

 
11.4 Options

The "snooze" function can be activated when you program any alarm. The alarm will be repeated at regular ten minute intervals after the first sounding.


12 MEMO

The voice memo feature acts as a dictaphone and allows you to record personal messages.

Access the voice memo function from the MENU (See page 24).



12.1 Recording a voice memo

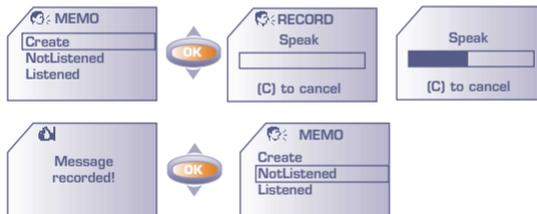

12.2 Using a voice memo

You have the option of using a voice memo to personalize the sounds played by your telephone:

- when your telephone is switched on or off,
- when there is an incoming call from a caller classified in a directory family.
- when an appointment, an alarm or an anniversary becomes due.



13 FM RADIO (1)



The "headset" or FM radio earpiece must be plugged in for the FM radio to work properly. They also work as antenna.

13.1 Switching on the FM radio

You access the radio from the MENU (see page 24) by pressing the  key.



(1) Depending on the accessory in use.

13.2 Available options

The following options are available while listening to the radio:

	Confirm	Return to the main screen leaving the radio on
	Volume	Adjust the volume
	Handsfree	Handsfree operation (using the standard equipment headset or FM radio earpiece)
	Radio stations	Access the list of your pre-set radio stations
	Save	Save the frequency of the current station
	Stop radio	Mute the radio
	Back	Return to the previous screen

13.3 Listening to the radio

It is possible to listen to the FM radio from the main screen.



To mute the radio, press the  key.




To change the pre-set station, press the  key.

13.4 Searching for a radio station

There are 2 types of searches:

- Manual:  (short keypress). Radio frequencies are displayed by increments of 0.05MHz.
- Automatic:  (long keypress).

13.5 Pre-setting a radio station

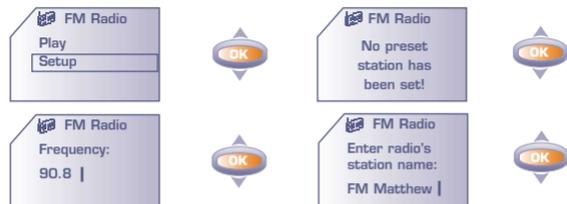

You can change, delete or cancel a pre-set station at any time.

13.6 An incoming call

When there is an incoming call, the radio is temporarily interrupted. There are two options available to you:


- If you refuse the call, the radio will resume operation.
- If you pick up the call, the radio is interrupted during the call and resumes operation once you hang up.

14 CALCULATOR/ CONVERTER

You can access the calculator and the currency converter from the main screen in two different ways:

- Press the  key and select the **"Calculator"** or **"Convert"** option.
- Enter a figure directly on the keypad, then press the  key and select the **"Calculator"** or **"Convert"** option.

14.1 Calculator

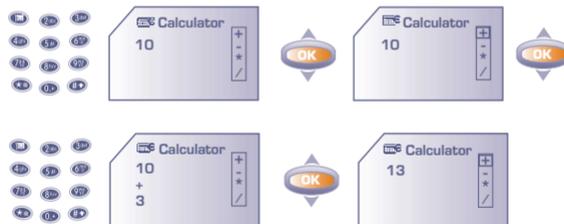

! To enter decimals ("."), use the  key (long keypress). To return to the main screen, press the  key (long keypress).

14.2 Converter

The currency converter allows you to:

- Directly convert a currency into Euros and vice-versa (1).
- Convert a sum of money into another currency (e.g. dollars into French francs).

Example of conversion into Euros:




(1) The currency converter uses the final conversion rates for the EURO set on 31/12/1998, which are used in accordance with the official conversion rules.

14.3 Currency selection

Access the currency table.



From this table, choose the currencies to convert (into euros or into another currency) using the  key to access the following options:

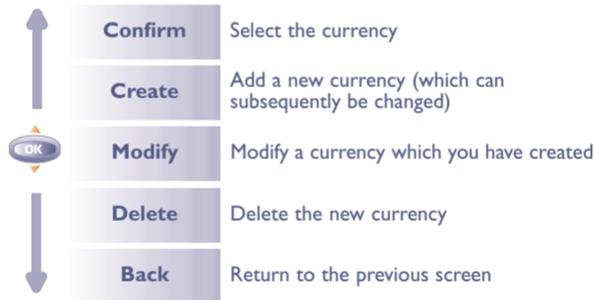

If you are in the Euro converter:

Once the currency has been selected or created, you must enter the exchange rate of the currency in euros (or confirm it if it is already shown).

If you are in the currency converter:

When you have selected or created the first currency, repeat the same operation for the second currency, then enter the rate for exchanging these 2 currencies.



To return to the main screen, press the  key (long keypress).

15 SETUP

Access "settings" from the MENU (See page 24) by pressing the  key.



15.1 Services

Security

PIN Code (1) SIM card protection code requested each time the phone is switched on if the code is activated.

Activate/ Deactivate Activate (or cancel) this code.

Change Update the code (4 to 8 digits).

PIN2 Code (1) Protection code for certain functions on the SIM card (Billing / Cost / FDN, etc.) requested when these functions are used if this code is activated.

Change Update the code (4 to 8 digits).



(1) Contact your operator if necessary.

Network Code (1)	Code requested to access the "Forbidden" options associated with the network.
MENU Code	Protection code for certain MENU functions (Services, Settings / Language), requested when these functions are used if this code is activated.
Activate/Deactivate	Activate (or cancel) this code.
Change	Update the code (4 to 8 digits).
Prod.Code	Protection code for your telephone, requested each time it is switched on if this code is activated.
Activate/Deactivate	Activate (or cancel) this code.
Change	Update the code (4 to 8 digits).
Change SIM	Defines SIM card as the main SIM card (see page 36).

Billing

Duration	Call time management.
Last call	Duration of last call.
Avail.Duration	Remaining time available in relation to time indicated under the "InclusiveTime" (for user's information only).

 (1) Check the availability of this service with your operator.

Cumul. dur.	Total duration of calls made.
InclusiveTime	Duration of subscription (enter the time - confirm by ).
Reset	Reset (immediately or periodically) the total duration of calls made.
Beep durat.	Activates/cancels the beep which sounds during a call at an interval set by the user (enter the interval - confirm by ).
Expense (1)	Management of call charges.
Last call	Cost of last charged call.
Credit	Remaining credit in relation to "Set Credit" .
Cumul. Cost	Total cost of charged calls
Set Credit	Maximum credit beyond which all charged calls are barred (enter credit - confirm by ).
Reset	Reset the total cost of charged calls.
Unit value	Cost of one telecom unit in the chosen currency (select the "Other?" option for another currency and press the  key to enter a decimal point).

 (1) Check the availability of this service with your operator.

Forward (I)

- All** All your calls are forwarded. The  icon is displayed.
- Conditional** Calls are forwarded if the line is busy, the call isn't answered or the phone is out of range of the network.
- If busy** Calls are forwarded only if your line is busy.
- No reply** Calls are forwarded only if the call isn't answered.
- Unreach.** Only if the phone is out of range of the network.
- Data** Data calls are forwarded to the specified number.
- Fax** Fax calls are forwarded to the specified number.
- Status** List of call forwarding operations activated from this phone.
- Cancel All** Cancels all activated call forwarding.

Calls

- Call wait (I)** Activates/cancels signalling of a second incoming call by a beep while you are in communication.
- Conceal ID (CLIR) (I)** Activates/cancels the option which makes your calls anonymous (your number is not transmitted by the network to the parties you call).



(I) Check the availability of this service with your operator.

Caller ID (CLIP) (I) Activates/cancels presentation of the caller's number (or name if it is stored in the directory) with every call.

Auto Redial (I)

Activate/
Deactivate Activates/cancels automatic call back if the first call was unsuccessful.

Forbidden No List of numbers for which automatic call back was unsuccessful (10 unsuccessful attempts).

Reset Reset the blacklist.

Ntwk.A.Redial (Completion of Calls to Busy Subscribers)
Automatic callback of the last dialled busy number.

Call Barring

Outgoing Activates/cancels call barring. This option is applicable in the following cases:

 Except Dir. Calls to numbers not stored in the phone's directory are barred.

 All (I) All outgoing calls are barred.

International(I) Outgoing international calls are barred.

Excpt-> Home (I) Outgoing calls except those to the subscription country are barred.



(I) Check the availability of this service with your operator.

Except FDN (1) Calls to numbers other than the specific FDN directory (contained in the SIM card) are barred.

Activate/ Deactivate All calls which do not begin by one of the numbers stored in the "FDN" directory are barred.

Change If the "**Exc. FDN**" option is activated, you can update the "FDN" directory after entering PIN2 code (update "FDN" directory by pressing ).

View View the list of FDN numbers.

 Exc. "Private" All calls other than those to numbers included in the "**Private**" family are barred.

 Exc. "Prof." All calls other than those to numbers included in the "**Prof.**" family are barred.

 Exc. "Other" All calls other than those to numbers included in the "**Other**" family are barred.

Incoming Activates/cancels incoming call barring. This option is applicable to the following cases:

 Except Dir. (1) All calls from a number not stored in the phone's directory are barred.

 (1) Check the availability of this service with your operator.

 All (1) All incoming calls are barred.

If abroad (1) Incoming calls are barred if you are abroad.

 Exc. "Private" All calls other than those from numbers included in the "**Private**" family are barred.

 Exc. "Prof." All calls other than those from numbers included in the "**Prof.**" family are barred.

 Exc. "Other" All calls other than those from numbers included in the "**Other**" family are barred.

Status List of call barring operations activated.

 (1) Check the availability of this service with your operator.

Networks

- SMS CB (I)** Messages broadcast over the network (weather, traffic, etc.) are automatically displayed on the main screen.
- CB list** List of the message codes to be displayed:
- Reception** Depending on the selected option, the phone displays messages broadcast by the network.
- Full** The phone permanently scans the network and displays received messages according to your list (see "**CB list**" option).
- Limited** The phone intermittently scans the network and displays received messages according to your list (see "**CB list**" option).
- None** The phone does not receive any messages.
- Searching** Search for a home network.
- Available** List of available networks in your radio environment.
- Mode** Depending on the selected option, search mode is:
- Automatic** First searched network is the last one used.

! (I) Check the availability of this service with your operator.

- Manual** User chooses the home network.
- Preferred** List of networks for priority connection (update this list with ).
- Forbidden** List of forbidden networks (update the list with .

15.2 Clock

- Time/Date** Setting your telephone's date and time.
- Format** Date and time display format.

15.3 Languages (I)

Message display languages (select by pressing ). The "**Automatic**" option chooses the language of the subscription network (if it is available in the phone).

! (I) Depending on your phone model.

15.4 Dictionary (1)

There is a dictionary to which you can add your own words to those already contained in the assisted data entry system.

When you consult your dictionary, you can add, modify or delete words using the options available by pressing the  key.

15.5 Display (1)

Backlight Backlighting intensity (press  to adjust); we recommend using the minimum necessary intensity to save battery power. However, you can use the  key (long keypress) to activate backlighting.

Contrast Display contrast (press  to adjust).

15.6 Automatic call pickup

Pickup Allows you to choose the way a call will be answered.



(1) Depending on your phone model and language.

Automatic Automatically (without touching a key) after approximately 2 rings (this option is only available if your phone is connected to an audio accessory).

Key =  After pressing the  key.

Any key After touching any key on the keypad (1 to #).

15.7 Automatic power off

Power off When this option is activated, the phone is automatically switched off if it is not used (i.e. no keypresses, no calls, no incoming messages) after an amount of time chosen by the user (enter the duration - confirm by .

15.8 Keypad lock

Keypad lock When this option is activated, the keypad will be automatically locked (if you are not going to use your phone for a prolonged period of time).

16

WAP (1)

16.1 Accessing Mobile Internet Services (2)

WAP (Wireless Application Protocol) is a service that allows you to access the mobile Internet. Thanks to WAP, you can obtain information such as weather conditions, stock market averages, traffic conditions, etc.

You can access mobile Internet services from the main screen by pressing the  key and then selecting the "Services" option or by a long keypress on the  key (1).

The following screen will pop up:



- (1) Depending on your phone model and the language.
- (2) Check the availability of this service with your operator.

The "**HomePage**" option allows you to launch the WAP browser if it is already configured.

The "**Profiles**" option allows you to set up the connection parameters for your WAP services access providers. In most cases, your navigator connection parameters will have already been set up.

If that is not the case, refer to the "**Go to URL**" option.

16.2 Available options (1)

While consulting an Internet page, you can access a number of options by pressing the  key.



- (1) At any moment when browsing, make a long keypress on the  to exit the WAP mode.

Show URL	Display the address of the site you are currently visiting (1)
Connect. Status	Display the information bar for your Internet session
Alert List	Display the list of your notifications (2)
Zoom	Change character size
Help	Display on-line help messages
Exit WAP	Finish consulting Internet services and return to the main screen
Back	Return to the previous screen

16.3 Setting up your access (2)

Select a profile from the list of profiles and access the following options by pressing the  key.

- ! (1) Depending on your phone model.
- (2) Check the availability of this service with your access provider.

	Confirm	Confirm the profile that you will use to access Wap services
	Try profile	Try the profile home page
	Create	Create a new profile
	Modify	Modify the profile parameters
	Delete	Delete a profile
	Back	Return to the list of profiles

To create a new profile, you must fill in all of the following parameters (1) :

- Profile name
- Home Page address
- Profile Address
- Profile Port
- Parameters
 - Access type (analogue, ISDN)
 - Input name
 - Password
 - Access Number
 - Transmission speed

- ! (1) Enter the information supplied by your operator.

17

GAMES (I)

The game software built into your terminal was designed and developed using Infograms. They are covered by copyright laws. Any non-authorized reproduction of this software as well as any alterations to the copyright notices or other rights appearing on the software are categorically prohibited.

You can access the games from the MENU by pressing the  key.



You have the option of setting the parameters for the Games in the **“Config.”** option (keyboard, sounds, difficulty...).

Starshot, a hero from deep space, travels throughout the galaxy to discover new entertainment. He is accompanied by his two faithful companions, Willfall (the little robot) and Willfly (the little rocket). Help him foil the traps set for him by the terrible Wolfgang.

(I) Depending on your phone model

Killer expo

While at the commands of the Willfly rocket, you must avoid obstacles and at the same time eliminate the enemies you cross at the 4 levels on the way to save starshot.

To steer, use the  ,  ,  ,  , keys.

To fire, use the  key.

During the game, you can display:

- Your position ,
- Your result,
- Your shield points ,
- Your life points .

Eyes & stars

For this strategy game, you must align 4 pawns (horizontally, vertically or diagonally). Your opponent, over several rounds, is the terrible Wolfgang. You have the option of choosing your pawns to affront the enemy.

To align the pawns, use the  ,  ,  ,   keys.

To confirm the placement of a pawn, use the  key.

Run, run

Help Starshot make his way across the platforms (linked together by cables and ladders) to escape from the labyrinth.

Starshoot can run on these platforms, climb up and down the ladders, hang himself and move along the cables, jump from one platform to the other and finally control the stars that he collected on the way with which he can dig a hole to trap in his opponents. Note, you must absolutely find the key to advance through the 7 steps of each of the 4 levels.

To guide yourself from one platform to the next, use the  ↑
 ↓,  ←,  →, keys.

To fire, or climb up or down, use the  key.

During the game, you can display:

- Your result,
- Your star points 
- Your life points 

18 WARRANTY

18.1 Warranty for the telephone

Congratulations for choosing this mobile phone - we hope that this product will satisfy all your needs.

Notwithstanding any other applicable statutory warranties, this mobile phone and the battery are guaranteed against any manufacturing defect for a period of ONE (1) year from the date of purchase shown on your invoice.

Nevertheless, if the statutory warranty in force in your country exceeds one (1) year, the statutory warranty will apply in place of the manufacturer's warranty. The present warranty terms also apply to the accessories but for a period of SIX (6) months from the date of purchase shown on your invoice.

Under the terms of this warranty, you must inform your dealer or any maintenance centre (see list of maintenance centres at our website - www.alcatel.com) without delay of any defect and present the invoice given to you at the time of purchase.

The dealer will decide whether to replace or repair, as appropriate, all or any part of the equipment (telephone or accessory) found to be defective. This warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

Servicing under the terms of this warranty, especially repair, modification or replacement of parts shall entitle to a three month warranty unless there are statutory provisions to the contrary.

This warranty shall not apply to damage or defects (to your telephone and/or accessory) caused by:

- use not conforming with the instructions for use or installation,
- non observation of the technical and safety standards applicable in the country where the equipment is used,

- improper maintenance of batteries and other sources of energy, and of the overall electric installation,
- Accidents or the consequences of theft, (of the vehicle), acts of vandalism, lightning, fire, humidity, infiltration of liquids, atmospheric influences,
- Combination or integration of the equipment in hardware not supplied by the manufacturer unless the latter gave written, explicit consent for such,
- Modifications, alterations, or repairs carried out by parties not authorised by the manufacturer or by the maintenance centre,
- Use of the equipment for a purpose other than that for which it was designed,
- Normal wear,
- Deterioration caused by external causes (RF interference produced by other equipment, fluctuations in mains voltage and/or voltages on telephone lines, etc),
- Modifications made to the equipment even if they are mandatory due to changes in regulations and/or modification of network parameters,
- Connection faults resulting from unsatisfactory radio propagation or caused by the absence of radio relay coverage.



Equipment on which markings or serial numbers have been removed or altered, and handsets on which labels have been removed or deteriorated shall be excluded from the warranty.

Apart from the statutory warranty, the above provisions constitute the only claims which can be made against the manufacturer and dealer on the grounds of equipment defects, this warranty excludes any other explicit or implied warranty associated with the sale of the equipment.

19

ACCESSORIES (I)


Alcatel latest generation of GSM mobile phones feature a built-in "hands-free" which enables use of the telephone at a certain distance, i.e. on a table. Users who wish to protect confidentiality of their conversations may use the headset accessory.



Standard charger
C 55




Cigar lighter charger
C 56

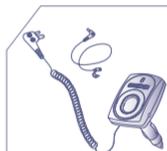

Basic car kit
MP 79



Easy-to-install hands-free car kit
MP 81

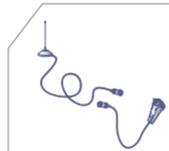

Antenna kit
A 3



Headset
M 13



Basic cradle
MP 80



SMS Keyboard
KB 1



Carrying case
HC 26



Battery
B 55



Belt clip
BC 11



FM radio kit
M 15



(I) Depending on your phone model and availability.



Online purchase: www.alcatel.com



CHARACTER SET

To enter a word, press the key which corresponds to the desired letter several times until the wanted letter appears.

	1	2	3	4	5	6	7	8	9	10	11	12
	┐	1	_	,	'	"	:	;	?	¿	!	
	A	B	C	2	Å	Ä	Æ	ç				
	D	E	F	3	É	Δ	Φ					
	G	H	I	4	Γ							
	J	K	L	5	Λ							
	M	N	O	6	Ñ	Ø	Ö	Ω				
	P	Q	R	S	7	Β	Π	Σ				
	T	U	V	8	ü	ø						
	W	X	Y	Z	9	Ξ	Ψ					
	+	0	•	-	#	/	%	()	<	>	
	*	=	@	\	~	€	\$	£	¥	&	§	
	#	↑										

┐ : space.

© ALCATEL BUSINESS SYSTEMS 2000.
All rights reserved. Alcatel reserves the right to alter material or technical specification of its products without prior notice.



www.alcatel.com