



www.alcatelonetouch.com

For more information on how to use the phone, please go to www.alcatelonetouch.com Moreover, on the website, you can also find answers to frequently asked questions, and so much more.



smart move.

ALCATEL onetouch.

smart move.

Table of contents

Sa	fety	and use	4
Re	gula	tory information	8
G	enera	al information	13
1	Get	ting started	15
	1.1	Set-up	
	1.2	Power on your phone	
	1.3	Power off your phone	18
2	Υοι	ır mobile	19
	2.1	Keys	20
	2.2	Main screen icons	2
3	Cal	ls	22
	3.1	Making a call	22
	3.2	Calling your voicemail	22
	3.3	Receiving a call	23
	3.4	During a call	23
	3.5	Conference calls	24
4	Cor	ntacts	25
	4 . I	Consulting your contacts	25
	4.2	Adding a contact	25
	4.3	Adding a group	26
	4.4	Available options	26
5	Mes	ssages	27
	5.1	Access	27
	5.2	Create message	27
	5.3	Message folders	28
	5.4	Broadcast SMS	28
	5.5	Voicemail	29

	5.6	Templates	.29
	5.7	Settings	.29
6	Call	log	30
	6.1	Access	.30
	6.2	Available options	.30
7	FM I	Radio	31
8	Sett	ings	32
	8.1	Dual SIM settings	
	8.2	Phone settings	.32
	8.3	Call settings	.34
	8.4	Network	.36
	8.5	Security	.37
	8.6	Restore default	.37
	8.7	Dual SIM switch	.37
9	Тоо	ls	38
	9.1	Alarm	.38
	9.2	Calculator	.38
	9.3	Calendar	.39
	9.4	Notes	.39
	9.5	Bluetooth [™]	.40
	9.6	Converter	.41
	9.7	Voice alarm	.42
	9.8	Fake call	.42
	9.9	Call filter	
	9.10	Torch	
	9.11	WAP	
	9.12	Services	.44
01	Mus	ic	
	10.1	· · · · · · · · · · · · · · · · · · ·	
	10.2	Available options	.45

н	My	files	
12	Prof	files	
	12.1	General	47
	12.2	Vibrate	
	12.3	Silent	
	12.4	Flight mode	
13	Can	1era	49
	13.1	Access	
	13.2	Camera	
	13.3	Video	51
14	Lati	n input mode	52
15	15 Telephone warranty5		53
		essories	
		ubleshooting	



This product meets applicable national SAR limits of 2.0 W/ kg. The specific maximum SAR values can be found on page 7 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance. Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10° C to $+55^{\circ}$ C.

At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

2014/10/9 16:55:33

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not use the phone if the glass made screen, is damaged, cracked or broken to avoid any injury. Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List, page 57). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.

PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above $60^\circ\text{C}.$

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment - Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

CHARGERS

Mains powered chargers will operate within the temperature range of: 0° C to 40° C. The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. They are also compliant to the ecodesign directive 2009/125/EC. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/ EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

۲

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

1040X/1040D:

Maximum SAR for this model and conditions under which it was recorded.		
Head SAR	GSM 900	0.748 W/kg
Body-worn SAR	GSM 900	0.665 W/kg

1042X/1042D:

Maximum SAR for this model and conditions under which it was recorded.		
Head SAR	GSM 900 + Bluetooth	0.748 W/kg
Body-worn SAR	GSM 900 + Bluetooth	1.00 W/kg

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

Body-worn SAR testing has been carried out at a separation distance of 10 mm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body. If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the phone the indicated distance away from the body.

Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a handsfree device to keep the phone away from the head and body during phone calls, or reduce the amount of time spent on the phone.

For more information you can go to www.alcatelonetouch.com

Additional information about electromagnetic fields and public health are available on the following site: http://www.who.int/peh-emf.


Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or USB data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 10 mm away from the body.

Regulatory information.....

The following approvals and notices apply in specific regions as noted.

1040X:

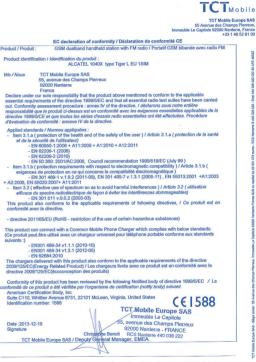

TCT Mobile Europe SAS - Siège social : 55 Avenue des Champs Pierreux, Immeuble Le Capitole 92000 Nanterre France SAS au capital de 23 031 072 euros - RCS Nanterre B 440 038 222 - Siret 440 038 222 000 38 APE 4652Z

1040D:

۲

TCTMobile

TCT Mobile Europe SAS 55 Avenue des Champs Pierreux, Immeuble Le Capitole 92000 Nanterre, France +33 1 46 52 61 00

EC declaration of conformity / Déclaration de conformité CE	
Product / Produit : GSM dualband handheid station with FM radio / Portatif GSM bibande avec radio FM	1
Product identification / Identification du produit : ALCATEL 1040D type Tiger L EU 2SIM	
We / Nous TCT Mobile Europe SAS 56, versure des Champs Pierreux 92000 Nanterre France	
Declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1989/BCC and that all essential radio test subse have been carried out. Conformity assessment procedure : annex IV of the directive. / déclarons sous notre antiére responsabilité que le produit - déclassus set en conformitié avec les explances assentielles applicables de la directive 1989/BCCE et que toutes les sónies d'essais radio essentielles ont été effectuées. Procédure d'avalation de conformité : annex IV de la directive.	
Applied standards / Normes appliquées : - Item 3.1 a (protection of the health and of the safety of the user) / Article 3.1.a (protection de la santé el de la sácurité de rutilisateur) - EN 60560-12006 + A112009 + A12010 + A122011 - EN 62209-1 (2006) - EN 62209-2 (2010)	
-EN 50 380: 2001/ÅC:2005, Council recommendation 1996/519EC (July 99) Item 3.1.b (protection requirements with respect to electromagnetic compatibility) / Article 3.1.b (exigences de protection en ce qui concerne la compatibilité electromagnétique) -EN 301 489-1 v1.9.2 (2011-09), EN 301 489-7 v.1.3.1 (2005-11), EN 55013:2001 +A1:2003 +A2:2006, EN 6502:2007 + A11:2011	
Item 3.2 (effective use of spectrum so as to avoid harmful interferences) / Article 3.2 (utilisation efficace du spectre radiofactrique de façon à éviter les interférences dommageables) EN 301 511 v.9.0.2 (2003-03) This product also conformis to the applicable requirements of following directives, / Ce produit est en conformité avec a directive,	
- directive 2011/65/EU (RoHS - restriction of the use of certain hazardous substances)	
This product can connect with a Common Mobile Phone Charger which complies with below standards: (Ce produit peut être utilisé avec un chargeur universel pour téléphone portable conforme aux standards sulvanis : EN301 489-34 v1.1.1 (2010-10)	
- EN301 489-34 v1.3.1 (2012-05) - EN 62684:2010	
The chargers delivered with this product also conform to the applicable requirements of the directive 2009/125/EC(Energy Related Product) Les chargeurs livrés avec ce produit est en conformité avec la directive 2009/125/EC(écoconception des produits)	
Conformity of this product has been reviewed by the following Notified body of directive 1999/5/EC / Le onformité de ce produit a été vérifiée par l'organisme de certification (notify body) suivant. American Certification Body, Inc.	
Suite C110, Whittier Avenue 6731, 22101 McLean, Virginia, United States Identification number: 1588	
Date :2013-12-23 Signature Christophe Benoit Immeuble Le Capitole 55, avenue des Champs Pierreux 92000 Manitere - FRANCE RCS Nantere 440 038 222	
TCT Mobile Europe SAS / Deputy General Manager, EMEA.	
V	

SAS au capital de 23 031 072 euros - RCS Nanterre B 440 038 222 - Siret 440 038 222 000 38 APE 4652Z

1042X:

۲

۲



TCT Mobile Europe SAS 55 Avenue des Champs Pierreux, Immeuble Le Capitole 92000 Nanterre, France +33 1 46 52 61 00 nformité CE

	EC declaration	n of conformity / Décla	aration de confo	rmité CE	
Product / Produit : bibande avec tech	GSM dualband nologie Bluetooth et rad		Bluetooth techno	ology and FM radio / Portatif	GSM -
Product identifica	tion / Identification du ALCATEL 10	oroduit : 042X type Tiger L EU 1	ISIM VGA Mor		
We / Nous	TCT Mobile Europe S	45			
	55, avenue des Cham 92000 Nanterre France	ps Pierreux			
essential require out. Conformity responsabilité q directive 1999/5	ements of the directive assessment procedure ue le produit ci-dessus	: annex IV of the direct est en conformité avec éries d'essais radio ess	essential radio te ive. / déclarons s les exigences es	st suites have been carried sous notre entière ssentielles applicables de la	
- item 3.1.a (et de la sé - EN - EN - EN - Item 3.1.b ((exigence - EN (2009-05), EN 5i - Item 3.2 (el	curité de l'utilisateur) 60950-1:2006 + A11:2 62209-1 (2006) 62209-2 (2010) 50 360: 2001/AC:2000 protection requirement s de protection en ce q I 301 489-1 v.1.9.2 (20) 50 301 2001 + A1:2003 + fective use of spectrum	and of the safety of the 2009 + A1:2010 + A12:2 5, Council recommenda s with respect to electro ui concerne la compatiti 11-09), EN 301 489-7 v A2:2006, EN 55020:20	2011 ation 1999/519/E magnetic compa olilité électromagr .1.3.1 (2005-11) 107+ A11:2011 interferences) /	tibility) / Article 3.1.b nétique) , EN 301 489-17 v.2.1.1 Article 3.2 (utilisation	
efficace d	I spectre radioélectrique I 301 511 v.9.0.2 (2003) Ilso conforms to the approximation of the second seco	e de façon à éviter les i -03) EN 300 328 y 1.7	interférences don 1 (2006-10)	nmageables) ectives, / Ce produit est en	
- directive 201	1/65/EU (RoHS - restric	tion of the use of certai	n hazardous sub	stances)	
(Ce produit peu suivants :)	têtre utilisé avec un ch	argeur universel pour te	ger which compli bléphone portable	es with below standards: e conforme aux standards	
- EN	I301 489-34 v1.1.1 (20 I301 489-34 v1.3.1 (20	10-10) 12-05)			
The chargers of 2009/125/EC(E	I 62684:2010 elivered with this produ- inergy Related Product 125/EC(écoconception	ict also conform to the a) / Les chargeurs livrés des produits)	applicable require avec ce produit e	ements of the directive est en conformité avec la	
conformité de ce j	his product has been re produit a été vérifiée pa ification Body, Inc.	eviewed by the followin r l'organisme de certific	g Notified body o ation (notify body	f directive 1999/5/EC / La y) suivant.	
Suite C110, W Identification n Date :2013-12 Signature	umber: 1588	101 McLean, Virginia;	United States	CE1588	
	bile Europe SAS / De	Christophe Benoit puty General Manage	er, EMEA.	TCT Mobile Function	19
				Immeuble	
		v /	5		
	e Europe SAS			RCS Nanterration 1.	
	Le Capitole				
92000s.Maan	CDSASSINGTOUR: CDSASSINGTOUR:	55 Avenue des Champs F ros - RCS Nanterre B 440	Pierreux, Immeuble 038 222 - Siret 440	Le Capitole 92000 Nanterre Fran 0 038 222 000 38 APE 4652Z	nce

10

1042D:



ш

I ICENCES

Obigo® (I) is a registered trademark of Obigo AB.

Micro

microSD Logo is a trademark.

🗊 eZiText" **z** corporation

eZiText[™] and Zi[™] are trademarks of Zi Corporation and/or its Affiliates.

*****⁽¹⁾

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

ALCATEL 1040X/1040D/1042X/1042D Bluetooth **QD ID B021548**





General information

- Internet address: www.alcatelonetouch.com
- Hot Line Number: see "TCT Mobile Services" leaflet or go to our Internet site.
- Address: Room 1910-12A, Tower 3, China HK City, 33 Canton Road, Tsimshatsui, Kowloon, Hong Kong

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server:

www.alcatelonetouch.com

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

C€I588

 (\bullet)

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.alcatelonetouch.com

Protection against theft⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering *# 0.6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

(I) Contact your network operator to check service availability.




Getting started

I.I Set-up

۲

Removing and installing the back cover

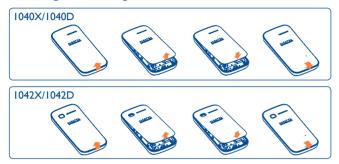

Removing and installing the battery



Inserting and removing the SIM card (1)



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

(I) Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.



Charging the battery



Connect the battery charger to your phone and mains socket respectively.

- · Charging may take about 20 minutes to start if the battery is flat.
- · Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (().
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; reduce the backlight time, etc.

17



(

The charge is complete when the animation stops.

I.2 Power on your phone

Hold down the _____ key until the telephone powers on, type in your PIN code if necessary and then confirm. The main screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, you can browse through them or press $_$ to return to the main screen.

While the phone is searching for a network, "Searching/Emergency" will be displayed.

18

I.3 Power off your phone

Hold down the ____ key from the main screen.

2 Your mobile

1040X/1040D/1042X/1042D



۲

- Pick up/Send call Call log
- Voicemail (press and hold)
- Ø Right softkey
- Switch on/Switch off End call

- 6 LED Flashlight
- Navigation key: Menu/Confirm an option
 Profiles
 Calendar
 Messages
 Alarm >

2.I Keys

۲

6

	•
	Navigation key Confirm an option (press the middle of the key)
	Pick up Send a call In idle screen: Access call log (Redial) (press)
<u> </u>	Switch on/Switch off the telephone (press and hold) End call Return to idle screen
	Left softkey
	Right softkey
ഹ	Access your voicemail (press and hold)
0+	In Edit mode: - Press: access the symbols table - Press and hold: enter zero
★08	In Edit mode: - Press: change input methods - Press and hold: access the language list
# ~®	In idle screen: - Press: # - Press and hold: activate/deactivate the vibrate mode In Edit mode: - Press: (space)
Ϋ <mark>S</mark> JKL	From Idle screen - Press: dial '5' - Press and hold: switch on/off the LED Flashlight

2.2 Main screen icons⁽¹⁾

- Battery charge level.
- Call forwarding activated: your calls are forwarded (see page 36).
 - Alarm (see page 40).
- Level of network reception.
- Voicemail message arrived.
- Missed calls.

ଚ

22

ম

- Radio is on.
- Roaming.
 - SIM card missing.
 - **Silence mode**: your phone does not ring, beep or vibrate with the exception of the alarm (see page 50).
 - SMS unread.
 - Flight mode.

In 1040D/1042D:

- Level of network reception.
- Call forwarding activated: your calls are forwarded (see page 36).
- R Roaming.

Calls.....

3.1 Making a call

Dial the desired number then press the $\$ key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the $\stackrel{\circ}{\longrightarrow}$ key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the $\$ key to make an emergency call. This works even without a SIM card and without typing the PIN code.

3.2 Calling your voicemail⁽¹⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the $1 \mod key$.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number, refer to "**Voicemail**" (see page 31).



To use your voicemail service from abroad, contact your network operator before leaving.

(I) The icons and illustrations in this guide are provided for information purposes only.

21

(I) Contact your network operator to check service availability.

۲

3.3 Receiving a call

When you receive an incoming call, press the $\$ key to talk and then hang up using the $\$ key.

If the sicon is displayed, the vibrator is activated and there is no ringtone.

If the sicon is displayed, the phone neither rings nor vibrates.



()

The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

You may mute ringtone of current incoming call by pressing - .

Answer the call by pressing the **L** key.

Rejecting a call

Press the *vert* key once to reject the call.

3.4 During a call (1)

Available functions

During a call, you can use your directory, calendar, short messages, etc. without losing your correspondent.

WARNING: move the handset away from your ear while turn on the speaker because the amplified volume might cause hearing damage.

Adjusting the volume

You can adjust the sound level during a call using the up/down key.

Handling two calls

- Answering a second call (ensure that "Call waiting" is activated, see page 36).
- To call a second party during a call, you may press "Options" and select "New call".

3.5 Conference calls (1)

Your phone allows you to talk to several people at the same time. If you are on a double call, press "**Options**" and select "**Conference**". If a third call comes in, answer it by pressing the <u>key</u> and speak with your new caller.

This caller becomes a member of the conference if you press "**Options**" and select "**Conference call**".

Contact your network operator to check service availability.





4.1 Consulting your contacts

To access the **contacts** from the main screen, press the 🖂 key and select the 🔝 icon from the menu, or press "**Contacts**" in idle screen.

For dual SIM model, the complete contacts of both SIM1 and SIM2 are available in this menu $^{(\mathrm{I})}.$

Searching for a contact

You can search for a contact by inputing the initial of their name. Subsequent letters may be added to refine the search. Or you may scroll up/down to find the contact you need when reaches the initial letter among contact list part (A-Z).

Viewing a contact

(

Select a name from your directory to read the contact information. Select "**Options**" to send messages, edit the contact, etc.

4.2 Adding a contact

You can add a new contact to phone or SIM card by selecting "Add contact".

Following fields are accessible when you create a new contact in the Contacts: Name, Number, etc.

You can move from one field to another by scrolling up and down.



If you use your phone abroad, store the numbers in your Contacts in international format "+" followed by the country code.

(I) 1040D/1042D only.

25

4.3 Adding a group⁽⁴⁾

You can create a new group by selecting "Add group". With "Options", you can edit or delete groups as you want.

4.4 Available options

From the contact list, you can access the following options:

Send message	Send an SMS to a contact you selected from the directory.
Edit	Modify the contents of a file: name, number, etc.
Edit before call	Edit the phone number before placing a call.
Add to Blacklist	Add the selected contact to blacklist.
Add to Whitelist	Add the selected contact to whitelist.
Delete	Delete the selected contact.
Сору	Copy the selected contact to phone, SIM card.
Multi-mark	Mark/Unmark a tick on a contact for further operation.

Settings • Display mode

- Display mode
- My number Type in or modify user's own name,
- Copy all Copy all contacts to phone or SIM

number.

card.

Phone.

26

Select to display contacts in "SIM".

"Phone" or "Phone and SIM".())

"SIM2", "Phone" or "All".(2)

Select to display contacts in "SIMI",

Delete all contacts from SIM card or

View used and available space in

phone and SIM card.

- Delete all
- Memory status⁽³⁾
- ^(I) 1040X/1042X only.
- ⁽²⁾ 1040D/1042D only.
- ⁽³⁾ 1042X/1042D only.
 - 1042X.



5 Messages.....

You can create, edit and receive SMS with this mobile phone.

5.I Access

You may access this menu using the following options:

- Press \boxdot to enter the main menu screen, and then select $\textcircled{\mbox{\mbox{ϖ}}}$.
- Access from < of navigation key.

5.2 Create message

From the main menu select "Messages\Create SMS" to create text message. You can type a message and you can also modify a predefined message in Templates. While writing a message, select "Options" to access all the messaging options. You can save your messages that you send often to Drafts. For dual SIM model, you can select to send it to a recipient in either the SIMI or SIM2 directory ⁽¹⁾.



()

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

5.3 Message folders

5.3.1 Inbox

All received messages (read and unread) are stored in the same Inbox.

Available options: View, Reply,Call sender, Forward, Delete, Delete all, Add to Blacklist, Add to Whitelist, Delete several.

5.3.2 Drafts

All drafts messages.

5.3.3 Outbox

All messages failed to be sent.

5.3.4 Sent

(1)

All sent messages.

5.4 Broadcast SMS⁽¹⁾

Receiving mode	Enable to receive broadcast SMS.
Channel settings	Subscribe/Add/Edit/Delete channels.
Languages	Language selection.
Read message	Read received messages

(I) 1040D/1042D only.

Depending on your network operator.

5.5 Voicemail

View and edit the voicemail number.

5.6 Templates

A list of predefined messages is available. Select one, edit it if needed, and then send it.

5.7 Settings

۲

SIM	Comment settings of SC address, Validity period, Message type, delivery report On/Off, Reply path ⁽¹⁾ .
Memory status	Memory used on the phone.
Save sent message	Select of save sent messages or not.
Pref. storage	Select default message storage, SIM or phone.
Alphabet management	Enables the definition of SMS data coding for SMS sending.

6 Call log..... 6

6.I Access

۲

 $(\mathbf{0})$

You can access the function using the following options:

- Select 🕼 from main menu.
- Press the send key from Home screen.

Once entered this menu, following list will be displayed:

- Missed calls
- Outgoing calls
- Incoming calls

6.2 Available options

When you press "Options", you can have access to View, Send message, Edit before call, Add to Blacklist, Add to Whitelist, Missed calls, Delete, Delete all.

 $(\mathbf{ })$

7 FM Radio.....

Your phone is equipped with a radio $^{(1)}$ with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

Available options:

Channel list	Open the list of saved stations.
Save channel	Save the current tuned station to the "Channel list".
Enter frequency	Enter the frequency manually.
Auto search	Start auto search and stations will be automatically saved to " Channel list ".
Settings	Scroll up and down to manage settings.
Record ⁽²⁾	Record the radio: files will be automatically saved to " My files "\" My audios "\" Recorded "
File list ⁽²⁾	List the files you recorded.

Settings......

From the main menu, select the menu icon in and select the function of your choice in order to customise your telephone.

8.1 Dual SIM settings (1)

You are allowed to activate only SIM1, only SIM2 or Dual SIM.

8.2 Phone settings

8.2.1 Display

Wallpaper

The wallpaper is displayed when you switch on your telephone.

By selecting "**Wallpaper**" you can customise it by replacing the default image or animation displayed on your telephone.

Power on/off

You can customise your welcome animation or image that appears when you switch on your phone.

You can also customise your OFF screen with an image or animation.

Brightness

You may adjust black level with respect to LCD display by pressing the key.

(I) The quality of the radio depends on the coverage of the radio station in that particular area.

⁽²⁾ 1042X/1042D only.

31

(I) 1042D only.

32

2014/10/9 16:55:40

(🌒



Backlight

Allows you to reduce brightness for enhanced battery performance and to save power during periods of expected inactivity.

8.2.2 Time and date

Allows you to have settings of date and time, including 12/24h format.

8.2.3 Keypad

By customising your keypad, you can access any function directly from the idle screen.

8.2.4 Auto lock

Set specific period for phone's auto lock.

8.2.5 Languages

Display language for messages (select using). The "**Auto**" option selects the language according to the home network (if available).

8.2.6 Input mode

Please see chapter "Latin input mode", page 54. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

8.3 Call settings

You can access a number of items with this option:

8.3.1 Billing⁽¹⁾

You can access different items with this option:

 Call cost
 You can view the last, max or total cost of charged calls, modify it or reset it and enter the cost of a call in the currency of your choice.

 Duration
 You can view the total duration of last calls,

dialled calls, received calls or reset duration.

8.3.2 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

8.3.3 Call forwarding

You can activate or cancel the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The L icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.

(I) Contact your network operator to check service availability.

 $(\mathbf{\Phi})$



8.3.5 Caller ID

Activate/deactivate CLIR.

8.3.4 Call barring

۲

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

			8.3.6	Auto redial	
Outgoing calls	I ne following cor	The following configurations are possible:		You can activate or deactivate the automatic callback of your party for calls	
	• All calls	All outgoing calls are barred.		not get through	, , , ,
	 International calls 	Outgoing international calls are barred.	8.4	Network	
		Outgoing international calls	Netw	ork selection:	
	except home	except those to your country of subscription are barred.	Prefe	rred network	List of networks to which you wish to be connected in order of priority.
Incoming calls	The following cor	nfigurations are possible:	Select	network	The choice of network connection is left up to
	• All calls	All incoming calls are barred.			the user.
	Roaming	Incoming calls are barred when you are abroad.	Searc	h mode	Network connection can be switched between "Manual" and "Auto".
Cancel all	Deactivate all call	barring.			Choose On or Off.
<u>Change barring</u> <u>Password</u>	Change the origin barring.	al Password for activating call	for activating call		

35

36

 (\mathbf{A})

8.5 Security

8.5.1 SIM settings

Activate PIN	The SIM card protection code is requested each time the phone is powered on if this code is activated.
Fixed Dial number	Allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.
Change PIN	Change PIN code.
Change PIN2	A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).
8.5.2 Phone	

 Activate password
 Code is requested each time the phone is powered on.

 Change password
 Change phone password, its initial one is 1234.

8.6 Restore default

Make all settings recover as default value. Enter its default password 1234 to confirm to restore and reboot.

8.7 Dual SIM switch (1)

This function enables you to switch SIM "Manually" or "Auto by SIM".

(I) **I040D** only.

۲

37



9.1 Alarm⁽¹⁾

۲

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

Repeat	You may select Once (default)/ Everyday/Days (Mon-Fri) or customize to your desire.
Snooze	The alarm will repeat at regular intervals.
Alert type	You may select the mode of Ringtone: Ring only, Vibrate only or Vib. and ring .
Ringtone	You are allowed to select a ringtone for the alarm.

9.2 Calculator



Access this feature by selecting "Calculator" from "Tools".

Enter a number, select the type of operation to be performed, and enter the second number, then press "=" to display the result.

Once an operation is complete, you can press — to clear numbers and carry out a new operation.

To return to the main screen, press ____.

(1) It's in main screen for 1040X/1040D.

38

()

9.3 Calendar

Once you enter this menu from "Tools", there is a monthly-view calendar for your view.

Available options:

Jump to date	Input the required date and it will be immediately highlighted.	
Go to today	Focus on today's date.	
Start of week	Set the first day of one week, Sunday or Monday.	

9.4 Notes

You can create a note in text format by accessing "Tools\Notes" from the main menu.

Available options:

View	View created note.
Edit	Edit previously created note.
Create text note	Add new text note.
Multi-mark	Mark/Unmark a tick on a file for further operation.
Delete	Delete note.

Bluetooth^{™ (1) (2)} 9.5

Access this feature by pressing "Menu" through Left softkey from the Home screen to enter the main menu, then selecting "Bluetooth".

To use your phone with a Bluetooth device, you need to proceed in two steps:

- · Pair and register the device to your phone,
- · Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "Bluetooth\Activation\ On" option. Then enter the "Device list" menu to search for connectable Bluetooth devices. From the list, select the device you want to pair directly. If the bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

<u>و</u>		ç	5-		
----------	--	---	----	--	--

Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.

(1) You are recommended to use ALCATEL ONE TOUCH Bluetooth headsets. which have been tested and proved compatible with phone. You can go to www.alcatelonetouch.com for more information about ALCATEL ONE TOUCH Bluetooth headset. (2)

40

1042X/1042D only.

۲

Visibility

Select whether you want to hide or show to all.

My phone's name

You may change your phone name, which is visible to the others.



Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your mobile phone are in this range and set as visible.

9.6 Converter

You can use the Weight and Length conversion by selecting the unit you wish to convert, then press to input the digits. Finally confirm with "OK".

9.7 Voice alarm

With this menu, you may create new voice file and set it as the alarm.

Select "Create voice file", press / to save it to certain date and time.

Available options:

Play	Play voice file you've created.
Add	Create new voice file.
Edit	Edit certain voice file.
Delete	Delete selected voice file.
Delete all	Delecte all voice files.

9.8 Fake call

This program enables you to call yourself by simulating a caller number/ name, ringtone at a scheduled time. It helps you to politely escape from social situations at any time you wish. This call can be rejected by ____.

Activate	Activate a fake call by "Fake call mode\Enable".
Set caller name	Predefine caller name of fake call.
Set active time	Predefine time for fake incoming call, the call will then be. made at the predetermined time.
Mode	Select among Ring, Vibration, Ring + Vibrate, Silence.
Ringtone	Predefine ringtone for fake call.



9.9 Call filter

To add numbers or contacts to **Blacklist/Whitelist**, press — to add from **Contacts**, **Call log**, **Messages**, you can also create directly by pressing .

Blacklist	Enable blacklist, all callers in the list will be automatically blocked.
Whitelist	Enable whitelist, only callers in the list can be connected.
Settings	You are allowed to select among Enable Blacklist, Enable Whitelist and Disable Call filter.

9.10 Torch

To light in darkness, you may activate "Torch" by below operations:

In idle screen, press and hold $\ddagger5$ we to activate the Torch light; press \frown or press and hold $\ddagger5$ we to deactivate it.

9.11 WAP⁽¹⁾⁽²⁾

 (\bullet)

9.11.1 Homepage

Launch the Wap browser with the preset homepage.

9.11.2 Bookmarks

Access your favourite sites.

(I) Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

⁽²⁾ 1042X/1042D only.

43

9.11.3 Go to URL Enter the URL of Wap site.

9.11.4 Recent pages Pages which you recently browsed.

9.11.5 Service inbox

Store Wap push messages.

9.11.6 Settings

Customise your browser preferences.

9.12 Services

Contact your network operator to check service availability.

(


0 Music.....



Access this feature from the main menu by selecting "Music" or press directly.

You will have full flexibility of managing music on memory card. Make sure your memory card well inserted before activating music.

10.1 Music playing mode

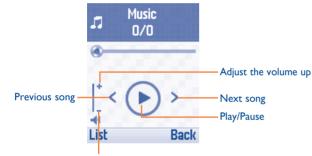

Adjust the volume down

10.2 Available options


Settings

Enable you to switch among Repeat, Shuffle, Background play, etc.



You will have access to all audio and visual files stored in memory card ⁽¹⁾ in My files. You can access a number of items with this option: **My audios, Images, My videos, Received,** etc.

Inserting the memory card:

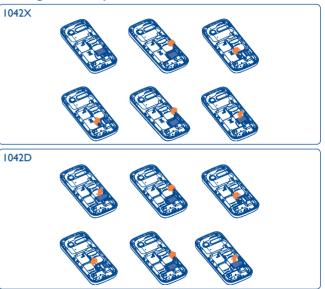

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

1042X/1042D only.

(1)



2 Profiles (1)......

With this menu, you may personalise ringtones for different events and environments.

12.1 General

To modify the sound settings within any profile, press "**Options**" and select "**Customize**" and you will see the functions below by scrolling up/ down key:

Alert type	You may set your phone ringtone to Ring only, Vibrate only (all sounds are replaced by vibrations), Vib. and ring, Vib. then ring, Silence (no sounds except for alarms).
Ring type	Select ring type among Ascending , Beep once , Repeat .
Ringtone	Press /) and select a melody from the list as your ringtone.
Ringtone volume	Adjust the volume using the up/down key.
Message	Select a melody for a new incoming message.
Keypad	Select the type of key beep.
Power On	Select a Power on melody for your phone.
Power Off	Select a Power off melody for your phone.

12.2 Vibrate

When this is selected the phone will not ring nor beep unless an alarm has been set. A new event will cause it to vibrate.

12.3 Silent

This profile will turn off all ringtones, including notification sounds.

 
12.4 Flight mode

Voice calls and messaging functions are barred. Can be used to increase standby duration.

48

(I) In 1042X/1042D, this menu is under Settings.





Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- store them as your creations in SD card or phone.
- send them in a multimedia message (MMS) to a mobile phone.
- send them directly by MMS, Bluetooth.
- customise your Home screen (see page 34).
- transfer them by data cable or microSD card to your computer.

I3.I Access

Select in from the main menu to access this function.

13.2 Camera

 (\bullet)

13.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press / to take the image and the images will be automatically saved. If you don't want it, you may directly delete it.

13.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings:

From the photo shot screen, press "Options" through Left softkey not only to access: "Camera settings", "Image settings", "White balance", "Night mode", "Storage", "Restore default", but also following ones:

My Creations	• Go to "My files\Phone" or "My files\Memory card" to view the photos you have taken.
Storage	 You may choose saving location if microSD card is inserted.
Access video (I)	 Access video recording mode.
Restore default	• Return all settings to default values.

13.2.3 Options available after taking the photo

Once you have taken a photo, you can send your photo by Bluetooth, MMS, or go to "Images" to view it.

۲

13.3 Video

13.3.1 Framing mode

When you enter the "Video" function through "Camera\Options\ Access video", you are in Framing mode. Use the mobile screen as a viewfinder and press "Options" for the settings of Camcorder setings, Video settings, Storage, to Access camera and "Videos".

13.3.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the \bigcirc / \bigcirc key.



If you receive a call in recording mode, video recording will stop and require to save or not.

13.3.3 Further operations after shooting a video

After shooting a video, you can choose to send your video by MMS, Bluetooth or go to "**Media\Videos**" to view it.

In the list of "My videos", press "Options" to rename the video, etc.

4 Latin input mode.....

There are two text entry methods that can be used to write messages

- Normal
- Predictive with the eZi mode (1)

Normal

This mode allows you to type text by choosing a letter or a sequence of characters associated with a key.

Predictive eZi mode (I)

This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.



۲

5 Telephone warranty.....

Your phone is warranted against any defect or malfunctioning which may occur in conditions of normal use during the warranty period of twelve (12) months $^{(\rm l)}$ from the date of purchase as shown on your original invoice.

Batteries ⁽²⁾ and accessories sold with your phone are also warranted against any defect which may occur during the first six (6) months ⁽¹⁾ from the date of purchase as shown on your original invoice.

In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with your proof of purchase.

If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired Phone and accessories are entitled to a one ⁽¹⁾ month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

⁽¹⁾ The warranty period may vary depending on your country.

 (\bullet)

(2) The life of a rechargeable mobile phone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges. This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

- Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,
- Modification, adjustment or alteration of software or hardware performed by individuals not authorized by TCT Mobile Limited,
- 5) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your phone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your country or jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for indirect, incidental or consequential damages of any nature whatsoever, including but not limited commercial or financial loss or damage, loss of data or loss of image to the full extent those damages can be disclaimed by law.

Some countries/states do not allow the exclusion or limitation of indirect, incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

6 Accessories ⁽¹⁾.....

The latest generation of ALCATEL ONE TOUCH GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.

I. Standard charger

2. Battery

ģ-

Only use your telephone with ALCATEL ONE TOUCH batteries, chargers and accessories in your box.

7 Troubleshooting.....

Before contacting the service centre, you are advised to follow the instructions below:

- You are advised to fully charge (🖂) the battery for optimal operation.
- Avoid storing large amounts of data in your phone as this may affect its performance.
- Use User Data Format⁽¹⁾ to perform phone formatting, (to perform User Data format, hold down # key while simultaneously pressing the power on/ off key under power off mode). ALL User phone data: contacts, messages and files will be lost permanently. It is strongly advised to fully backup the phone data and profile before doing formatting and upgrading.

and carry out the following checks:

My phone cannot switch on

- Check the battery contacts, remove and reinstall your battery, then turn your phone on
- · Check the battery power level, charge for at least 20 minutes
- If it still does not work, please use User Data Format⁽¹⁾ to reset the phone

My phone is frozen or has not responded for several minutes

- · Remove the battery and re-insert it, then restart the phone
- If it still does not work, please use User Data Format⁽¹⁾ to reset the phone

My phone turns off by itself

- · Make sure power off key is not mis-contacted
- · Check the battery charge level
- If it still does not work, please use User Data Format⁽¹⁾ to reset the phone

Images for reference only.

۲

My phone cannot charge properly

- Make sure you are using an ALCATEL ONE TOUCH battery and the charger from the box
- Clean the battery contact if it's dirty.
- Make sure your battery is inserted properly before plugging in the charger.
- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen
- Make sure charging is carried out under normal conditions (0°C to +40°C)
- · When abroad, check that the voltage input is compatible

My phone cannot connect to a network or "No service" is displayed

- Try connecting in another location
- Verify the network coverage with your operator
- · Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 38)
- Try connecting at a later time if the network is overloaded

Invalid SIM card

- Make sure the SIM card has been correctly inserted (see page 18)
- Make sure the chip on your SIM card is not damaged or scratched
- Make sure the service of your SIM card is available

Unable to make outgoing calls

- Make sure you have dialed a valid number and press the Lee key
- · For international calls, check the country and area codes
- Make sure your phone is connected to a network, and the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 37)
- Make sure that your phone is not in flight mode

Unable to receive incoming calls

- Make sure your phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 36)
- Make sure that you have not barred certain calls
- Make sure that your phone is not in flight mode

The caller's name/number does not appear when a call is received

- · Check that you have subscribed to this service with your operator
- · Your caller has concealed his/her name or number

I cannot find my contacts

- Make sure your SIM card is not broken
- · Make sure your SIM card is inserted properly
- Import all contacts stored in SIM card to phone

The sound quality of the calls is poor

- You can adjust the volume during a call by pressing the igsilon key
- Check the network strength
- Make sure that the receiver, connector or speaker on your phone is clean

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an ALCATEL ONE TOUCH accessory

When I select a number from my contacts, the number cannot be dialed $% \left({{{\bf{n}}_{\rm{s}}}} \right)$

- Make sure that you have correctly recorded the number in your file
- Make sure that you have inputted the country prefix when calling a foreign country

I am unable to add a contact in my contacts

• Make sure that your SIM card contacts are not full; delete some files from your SIM card or save the files in the phone contacts

My callers are unable to leave messages on my voicemail

· Contact your network operator to check service availability

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "Messages\Voicemail"
- Try later if the network is busy

The flickering icon is displayed on my standby screen

• You have saved too many short messages on your SIM card; delete some of them or archive them in the phone memory

SIM card PIN locked

 Contact your network operator to obtain the PUK code (Personal Unblocking Key)

How to make your battery last longer

- Make sure you follow the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request

ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCT Mobile Limited.

All rights reserved © Copyright 2014 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).

English - CJA27F4ALAAA

User Data Format ALL user phone data: Contacts, messages and files will be lost permanently. Please store phone data in SIM card before you want to format