

Quick Start Guide

For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade, etc.



This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 19 of this user guide.


When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

ALCATEL **onetouch.**

Your mobile.....

1.1 Keys

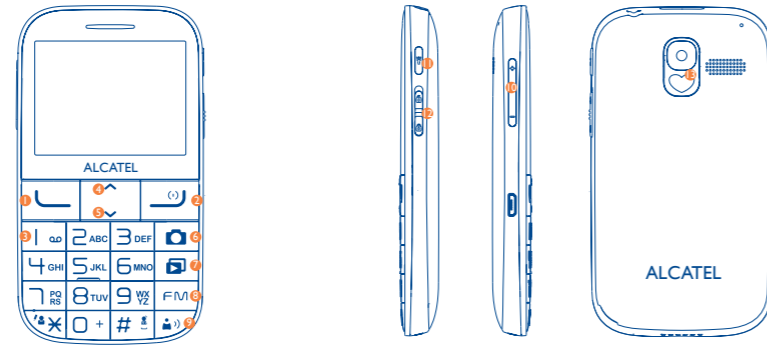

- 1 Send key
- 2 End key
- 3 Voicemail key
- 4 Up key
- 5 Down key
- 6 Camera key
- 7 Images key ⁽¹⁾
- 8 FM key
- 9 Voice alarm key

- 10 Volume key
- 11 Torch (Switch on/off)

- 12 Lock key (Switch locked/unlocked)
- 13 SOS key (Access SOS)

- 14 From Idle screen:
 - Press: Access Weather
- 15 From Idle screen:
 - Access main menu
- 16 Send key
 - Pick up/Send a call
 - Press: Enter Call log (From Idle screen)
 - Press to confirm an option
- 17 From Idle screen:
 - Press: End a call
 - Return to the Home screen
 - Delete character (In Edit mode)
- 18 Press and hold: Power on/off
- 19 Press and hold: Access your voicemail
- 20 From Idle screen:
 - Press: 0
 - Press and hold: "+/P/W"
- 21 In Edit mode:
 - Press: Access symbols table
 - Press and hold: 0
- 22 From Idle screen:
 - Press: *
- 23 In Edit mode:
 - Press: Change input methods
 - Press and hold: Access language list
- 24 From Idle screen:
 - Press: #
- 25 In Edit mode:
 - Press: (space)
- 26 Press: Access Camera
- 27 Press: Access Images ⁽¹⁾
- 28 Press: Access FM radio
- 29 Press: Access Voice alarm

⁽¹⁾ It is a Music key if your phone supports music.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the **End key** to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail ⁽¹⁾

To access your voicemail, hold down the **Up key**.

3.3 Receiving a call

When you receive an incoming call, press the **End key** to talk and then hang up using the **Down key**.

4 Messages.....

4.1 Write message

From the main menu select **"Messages"** to create a text/multimedia message.

While writing a message, select **"Options"** to access all the messaging options.

An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted.

You can save any messages that you send often to **"Drafts"**.

An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message. Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

⁽¹⁾ Contact your network operator to check service availability.

5 Contacts.....

5.1 Consulting your contacts

You can access to this function by selecting **"Contacts"** from the main menu.

5.2 Adding a contact

You can add a new contact to phone or SIM card by selecting **"Add contact"**.

6 Alarm.....

Your mobile phone has a built-in alarm clock with a snooze feature.

7 Others

7.1 My files

You will have an access to all audio and visual files stored in phone or SD card in **My files**.

Inserting and removing SD card:



Firstly, release the microSD card holder. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder.

7.2 FM Radio

Your phone is equipped with a radio ⁽¹⁾ with RDS ⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display, if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

7.3 Calendar

Once you enter this menu from **"Others"**, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc.

7.4 Voice alarm

With this menu, you may create the voice file and set it as the alarm.

7.5 SOS

When enter in SOS, press **"Help"** will pop up help information.

7.5.1 SOS contacts

To add an SOS number to your SOS contacts, please select "select **"Others|SOS|SOS contacts|No contact"** and press **"Edit"**, then you can edit your SOS numbers (5 numbers can be defined).

7.5.2 SOS message

From the main menu select **"Others|SOS|SOS message"** to create an SOS message.

When required, a long press (2 seconds) of the **Heart icon** button will send out your pre-set SOS message automatically and emit a loud alert sound, the backlight will flash at the same time.

Once an SOS message is sent, the phone will dial the pre-set SOS numbers automatically. Any call is answered or press **Heart icon** again, SOS will be deactivated.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

⁽²⁾ Depending on your network operator and market.

⁽¹⁾ It is a Music key if your phone supports music.

7.5.3 Activated

Press the switch **On/Off** to activate the default SOS function.

7.6 Voice Assist Dialing

Switch On/Off to choose if activate the Voice Assist Dialing.

7.7 Call log

You can access your call memory by pressing **End key** from the idle screen, and you will see Outgoing call(s), missed call(s) and Answered call(s).

7.8 Services

Contact your network operator to check service availability.

7.9 Camera

Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- store them as your creations in SD card or phone.
- send them in a multimedia message (MMS) to a mobile phone.
- send them directly by MMS, Bluetooth.
- customise your Home screen.

7.10 Weather⁽¹⁾

Your phone is equipped with a weather function for consulting up to 3-day forecast of favourite cities.

7.11 Bluetooth™

Access this feature by pressing **Down key** through Send key from the Home screen to enter the main menu, then selecting **"Others|Bluetooth"**.

⁽¹⁾ Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

1.2 Status bar icons ⁽¹⁾

- Battery charge level.**
- Vibrate alert:** your phone vibrates, but does not ring or beep with the exception of the alarm.
- Call forwarding activated:** your calls are forwarded.
- Alarm or appointments programmed.**
- Level of network reception.**
- Missed calls.**
- Radio is on.**
- Roaming.**
- SMS/MMS unread.**
- Silence mode:** your phone does not ring, beep or vibrate with the exception of the alarm.
- (Flickering) Message list is full:** your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
- Flight mode.**
- Bluetooth status (Activated).**
- Bluetooth status (Connected to an audio device).**
- GPRS connection status (Activated).**
- GPRS connecting.**

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

8 Calculator

Enter a number, select the type of operation to be performed by using the up or down key, and enter the second number. Then press Equal to display the result.

9 Settings.....

From the main menu, select the menu icon **Settings** and select the function of your choice in order to customise your telephone: **Phone settings, Call settings, Security, Network, Restore default⁽¹⁾, Profiles, Regulatory & Safety, Connectivity.**

10 Making the most of your mobile

ONE TOUCH Upgrade

Using ONE TOUCH Upgrade tool you can update your phone's software from your PC.

Download ONE TOUCH Upgrade from ALCATEL ONE TOUCH website (www.alcatelonetouch.com) and install it on your PC. Launch the tool and update your phone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your phone's software will now have the latest software.

All personal information will be permanently lost following the update process.

⁽¹⁾ Make the phone's settings recover to its default value. End-user data will not be erased. Enter its default password 1234 to confirm to restore and reboot.

2 Getting started

2.1 Set-up

Removing or installing the back cover



Installing or removing the battery



Insert and click the battery into place, then close the telephone cover. Unclip the cover, then remove the battery.

Inserting or removing the SIM card

You must insert your SIM card to make phone calls.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

Charging the battery



Connect the battery charger to your phone and mains socket respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.

2.2 Power on your phone

Hold down the **End key** until the telephone powers on.

2.3 Power off your phone

Hold down the **End key** from the Home screen.

3 Calls

3.1 Making a call

Dial the desired number then press the **End key** to place the call. If you make a mistake, you can delete the incorrect digits by pressing the **Up key**.

To hang up the call, press the **Down key**.

Supported Operating Systems

Windows XP/Vista/Windows 7.

Latin input mode

There are two text entry methods that can be used to write messages:

- Normal: this mode allows you to type a text by choosing a letter or a sequence of characters.
- Predictive with the eZi mode: this mode speeds up the writing of your text.

Keypad inputting:

- +** : Press: Access symbols table
- * / X** : Press: Change input methods
- #** : Press: Enter a space

ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCT Mobile Limited.

All rights reserved © Copyright 2013 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

