

GIGABYTE™

Content

1.	Getting Started	8
	Phone Overview	8
	Insert/Remove SIM Card	8
	Battery Charging	9
	Keypad Lock	9
	LED Light Indications	9
	Main Menu	10
	Input Methods	10
2.	Phone Features	11
	Answer A Call	11
	Make A Call	11
	In-Call Key Functions	11
	Conference Call	11
	Phone Book	12
	Phonebook Browsing	12
	Searching Phone Number	12
	Add Information of New Contacts	13
	Edit Information of Contacts	13
	Delete Single Contact Person Information	13
	Delete Multiple, Delete All Contact Persons' Information	13
	Move, Copy Single Contact Person Information	14
	Move Multiple, Move All Contacts	14
	Browsing Group	14
	Group Settings	14
	Yellow Page	14
	Useful Numbers	15
	In-Call Settings	15
	Call Timer Reminder	15
	Show Call Timer	15
	Caller Display	15
	Auto Redial	15
	Speech Volume	15
	Speed Dial Settings	15
	Use Speed Dialing	16
	Call Barring	16
	Phone Guardian	16

Incoming Call Barring	17
Outgoing Call Barring.....	17
System Service.....	17
Call Waiting	17
Call Divert.....	17
Hide My Caller ID	17
Switch Line	17
Network Settings.....	17
Fixed Dialing	18
3. Messages	18
SMS Management.....	18
Inbox	18
Read Messages.....	18
Reply Messages	18
Forward Messages	19
Delete Messages from Inbox	19
Save The Sender Number From Inbox To Phonebook	19
Set A Received Message As Template	19
Show Must-See MSGs.....	19
Receive POI Messages.....	20
Outbox.....	20
Read Messages In Outbox	20
Resend Messages From Outbox.....	20
Delete Messages In Outbox	20
Set A Sent Message As Template.....	20
Create Messages.....	21
My Folders	21
Naming My Folders	21
Move or Copy Messages to My Folders	22
Read Messages In My Folders.....	22
Drafts.....	22
Templates	22
Using A Template To Create A Message.....	22
Create A Template	22
Delete A Template.....	23
Message Settings.....	23
MMS Message	24
MMS Inbox.....	24

	View Download Notice.....	24
	View A MMS Message	25
	MMS Outbox	25
	Create A MMS Message	25
	MMS Drafts	26
	MMS Templates	26
	MMS Message Settings	26
	Broadcast Message.....	28
	EMS Pic Collection.....	28
4.	Call History	28
	Missed Call	28
	Call Timer	29
	SMS Counter.....	29
	Data Volume.....	29
5.	Dictionary	29
	English-Chinese Dictionary	29
	Chinese-English Dictionary	30
	My Bookmark	30
6.	Multimedia.....	30
	Camera	30
	Entering Camera	30
	Photo Shooting.....	30
	The Photo Setting Before Shooting	31
	Photo Naming Format.....	31
	Photo Album	31
	Viewing Photos in Full Screen.....	32
	Edit Photo—Add a Frame And Stamps	32
	Set Photo as Wallpaper.....	32
	Sending Photo to Friends By MMS	32
	Delete Photo.....	32
	Select Other Picture for Editing.....	32
	Camcorder.....	32
	Enter Video	32
	Video Taping	32
	Video Settings before Taping.....	32
	Video Naming Format.....	33
	Movie Theater	33
	Playing Video	33

Send Video To Friends By MMS	33
Delete Video.....	33
Select Other Videos.....	33
MP3 Player.....	33
First Time Play Music	34
Editing My Music List	34
Player Operations.....	34
Advanced Function of Player.....	34
Background Playing.....	34
Recorder.....	34
Voice Recording	34
Options	35
Recording File Naming Methods.....	35
7. Organizer.....	35
Alarm	35
Edit Alarm.....	35
Turn Alarm Off	36
Add/Edit Scheduler	36
View Current Day Schedule.....	36
Tasks	37
Anniversary.....	37
Delete Anniversary.....	37
Periodical Event.....	37
Add Periodical Event	37
Calculator.....	38
Unit Converter	38
World Clock	39
Timer.....	39
Typical Timer	39
nWay Timer.....	40
8. File Manager	40
My File.....	40
My Ringtone	41
My Music	41
My Voice Memos	41
My Photo.....	41
My Wallpaper.....	41
My Frame and Stamp.....	42

My Animation	42
My Video.....	42
All Music And Sound.....	42
All Images	42
All Video	42
Browsing SD Card	42
9. POI	42
Checking Map From POI.....	43
How To Search Store Information On Map Screen	43
Advanced Application of POI Information.....	43
Set My Favorite.....	44
Browse My Favorite	44
MRT Guide (Subway).....	44
Yellow Page	44
Gourmet	45
Fun	45
Map Search	46
Recommendation	46
Create Your Own POI	46
10. Fun & Games	47
Games	47
Pedometer	47
JAVA	48
11. WEB.....	48
Web Page Connection	48
Browsing Web Page	48
WAP Inbox	49
First Time To Enter Internet Access.....	49
Edit The Connectivity Profile From System Provider	50
Other Settings.....	50
Downloads	50
12. System Settings	51
Font	51
Language.....	51
Default Input Method.....	51
Set Date Time.....	51
City.....	51
Clock Settings	51

Date format	52
Time Format.....	52
General Settings	52
Ring Settings.....	52
Incoming Ringtone.....	52
Screen Settings.....	52
Main Menu Icon.....	52
Power On/Off Animation	52
Greeting.....	53
Wallpaper	53
Wait Screen	53
Screen Saver.....	53
LED Indication.....	53
Keyboard.....	53
Personal Theme Settings.....	53
Built-in Personalized Themes	54
Save All Current Mobile Settings	55
User Profiles.....	55
Security Settings	56
Phone Password	56
PIN Code.....	56
PIN2 Password.....	56
SD En/Decryption.....	56
Icon Lock	56
Data Backup.....	57
Invisible File	57
Add Invisible Contact	57
Browsing Invisible File.....	57
Invisible Missed Call, Received Call and Dialed Call.....	58
Receiving Invisible Message	58
Invisible Contacts.....	58
Restore Invisible Men	58
Power-Saving Mode.....	58
13. STK.....	59

1. Getting Started

Phone Overview



Insert/Remove SIM Card

Before inserting or removing SIM card, please 1) turn off this device 2) remove the battery cover. To avoid damaging the SIM card, please make sure that the device is turned off beforehand.

Insert :

1. Locate your SIM to the SIM card slot position at bottom left corner of backside. Make sure the cavity side faces up left and the side with chip faces down.

2. Match the metal wicker with metal protrusion on bottom left and press down softly to fill the space between battery and pit.
3. Fold the battery cover until the wedge is hooked.

Remove:

Push SIM card out of plug from bottom.

Battery Charging

When the battery is low, it will display “Battery Low” and power off automatically.

- Notice before charging
 1. Please make sure the battery is fully charged by the first time use.
 2. Please use batteries and chargers approved by GIGABYTE.
 3. You can process battery charging no matter this device is on or off.
- Prepare To Charge
 1. Open the rubber cover of charging port on bottom, and plug the travel charger in charging port.
 2. Please make sure it is good connection between port and charging connector, travel charger and power plug.
- Charging Process

When charger is in connection, this screen will display “Charging” and the pilot red light will turn on.
- Charging complete

The pilot light will convert to green and display “Charging Complete”.

Keypad Lock

You can lock the keypad to prevent from accidentally presses in standby mode.

You can still answer the call while keypad is locked.

Lock or unlock: please press [ok] and then press [call] in standby mode.

LED Light Indications

Light Signal	Description
Red light on	in charging
Green light on	charging complete
Flashing green light	standby mode
Flashing red light	missed call, incoming message
Flashing blue light	Roaming mode

Main Menu

This device has menu of twelve major functions, press [ok] to enter Main Menu in standby mode.

All functions have correspondent numbers, you may press number keys, [*] key or [#] key to quickly access those functions.

Input Methods

This device allows traditional Chinese, English, symbol and number entry.

Traditional Chinese entry includes “Smart Chinese ZhuYin”, “ZhuYin” and “Stroke”; English Entry Includes “Smart ABC”, “Smart abc”, “ABC” and “abc”.

You can switch above entry methods under script edit screen by pressing [*] .

- Entry switch method:

After entering edit screen, press [*] to rotationally switch “Smart Chinese ZhuYin”, “ZhuYin” and “Stroke”, “Smart ABC”, “Smart abc”, “ABC” ,“abc”and”123”; press [#] to switch to symbol input method.

2. Phone Features

Answer A Call

You can press [SL] or [CALL] to answer an incoming call, or press [SR] to mute the ringer. If you don't want to answer the call, press [END] to hang up.

Make A Call

- Make a general call
After entering numbers in standby mode, press [SR] to clear numbers or press [CALL] to dial. You can press [END] anytime to cancel dialing.
- Dial A Number From Phonebook
Press [SL] to enter phone book in standby mode, select a contact person and then press [CALL] to dial.
- Make An International Call
 1. Press and hold [*] then release, the "+" representing international call will appear on the screen.
 2. Enter country code, region code and phone number; or press [SL] to enter "City List" to select the city you want to dial, and this device will automatically enter the country and region codes of said city.
 3. Enter the phone number then press [CALL] to dial.

In-Call Key Functions

The in-call key functions description:

Press [↑] or [S↑] to increase voice volume

Press [↓] or [S↓] to decrease voice volume

Press [SL] Call Options

Press [OK] Mute On/ Off (close the speaker, which enables the opposite party to hear your voice)

Press [SR] enable/disable loud speaker

Conference Call

Before using conference call features, please assure that your service provider offers this service.

1. When you are in a call with A, you can press [SL] to access call feature

Options and select “Phonebook” or “Dial” to call B, which will automatically put A’s call on hold by successful connection, meanwhile A can only hear busy tone.

2. After successfully connecting with B, press [SL] to access Options menu and select “Conference” to have conversation with A and B at the same time.
3. For adding conferee, you need to repeat preceding two steps.
4. If you want to end conversation with certain conferee, press [SL] to access Options menu and select “End ”.
5. If you want to end conversation with all conferees, then press [END].

Phone Book

You may store information of contact persons in this device or phone book in SIM card. Your phone can store up to 500 entries; the maximum SIM card storage depends on issuers. The information of each contact person stored in the device include: Name, Tel Number 1, Tel Number 2, Tel Number 3, Office Number, Company Name, Company Address, Fax Number, Email Address, Caller Group, Photo ID, Ringtone, Must-See MSG and Remark.

How to enter phone book

1. Press [SL] in standby mode to enter;
2. Select “Call Manager” from Main Menu;
3. After entering Phone Management list, select “Phonebook”.

Phonebook Browsing

The default phone book will display all contact persons saved in this device and SIM card. You can enter “Browse Setting” from Options menu, and switch among: “All”, “SIM”, “Phone”.

1. Press [↓][↑] to select a contact, and then enter to view that contact’s information.
2. You can press [↓][↑] to scroll screen for browsing.

Searching Phone Number

If your phonebook has stored numerous entries, this device offers various speed searching methods that allow you to find the contact’s phone number rapidly.

1. Press [*] to switch Chinese/English entry. The up left corner of screen will display the entry method you have chosen.
2. Key in the Chinese or English desired name. For example: if you want to search the contact person whose name begins with “吳”, then press [0] twice and select said letter after switching to Chinese ZhuYin entry, meanwhile the screen will display contents whose names begins with “Wu”; for searching contact’s name begins with “A”, then the screen will immediately display all contacts whose name starts with “A” after pressing [2] once.
3. Under same screen, you may enter the full name of a contact, then the screen will display correspondent name you have entered.
4. After finding the contact person, press [call] to dial.

Add Information of New Contacts

1. After entering Phonebook, press [SL] to enter Options menu and select “Add”.
2. Select the field you intend to edit and enter. On “Caller Group” and “Must-See MSG” fields, you may press [←][→] to switch Options.

Edit Information of Contacts

1. After entering phone book, select the contact you want to edit, then press [SL] to enter Options menu and select “Edit”.

Delete Single Contact Person Information

After entering phone book, select the contact you want to delete, then press [SL] to enter Options menu and select “Delete”.

Delete Multiple, Delete All Contact Persons’ Information

1. After entering Phonebook, press [SL] to enter Options menu and select “Delete Multiple”.
2. If you want to delete certain contact’s information saved in this device, select “Delete Multiple Entries”. If you want to delete certain contact’s information existed in SIM card, select “Delete Multiple Entries from SIM”. Press [ok] to check or uncheck the contacts, and then press [SL] to confirm the deletion.
3. If you want to delete all contacts’ information saved in phone, select “Delete All From Phone”. Similarly, if you want to delete all contacts’ information stored in SIM card, selects “Delete All From SIM”.

Move, Copy Single Contact Person Information

You can move and copy information of contacts from SIM card to this device, or from this device to SIM card. When moving or copying information of contacts, this device will automatically identify the memory location. Since all operation Options of “Move” and “Copy” are identical, following we only use “Move” for example.

After entering Phonebook, select the contact you intend to move, press [SL] to enter Options menu and select “Move”.

Move Multiple, Move All Contacts

1. After entering Phonebook, press [SL] to enter Options menu and select “Move Multiple Entries”.
2. Select “Move Multiple Entries To Phone/SIM” to enter contact list from selected location. Press [OK] to check or uncheck the contacts you intend to move, and then press [SL] to confirm the deletion.
3. If you want to move all contact persons, then select “Move All to Phone/SIM”.

Browsing Group

You can manage your contacts by categories and search contacts by browsing group directories. The default groups in this device include All, General, Friends, Family, Buddies, VIP, Business, Group 1, Group 2, Group 3 and Group 4. Each time you activate phonebook, the browsing mode will automatically be reset to “All”.

Group Settings

In this function, you can setup Member List, Group Ringtone, Group Call Waiting Alert, Group Photo ID, and Rename.

1. After entering phonebook, press [SL] to enter Options menu and select “Group Settings”.
2. Enter group list to select the group you intend to set.

Yellow Page

This function provides you phone numbers, addresses and maps of stores for searching.

Useful Numbers

This function contains “My Info”, “Service Dial Number” and “Emergency Number”.

- “My Info”
You can store your personal data and number of this device here.
- “Service Dial Number”
It contains phone numbers of system provider and GIGA-BYTE service hotline.
- “Emergency Number”
You can dial the emergency numbers or enter this function and dial unconditionally, no matter it is locked, no signal or without SIM card. The default number is “112” in Taiwan.

In-Call Settings

You can set call features in this function.

Select “Phone Manager” from Main Menu, and then select “In Call Settings”

Call Timer Reminder

Set call timer alert to control the talk time.

Show Call Timer

Select whether or not to display call timer on screen.

Caller Display

Check the incoming call information you want to display.

Auto Redial

After activating auto-redial function, this device will auto redial said number up to 10 times if your dial is unconnected. You must switch the first field “Auto Redial” to “On” before setting “Redial Numbers” and “Waiting Seconds”.

Speech Volume

This function is to set the earpiece volume. By adjusting the volume under “Call Settings”, this setting will be saved to current settings.

Speed Dial Settings

You may set 0-9 total in 10 numbers as one-touch dial code up to 10 sets of contacts. “1” is the default one-touch number for voicemail.

1. Select “Phone Manager” from Main Menu.

2. Select “Speed Dial” in Call Manager feature list.
3. Select “Set Number”.
4. Move to the number you intend to edit, press [SL] to enter Options menu.
5. You can select “Edit” to edit number, or select “From Phonebook” to select contacts from contact list and press [SL] or [ok] to confirm.
6. After finishing setting, enter “Speed Dial” through “Phone Manager” and select “Enable Speed Dial”, and then press [←][→] to scroll to “On” to activate this function.

Use Speed Dialing

If you already set the one-touch dial number, you can directly dial to correspondent number of said key by pressing and holding number 0-9 on standby mode. By shortly pressing the numeric key, the screen will display said number, then press [SL] to make a direct call.

Call Barring

Call Barring includes restrictions to both incoming and outgoing calls.

Phone Guardian

You can use this to screen incoming calls, reject unidentified call without caller ID, setup certain numbers as black list or reject callers not in the phonebook.

- “No Display”
You can reject all unidentified calls without caller ID by activating this function.
- “Blacklist”
Aiming at certain unwanted phone number or harassing messages, you may add these numbers to black list, by which your phone will not receive these incoming calls or messages anymore.
 1. Enter “Black list” to view the list.
 2. You may press [SL] to enter Options menu on black list screen to execute “Add”, “Edit”, “Delete” and “Delete All”.
- “Not in Phonebook”
All callers not existed in the phonebook will be barred if this function is activated.

Incoming Call Barring

You can only use this service after applying to system service provider.

- “All Calls” and “When Roaming”
You can activate or deactivate this function from above items, or check current status with system service provider. You must enter correct password to complete setup.

Outgoing Call Barring

You can only use this service after applying to system service provider.

- “All Numbers”, “Intl Calls”, “Intl Except Home”
You can select to activate or deactivate this function after entering each item, or check current status with system service provider. You must enter PIN1 code to complete setup.
- “Specific Number” You may setup 10 barring numbers.
After entering “Specific Number”, I /select “Activate” to enter editing screen.

System Service

This part of function offers call related system Settings.

Call Waiting

This function is to activate the call inserted by third party while in the line.

Call Divert

Select whether to forward incoming call “To Voicemail” or “To Another Number”.

Hide My Caller ID

When activating this function, your phone number will be hidden form the recipient.

Switch Line

This function requires SIM card to support multiple numbers, by which this device will automatically detect available numbers for switching.

Network Settings

You can set your selection and priorities of networks in this function.

- Auto Network: this device will search available networks automatically.

- Manual: list available networks after processing network searching by this phone; you can press [OK] to confirm your selection.
- Pref. Network: default seven fields for you to add, edit or delete.
- Band Selection: you may choose to use 900, 1800, 900/1800, 1900.
- GPRS Connection: you may decide whether to activate GPRS connection when needed or Always.

Fixed Dialing

This function restricts this device to only dial designated numbers, which requires SIM card to support this function and enter correct PIN2 code to complete setup.

3. Messages

SMS Management

You may receive and send general text message through this device (Short Message Service, SMS):

1. Select "Messages" from Main Menu.
2. Select "SMS Management" at "Messages" feature list.
3. After entering, you can choose "Inbox", "Outbox", "Create Message", "Drafts", "Template" and "My Folders".

Inbox

Inbox stores messages received, in which messages are arranged by received dates, the messages received more recently take priorities.

Read Messages

1. Select "Inbox" at "SMS Management" feature list, or press [↑] to directly enter Inbox in standby mode.
2. Move to the message you want to read, press [SL] or [ok] to enter contents.
3. You may press [SL] to enter Options menu under Inbox list and exercise "View", "Delete", "Reply", "Forward", "Dial", "Save Number", "Move", "Copy", "Save As Template" to message selected, or execute "Delete All" or "Display Must-See Message".

Reply Messages

You may directly reply a message to message sender after reading the received message.

1. After entering message content, press [SL] to enter Options menu and select “Reply”.
2. Entering message editing screen, the bottom “Recipient” field has shown the replying counterpart, which you can directly press [ok] to send after editing the content.

Forward Messages

This function allows you to forward a message to other recipients.

1. After entering message content, press [SL] to enter Options menu on reading screen and select “Forward”.
2. Entering edit message contents screen containing received message editing, and then press [ok] to enter message preview screen.
3. Move cursor to “Recipients” and press [SL] to enter Options menu and choose “From Phonebook” to select the person you want to send to or just key in phone numbers in this field. Then, press [ok] to send it.

Delete Messages from Inbox

You can delete single message, or delete all messages in file at a time.

Delete Single Message

1. Select “Inbox” from “SMS Management”.
2. Move to the message you want to delete, and press [SL] to enter Options menu and exercise “Delete” to message selected, or exercise “Delete All” to whole Inbox.

Save The Sender Number From Inbox To Phonebook

This function allows you to directly save the number of message sender to Phonebook or Black List.

1. After entering message content, press [SL] to enter Options menu at reading screen and select “Save Number”.
2. After entering Options menu, select “Add To Contacts” or “Add To Black List”.

Set A Received Message As Template

You may save the message content received as a template of sample folder. After entering message content, press [SL] to enter Options menu on reading screen and select “Save As Template”.

Show Must-See MSGs

This device can specifically screen out messages sent by your designated contact person; therefore you can easily and rapidly read messages sent by important friends.

1. After entering phone book and selecting a contact, press [SL] to enter

Options menu and select “Edit”, and then press [SL] or [ok] to edit information of contacts.

2. Selecting “Show Must-See MSGs” by using [↑][↓], press [←][→] to switch to “On” and press [SL] to confirm saving.
3. Entering Inbox, press [SL] to enter Options menu and select “Display Must-See Message”.

Receive POI Messages

When you receive a POI message, which means someone has sent you a POI message! You may use this message to import new spot information to your “POI” database.

After opening POI message, the screen will pop-up a message window “Import POI”; if you choose “Yes”, then new spot information will be imported into your database. It will display related location of this store by opening map again after importing.

If you choose “No”, this message will be held in Inbox. It will ask you again “Whether to import into POI?” as next time entering Inbox and open said message.

Outbox

Outbox stores successfully sent messages. If you setup “Send and Save” before sending message, the sent messages will be saved in Outbox. The messages are arranged by sending time; the more recently sending messages take priorities.

Read Messages In Outbox

1. Under “SMS Management “ list, select “Outbox”, and then press [ok] to read message content after selecting messages.
2. Or, after selecting messages from “Outbox”, you may press [SL] to enter Options menu and select “View”, “Delete”, “Send SMS”, “Forward”, “Dial”, “Save Number”, “Move”, “Copy”, “Save As Template” or “Delete All”.

Resend Messages From Outbox

You may resend messages from Outbox.

After selecting message from “Outbox”, press [SL] to enter Options menu and select “Resend”.

Delete Messages In Outbox

After selecting messages from “Outbox”, press [SL] to enter Options menu and exercise “Delete” to selected message, or exercise “Delete All” to whole Outbox.

Set A Sent Message As Template

You may save a sent message as a template.

After selecting a message from “Outbox”, press [SL] to enter Options menu and select “Save As Template”.

Create Messages

You may use this function to edit message and send it to other phone users.

1. Under “SMS Management” list, select “Create Message” to edit message content on preview screen of a blank message.
2. As the content preview field is highlighted, press [SL] to enter text editing screen and enter texts.
3. After entering the editing screen of message content, you may press [SL] to enter Options menu and select “Use template” to insert sample content, select “Insert EMS Sound” to add built-in sound effect, “Insert EMS Picture” to insert expressions, or select “Insert EMS GIF” to insert built-in animation.
4. Press [ok] to finish after editing completed.
5. Returning message preview screen, the content preview field will display the message content you just edited.
6. In Recipient field, press numeric key to directly enter numbers and press [SR] to clear numbers.
7. Or, press [SL] to enter Options menu, you may select “From Phonebook” or “From Group” to directly set contact person as recipient.

After editing content and recipient number, you may press [ok] to send, while the screen will pop out “Please Wait”. After successful sending, the “Message Sent” will show up. If the message is failed to be sent, the screen will pop out “Message Sending Fail, Being Saved to Draft”, and has been saved to Draft file to continue sending procedures.

My Folders

In SMS Management, this device offers you 7 default folders that allow you to save messages into data file by categorization just like managing document files in PC, which helps you to manage messages with varied importance or meanings.

Naming My Folders

The name of customized storage file could be duplicated; in which Chinese are up to 9 characters and English are up to 15 characters.

1. Select “My Folders” under “SMS Management” list.
2. Select the folder for editing, press [SL] to Options menu and select “Rename” to enter full text editing screen.

Move or Copy Messages to My Folders

You may move or copy messages to My Folders from “Inbox” or “Outbox”, or move between each other.

1. After entering “Inbox” or “Outbox”, select the message you want to move, and then press [SL] to enter Options menu and select “Move”.
2. Entering “My Folders” list, select desired message storage folder.
3. If you want to save message to My Folders by using copying, please select message you want to move after entering “Inbox” or “Outbox”, and then press [SL] to enter Options menu and select “Copy”, in which the message processing procedures and moving ways are the same hereunder.

Read Messages In My Folders

If there is message saved in My Folders, the message is arranged by time, alternatively it will show <Folder1>to <Folder 7> before the folder names are renamed.

1. After entering “My Folders”, select desired folder.
2. After that, you may select message you intend to process from message list, and press [SL] to enter Options menu and execute functions.

Drafts

Drafts folder saves messages fail to be sent or unfinished message you have edited.

1. Select “Drafts” under “SMS Management”.
2. After entering, select messages you want to read and press [ok] to enter view content, or press [SL] to enter Options menu and choose executing “View”, “Edit”, “Send”, “Delete” or “Delete All”.

Templates

Templates folder saves message content you have edited in advance. This device provides you ten default templates; you may create addition by yourself.

Using A Template To Create A Message

After entering Templates folder, select the template you desire, and then press [SL] to enter Options menu and select “Create Message”.

Create A Template

1. After entering Templates folder, press [SL] to enter Options menu and select “New Template”.
2. Entering full-screen text editing screen, press [ok] to save and return

Templates folder after completing edition.

Delete A Template

After entering Templates folder, press [SL] to enter Options menu and select "Delete".

Message Settings

1. Select "Message Settings" from "Messages" features list.
2. Select "SMS Settings", then select items you want to modify, including "SMS Service", "Network Settings", "Connection Priority", "Delivery Notice", "Reply Path" and "Storage Location".
3. On the screen of message setting, you need to press [SL] or [ok] to confirm saving after completing any setting.

- "Message Service"

To modify message service content, press [ok] to enter, in which there is three items available for editing:

- ◆ "SC Number":

This is the number that system service provider uses for processing your delivering messages. To change it, please inquiry your system service provider for available numbers. The number is a default set by your SIM card.

- ◆ "Valid Period":

System will try to continuously send failed message within valid period. You may choose "1 Hr", "6 hrs", "1 Day", "3 Days", "1 Week", and "Maximum". The default value is maximum and the length of time is varied depending on system provider.

- ◆ "Message Format": :

The options are "Text", "Fax", "Page" and "Email". The default is "Text".

- Network Settings: same as "Phone Manager" → "System Service" → "Network Settings"

- Connection Priority: you may choose "GPRS Priority", "GSM Priority", "Use GPRS Only" and "Use GSM Only".

- "Delivery Report "

You may set whether the system automatically reports status of sent messages. The default is "Off".

- "Reply Path"

You may choose whether or not to appoint recipient replying message to your designated message center number. The default is "Disabled".

- "Storage Location"

You may choose to the message storage location as “Phone” or “SIM”.
The default is “Phone”.

- ◆ Select this time, using [←][→] to switch selected items.
- ◆ After completion, Press [↓] to move to next field for editing, or press [SL] or [ok] to confirm.

MMS Message

In addition to text, MMS message (Multimedia Messaging Service, MMS) content may be added into voice, picture, video or other types of attachments. Before using MMS message features, please apply to your system provider for enabling WAP or GPRS service!

Using general MMS message function:

1. Select “Messages” at Main Menu.
2. Select “MMS” under “Messages” features list.
3. After entering, you may select “Inbox”, “Outbox”, “Create Message”, “Drafts”, “Templates” and “Message Settings”.

MMS Inbox

Inbox saves MMS messages received, which messages are arranged by received date, the more recently messages take priorities. Either subject or sender number will be displayed on each message.

There are three types of message saved in Inbox:

One is downloading notice, which content only includes message subject, sender, copy, sending time and capacity, and the other two types are general unread and read MMS messages.

View Download Notice

Download notice contains MMS content information that notifies user and thereby decide whether or not to download this MMS.

You can process following steps by moving cursor to download notice:

1. Press [ok] to process downloading.
2. Or, press [SL] to enter Options menu and execute “Download”, “Delete”, “Use Number” or “MMS information”.
 - Download: enter download screen, which will show the percentage processed
 - Delete: delete this notice
 - Use Number: save the number of sender as a new contact.
3. After downloading completed, this notice will be automatically deleted.

View A MMS Message

1. Select "Inbox" at "MMS" features list.
2. Move to the message you want to read, and then press [SL] to enter Options menu and select "Play" to play message, or press [ok] again to play.
3. During playing a single MMS, press [SR] to stop playing. After playing stopped, you may press [SR] to return, or press [SL] to enter single MMS option menu.
 - Play: play MMS from beginning
 - Save Image: saving pictures in the content to SD card
 - Save Audio: saving sound in the content to SD card
 - Save Attachment: saving non-picture or music attachments of message to SD card

Under message list, you may press [SL] to enter Options menu and execute "Play", "MMS Info", "Reply", "Reply To All", "Forward", "Delete", "Delete All", "Use Number". The operations of this function are same as SMS.

MMS Outbox

These functions of this folder are similar to "SMS Outbox".

Create A MMS Message

You may use this function to edit MMS message and send it to other phone users. Before sending MMS message, please confirm with your system provider whether the GPRS and WAP service message content are enabled. In addition, your counterpart also needs to have this service.

The editing and playing idea of MMS message is the same as a slide, which one page can only insert one MMS object (sound, picture, video or attachment) and one paragraph, otherwise you need to add a page for inserting second MMS object.

1. Select "Create MMS" from "MMS Management" features list, and t enter preview screen of blank message.
2. Edit message content
Move cursor to "Edit Content", press [SL] to enter MMS message content editing, in which the [SL] Options menu on blank content screen is as follows:
 - "Add Text": enter text editing screen
 - "Add Image": enter SD Card to select picture files

- “Add Audio ”: enter SD Card to select sound file
- “Add Attachment”: enter SD Card to select file

After selecting, you may enter single page preview screen and press [SR] to finish and return message preview screen, or press [SL] to enter Options menu and continue editing process. If you want to add other objects in original screen, then press [SL] to enter Options menu to continue insert new page or editing object.

3. Editing “To” 、 “CC ” 、 “Bcc” fields:

If that field is blank, then press [SL] to directly enter Options menu. If you choose “Add Number”, then press [SL] to choose existed contact from phonebook. ; you can choose” Add Email” to edit the email address. At the MMS preview screen which recipients are already chosen, ypu can press [SL] Options menu including” Add number”, “Add Email”, “Edit ”and “Delete”.

4. Edit Subject:

When moving to said field, press [SL] to enter full-screen text editing screen.

5. After completing edition, press [SR] to finish editing on editing message screen and enter sending Options screen, which you may select “Send Only”, “Save & Send”, “Save To Drafts” “Options” and “Exit”.

6. After selecting sending, the “Please Wait” screen will pop out, and it will show <Sent> by successful sending. If message is failed to be sent, then “Delivering Failed, Saved To Drafts”.

MMS Drafts

The operational functions of this item are same as message drafts.

MMS Templates

MMS Templates folder saves the message content you have edited in advance. You may press [SL] to enter Options menu of sample list:

- Play: play message content from beginning
- MMS Info: view MMS information
- Create MMS: create a new MMS containing the chosen template content.

MMS Message Settings

1. Select “Message Settings” in “MMS” features list.
2. After selecting “Message Settings”, select items you intend to modify, including “Deliver Settings”, “Receive Settings”, “Message Filter”, “Editing

Profile” and “Memory Status”.

- ◆ Send Settings: you may modify this setting before sending each MMS.
 - “Valid Period”

System will try to continuously send failed message within valid period. You may choose “1 Hr”, “12 Hrs”, “1 Day”, “1Week”, and “Max”. The default value is "Maxi" and the length of time is varied depending on system provider.
 - “Delivery Report”

You may set whether or not to automatically send MMS message to you by system after you sending MMS message.
The default of said sending result of MMS message sending is “Off”
 - “Read Report”

You may set whether or not to receive read report after the recipient has read it, the default is “Off”.
 - “Priority”

This item allows you to set the priority of sending said message. There are “High”, “Normal” and “Low” available for selection and default as “Normal”.
 - “Slide Timing”

The interval seconds play between MMS pages, which is between 1~60 seconds.
 - “Delay Delivery”

To schedule the length of time before sending, which default as “ Immediate”.
- ◆ Receive Settings
In general, the related settings for MMS receiving are unnecessarily to modify, including “Main Network”, “Roaming Network”, “Read Report” and “Delivery Report” .
- ◆ Filters
 - From Anon.: change the receiving switch of incoming message sent by anonymous sender, which default as “Allow”.
 - Maximum Receive Cap.: the default is 50k.
 - Adv.Message: set the receiving ways of advertising message, which default as “Allow”.
- ◆ Edit Profile: for details, see “Internet” →”Network Settings” →”Connection Settings”
- ◆ Memory Status: view the used and unused status of MMS memory.

Broadcast Message

Through this function, you may receive real time message from different subjects, such as stock market overview or highway traffic situation.

Before using this function, please confirm with your system provider whether this service is enabled.

1. Select "Broadcast Message" under "Message service" features list.
2. Select setup item
 - Receive Mode: press [←][→] to switch to On or Off
 - Channel Settings: there are five channels available for setting. After entering by pressing [SL], you may choose "Select " "Add", "Edit", "Delete" to change channel name and number
 - Languages: press [ok] to check or cancel "All Languages"
 - Read Broadcast Message: enter broadcasting message list

EMS Pic Collection

It shows EMS pictures list by entering, you may select a picture, and then press [SL] or [ok] to enter message editing screen.

4. Call History

Your latest dialed calls, missed calls and received calls would be recorded in call meters. You may view counterpart number and call time in each record. Since the Options in "Missed Calls", "Received Calls" and "Dialed Calls" are the same; we use "Missed Calls" as a sample description.

Missed Call

This function records latest 20 calls you have missed. If there are serial incoming calls with same number, the more recently incoming calls will take priorities.

1. Select "Call Meters" after entering Main Menu.
2. Entering call meters functions list and select "Missed Call".
3. Selecting missed call you intend to check, the status bar at the bottom will display the number, date and time of incoming call.
4. You may press [CALL] to make direct dial, or press [SL] to enter Options menu and select "Dial" to dial said number, "Send SMS" or "Send MMS" to send message to said contact, "Delete" to delete this dialing minute and "Save Number" to save this number as a contact.

Call Timer

To calculate the time of your last call, all dialed calls, all received calls and all calls, and you may use these calculations as references to control call expenses.

1. Select “Call History” at Main Menu.
2. Select “Call Timer” from Call History features list.
3. The information of “Last Call Time”, “Total Sent”, “Total Received” or “Sum of Time”, will show on the screen.
4. To clear total time of all related calls, please select “Reset Counter”

SMS Counter

To calculate the numbers of messages sent and received.

Data Volume

To calculate the data volume sent and received by GPRS, including “Last Sent”, “Last Received”, “All Sent”, “All Received” and “Total Count” and “Reset Counter”.

5. Dictionary

The electronic dictionary functions include English-Chinese dictionary, Chinese-English dictionary and my Bookmark. This device helps you to improve your English ability anytime anywhere! To help you to rapidly search and memorize, you can further save the commonly used English and Chinese vocabularies in “My Bookmark”.

Select “Dictionary” at Main Menu. You can also use default quick-access function in standby mode and press [SR] to enter electronic dictionary.

English-Chinese Dictionary

Search Vocabulary: after entering “English-Chinese Dictionary”, the Input bar is on top screen. Consequently enter characters you intend to look up, it will show the vocabulary index closest to your entry on screen.

1. While you are searching English vocabulary, you may press [SL] to open Options menu.
2. You may press [↑][↓] or [s↑][s↓] to the result and press [ok] to vocabulary explanation. In vocabulary explanation, use [s↑][s↓] to directly check

previous and next result. You can also press [SL] to open content explanation Options menu.

Chinese-English Dictionary

Search Vocabulary: same as English-Chinese dictionary. Enter the Chinese character you intend to look up, it will show the vocabulary index closest to your entry on screen.

After finding out the vocabulary you want, you may press [↑][↓] or [s↑][s↓] to move to this vocabulary and select to enter vocabulary explanation. In vocabulary explanation, use [s↑][s↓] to directly check previous and next data.

My Bookmark

My Booker contains “English Bookmark” and “Chinese Bookmark” which can respectively memorize 50 Chinese/English vocabularies and words. The order of entries is based on saved time, the latest saved will display on first priority. You may press [↑][↓] or [s↑][s↓] to browse bookmark.

6. Multimedia

Camera

The built-in digital camera of this device has 1.3M pixels, which can take picture with size of 1280 x1024 provide 16 image effects, 5 photo frames and 10 small stamps for photo editing; you can also adjust to macro shooting, white balance, exposure compensation, night shot, self-timer and sequential shoot. Please insert your SD card into SD card slot before shooting.

Entering Camera

1. Press [C] to enter camera mode in standby mode.
2. Or, select “Multimedia” at Main Menu, and then select “Camera” to enter.

Photo Shooting

The key functions under preview screen are:

1. By pressing [SL], you may adjust the focal distance and brightness of photo and then press shutter button for shooting.
2. You will enter this screen after shooting; if you want to keep this photo, you may press [SL] to save, or press [SR] to return and continue shooting without saving this photo.

The Photo Setting Before Shooting

- ◆ Press [SL] under shooting screen, you may enter Options menu to set shooting and image functions. Using [↑][↓] at Options menu to select “Add Frame”, “Image Effect”, “Photo Settings”, “Camera Settings”, “Self Timer”, “Sequential Shot” for related settings; or select “Photo Album” to browse photos in your phone; select “Reset” to reset all setting values back to factory settings.
- Frame
Select “Add Frame” from options menu to enter preview screen. Meanwhile, you may press [↑][↓] to scroll to previous/next photo frame and press [SL] or [ok] to select and return shooting screen.
- Image Effect
Select “Image Effect” from Options menu, the setting will be applied after returning shooting screen by confirmation. The default is “Normal”.
- Photo Settings
Set photo size and quality
- Camera Settings
Set white balance, fill light, shutter sound, exposure compensation and night shot switch
- Self-Timer: the good assistance of self-timer countdown
- Sequential Shoot
You may select 3 or 5 sequential shooting, which default as disabled. If you select “Auto Save”, then it will be automatically saved by pressing shooting shutter each time.

Photo Naming Format

The photo format shot by this device is JPEG, and the photo naming rule is “img+6 digit serial number”. If the photo you have selected to save is the tenth picture of photo album, then its file name will be “img000010. jpg”.

Photo Album

The photos you have selected to save after shooting will be automatically saved to photo album.

1. Select “Photo Album” by pressing [SL] on shooting screen.
2. Or, select “Photo Album” from “Multimedia” Options menu to browse photos in your phone.

Photo Album Screen Description:

In photo album, you can move to the photo name you intend to view, in which the top half screen will display photo preview picture, size and shooting date.

Viewing Photos in Full Screen

You may view single picture in full screen.

After entering photo album, move to the picture you want to view and press [ok] to enter full screen view.

Edit Photo—Add a Frame And Stamps

1. You may press [SL] to enter Options menu under photo list and select this function to edit photos.
2. It will enter preview screen after selecting “Add Frame sand Stamp”. You may press [↑][↓] to switch photo frames, or move stamp position on photo by using [↑][↓][←][→], and then press [SL] or [ok] to save. The new photo saved will replace the original one.

Set Photo as Wallpaper

Press [SL] under photo album to enter Options menu and select “Set As Wallpaper”.

Sending Photo to Friends By MMS

Press [SL] under photo album to enter Options menu and select “Send MMS” to enter message editing screen.

Delete Photo

Press [SL] under photo album to enter Options menu and select “Delete”.

Select Other Picture for Editing

In addition to editing photos shot by yourself, you may also select other pictures in phone or SD card for processing.

Pressing [SL] under photo album to enter Options menu and select “All Images”.

Camcorder

Before video filming, please insert your SD card into SD card slot. The length of filming provided by this device depends on your mini SD card capacity.

Enter Video

Select “Multimedia” at Main Menu and select “Camcorder” to enter.

Video Taping

You may press [ok] or [C] under video taping mode to start filming.

Video Settings before Taping

You may enter Options menu by pressing [SL] under filming screen to setup videotaping functions. Select “Image Effect”, “Video Settings”, “Camcorder settings” from Options menu, or selecting “Movie Theater” to browse video in your phone; selecting “Reset” to reset all setting values back to factory

settings.

- Image Effect: selecting “Image Effect” from Options menu, the setting will be applied after returning shooting screen by confirmation. The default is no special effect.
- Video Settings: Video Quality, File Size Limit, Record Time Limit, Record Voice , Video Format
- Camcorder Settings: White Balance, Fill Light, EV Compensation, Night Mode
- Reset

Video Naming Format

The default video saving format of this device is 3GP, in which the naming number is “v+serial number”, ex. v000001. This is ordered by way of serial number arrangement.

Movie Theater

The completed filming video will be saved to “Movie Theater”. You may

1. Pressing [SL] under video preview mode and select “Movie Theater” to enter.
2. Select “Multimedia” under Main Menu, and select “Movie Theater” to enter.

Playing Video

After entering Movie Theater, move to the video you intend to view and press [ok] to play in full screen.

Send Video To Friends By MMS

Press [SL] under Movie Theater to enter Options menu, and then select “Send MMS” to enter MMS message editing screen.

Delete Video

Press [SL] under Movie Theater to enter Options menu and select “Delete”.

Select Other Videos

Press [SL] under Movie Theater to enter Options menu and select “All Videos”.

MP3 Player

This device is also a music player. It can play music for you while in standby mode or while you are in other functional operations, and it will immediately switch to ringer as a call incoming.

First Time Play Music

1. Select “Multimedia” under Main Menu.
2. Select “Mp3 Player”
3. Press [ok] to directly play all music in this phone.

Editing My Music List

Press [SL] on play screen to enter “Advn.” and select “My Music” to enter music list under my music file, you may remove melody from list by further pressing [SL] to select “Remove”, or select “Add to Playlist” to add other music to list.

Player Operations

Under player screen, press the simulate key beneath middle dynamic playing screen to display current play status.

Advanced Function of Player

Under player screen, press [SL] to enter Options menu, in which the function Options are as follows

- Play:
Default the music playing scope to “All MP3”, this item will be automatically switched to “My Music” after editing data file.
- Play Order: you may switch to “Shuffle Play” or “Default”
- Repeat Play: you may switch among “Off”, “One”, and “All MP3”; the default is “Off”.
- Change Skin: switch 1~5 Skins
- My Music: enter the list in my music file

Background Playing

You may press any key to exit music player after starting music play. After exiting screen, you may operate all functions without pausing music play. To turn off music play, you may enter player and press [ok] to stop, or directly press [End] in standby mode.

Recorder

You may use this device as a recorder to record important meetings, conversations or various sound recordings.

Select “Multimedia” under Main Menu and select “Recorder” to enter.

Voice Recording

Under recording preparation screen, press [SL] to choose “Record” to start recording, press [ok] once during recording to pause and press again to continue recording.

It will stop if pressing [SL] during recording or pausing and return Options by pressing [SL] while in stop.

Options

You may press [SL] on recorder screen to enter Options menu, including “Record”, “Voice Memo”, “Recording Format”.

- “Record”: start recording
- “Voice Memo”: enter My Voice Memo folder to check the recorded voice list. You may press [SL] under this list to select “Play”, “Set As Ringer”, “Send MMS”, “Append” and “Delete”.
- “File Format”: the recording file format is AMR or WAV.

Recording File Naming Methods

The recording file format has AMR and WAV format, which default as AMR. The default naming method for your saved recording file is <r+6 digit serial number.amr> or <r+6 digit serial number. wav >

7. Organizer

Organizer allows you to use 9 built-in functions in this device as your close mobile secretary of daily life.

Alarm

Alarm function is to alert you the important schedule in your life, which makes you keep appointment on time.

Selecting “Alarm” under “Organizer” , you will see 5 default sets. You may view alarm time and enable/disabled it. If you are first time to set alarm, please directly press [OK] to enter “Alarm 1”. You may set alarms up to 5 sets in different time.

Edit Alarm

The Options include

- Time - the alarm activated time
- From...To - the days of week you need alarm.
- Volume - the volume while alarm is activated
- Alarm Tone - the sound while alarm is activated, which divides into “Default”, “Random” and “Customize”, for “Customize”, you may select your favorite alarm ringer from “My Music And Sound”.

- Title - the name displayed on screen while alarm is activated. You may leave it blank in topic field without entering any text.

After finishing setup of above items, press [SL] to save.

Turn Alarm Off

When alarm is activated, press [SL] to stop and press [SR] to resume. After pressing [SR], the alarm will ring once in 5 minutes lasting for 30 seconds, and total in 10 times.

Scheduler

Helps to remind you on dates of attending meeting, birthdays of relatives and good friends, important anniversaries or appointments, which allows you to be prepared for everything and is blessed with luck all along.

Moving Approaches: the main screen of displays the calendar of current month, in which the year, month and week are displayed according to language Settings.

You may press [↑][↓][←][→] to move to the dates you want to check; press [S↑] to previous month and press [S↓] to next month.

On the main screen of Scheduler, press [SL] to open Options menu, including

- To Do List - display “current day” unprocessed events
- Set As Anniversary - to add certain day as anniversary. If a certain day is already set as anniversary, you may add another data on the same day
- Go To Date

You can also press [OK] to directly enter detail schedule content under main screen of Scheduler.

Add/Edit Scheduler

Select “To Do List” on calendar Options menu to enter schedule list. Select remarked items on remark screen to enter content you intend to set, and then press [SL] or [OK] to confirm.

View Current Day Schedule

If there are more than two schedules at said day, then press [SL] to open Options menu under main screen of Scheduler. The Options include

- View - press [SL] to enter schedule content
- Add - add schedule
- Edit - edit selected schedule

- Delete - delete selected schedule
- Delete All

You may use [S↑][S↓] to browse previous/next day with schedule. Press [SL] to open Options menu, including: edit and delete.

Tasks

Please refer to “Add/Edit Schedule” for the operation of unprocessed events.

Anniversary

Anniversary function allows you not to miss any special moment in your life! You may save the birthdays of relatives and good friends, Chinese and Foreign holidays, national holidays, Valentine’s Day, or anniversary such annual special days to share joy and love.

If you want to set a certain day as anniversary, you may use [↑][↓][←][→] to move to the date you intend to set under calendar main screen, and then press [SL] to open Options menu and enter “Set As Anniversary” option.

Add/Edit Anniversary Option: same as “Add/Edit Schedule”. The anniversary topic is subject to 9 characters.

Delete Anniversary

Pressing [SL] under browsing anniversary screen to open Options menu and move to “Delete” option.

Periodical Event

Periodical event function offers executions to non-anniversary events, which allows you to have more setup selections and also will actively dial number and send messages for you.

Add Periodical Event

After entering the main screen to add periodical event, the following entry is same as “Add Schedule”. The “Auto Event” under “Periodical Event” provides

- Change Wallpaper
- Change Profile - there are general, meeting, quiet and outdoor modes.
- Ringtone - you may set auto ringer switch according to different

occasions and moods. For example: one set of ringtone associated with devoted and professional attitude at work, meanwhile the other set of ringer is in accordance with vital spirit after work.

- Call - you may use this function to set auto dialing to your friends and wake them up. For instance, setting auto dialing from this device to your good friend at 6:00 for Morning Call while you are sleeping! Using this function to replace counterpart's alarm or remind the other party that it's time for departure, are you ready?
- Send Message - you may use this function to set auto sending message to overseas relative and good friends, or sending message at certain time. For example: setting auto sending message to concern and bless your friend for good luck in exam after he/she finishes entrance examination of graduate school.

After selecting desired "Auto Event" setting, press [SL] or [OK] to edit.

Calculator

Function Key Used In Calculator

M +	use memorized number as the number to be added, and then set addition result as memorized number
M -	use memorized number as the number to be subtracted, and then set subtraction result as memorized number
MC	set memorized number as 0
MR	read memorized number
+	plus sign
-	minus sign
X	multiply sign
÷	Divide sign
=	equal
#	Decimal point

Right soft 1. Clear, delete from last digit

2. Exit calculator function and return "PIM" Main Menu

Unit Converter

There are weight, length, volume, Area and temperature in unit converter, providing you unit comparison table of different system in various countries that is clear at a glance.

Select "Unit Converter" function from "Organizer" Options menu, you will see following Options, including

- Weight
- Length
- Volume
- Area
- Temperature

Please enter the unit number intending to be converted, this device will offers you all other conversion references.

World Clock

Allow you to check the time in major cities all over the world. Make you easily control every moment while traveling all over the world.

Select “World Clock” to enter world map, and then use [←][→] to browse regions in different longitude, by which the current major city names will be displayed following the movement of your cursor.

Press [SL] to enter city list and select the city that you intend to set by using [↑][↓].

Timer

Timer offers “Typical Timer” and “nWay Timer”. You may select most appropriate time counting method depending on practical situation.

Typical Timer

“Typical Timer” Options includes

- Split Timing
- Lap Timing

“Split Timer” can successively record 20 accumulated numbers. After entering this screen, press [SL] to start first timer, and then press [SR] for separate timer and enter next timer. For stopping timer, you may press [SL]. The last record is total time of all timers.

“Lap Timing” can successively record 20 single numbers. After entering this screen, press [SL] to start first timer, and then press [SR] to start over next timer. For stopping timer, you may press [SL]. All records start from zero.

- “Check Record” offers you to browse or delete saved records.

nWay Timer

“nWay timer” offer you four different timers.

Press [↑][↓][←][→] to select items, press [SL] to start timer and press [SL] to stop.

8. File Manager

File Manager includes My File, All Music And Sound, All Images, All Videos and Browse SD Card , which allow you to easily browse and classify all sound and image files by using photos shot by built-in camera and GIF/JPEG format films. You can also view and manage your downloaded music and ringer here.

My File

You may quickly browse your favorite and commonly use files through “My Files”. In “My Files”, this device offers you the shortcut to factory default files from “My Ringtone”, “My Wallpaper”, “My Frame and Stamp” and “My Animation”. You may establish a shortcut here for added files afterward through “All” category.

When you first time open “My File”, you will see following classifications, including:

Music/Sound Category

- My Ringtone - there are many default sets available for your selection. You can establish a shortcut here for your downloading ringers through “All Music And Sound” Options.
- My Music - You can establish a shortcut here by adding melodies to “My Music” from” All Music And Sound” Options.
- My Voice Memos - This device will automatically establish a shortcut here from your voice file recorded by built-in recorder.

Image Category

- My Photo - default as blank. This device will automatically establish a shortcut here for your photos shot by built-in camera. Meanwhile your downloading pictures and photos sent by friends and family will be stored in “All Images”. You may establish a shortcut here from “All Images”.
- My Wallpaper - there are many sets of default wallpapers available for

your selection. You can establish a shortcut here for your downloading wallpapers through “All Images” Options.

- My Frame And Stamp - there are many sets of default photo frames and small stamp stickers available for your selection. You can establish a shortcut here through “All Images” Options.
- My Animation - there are many sets of default animations while turning on/off available for your selection. You can establish a shortcut here through “All Images” Options.

Video Category

- My Video - default as blank. This device will automatically establish a shortcut here for your film taped by built-in video camera.

My Ringtone

- enter “My File” and then select “My Ringtone”, in which you will see shortcuts locating ringtones offered by this device and ringtones will play automatically. You may add downloaded ringtone by your own to “My Ringtone” in the future.

You can also select incoming ringtones you like here, which ringtone will be set as incoming ringtone by selecting.

Press [SL] to open Options menu, which provides

- Set As Ringer - press [SL] or [OK] to confirm
- Remove—Remove the file link from “My Ringtone”
- Delete - please press [SL] to delete shortcut; if it is not a factory default ringtone, this device will also delete the physical files saved in “All Music And Sound”.
- Send MMS

My Music

My Music - your downloaded music will become your play list through “All Music” Options. Please press [SL] to open Options menu and press [OK] to play directly.

My Voice Memos

The Options include play, remove, delete, set as ringer, send MMS.

My Photo

The Options include view, remove, delete, set as wallpaper, send MMS.

My Wallpaper

The Options include view, remove, delete, set as wallpaper, send MMS.

My Frame and Stamp

The Options include view, remove, delete, send MMS.

My Animation

The Options include view, delete, set as Power On animation, set as turn off animation, send MMS.

My Video

The Options include play, delete, send MMS.

All Music And Sound

In addition to factory default music, this device will automatically arrange your downloaded music afterward to “All Music” file folder, in which you may add customized ringtones up to 30 sets.

All Images

This device will automatically arrange photos shot by built-in camera and your downloading pictures afterward to “All Images” folder.

All Video

There is no factory film attached in this device. This device will automatically arrange your downloading films afterward to “All Films” file folder.

Browsing SD Card

Before processing this function, please insert the SD card. After entering, this device will display the memory space and data file in SD card. The photos/films shot by built-in camera and all downloaded files will be saved in SD card.

You can view all file folders in SD card through “Browse SD Card”. You may press [SL] to execute different functions aiming at different files.

9. POI

“POI” is a built-in database of Taiwan map and information, including MRT routes, all kinds of store information and maps, street locations and updated entertainment information. This information is called POI (Point of Interests).

1. You may press [←] on standby mode to directly enter “POI” main screen.
2. Or select “POI” in Main Menu.
3. Select a category of your choice.

Checking Map From POI

As viewing the map, you may use [S]and[S]to zoom in and zoom out, or move up and down to easily view and check the detailed information on certain map location.

How To Search Store Information On Map Screen

The built-in map information point in this device is not only a noted location, but also containing the detailed information of this location or stores. You may move to the area that you intend to view, and then press [SL] to enter Options menu and execute searching related functions to that area.

The Options menu function on map screen are as follows, you may press [SL] or [ok] to execute

- ◆ Selected POI: List POIs recommended by Gigabyte around the area.
- ◆ POI List: display the stores within area shown on the map by table.
After entering single store information, list the detailed information of said store, including store name, address and telephone number.
- ◆ Street Search: enter street name on searching screen to see detailed map searching
- ◆ POI Search: enter store name on searching screen to see detailed map searching
- ◆ Create My POI: return original map view screen, move to your aiming location by using [↑][↓][←][→] and press [ok] to enter full selection screen of customized location.

Advanced Application of POI Information

After entering Options menu under map screen, select “POI List”.

There are Food & Fun, Trans./Educ., Fin./Med., Misc. on the list. You may switch classified groups on topic line by using [←][→] to view stores list in different categories.

After entering stores list, select the store you want to check, and then press [ok] to view detailed information.

The detailed information includes store name, telephone number and address.

Under detailed information screen of said store, you may

- Dial: you may press [Call] to make a direct call as the telephone number showing on data screen.
- View Map: press [SL] to open Options menu and select “View Electronic Map” to view the surroundings of said store.

- Add To My Fav: add this store to my favorite collection, see page X My Favorite Settings for details.
- Recommend to: send the coordination and information of this store to friends by message. You will enter message-editing screen by entering, and then edit the content plus your recommendation!

Set My Favorite

You may collect the most frequently going or interesting places to “My Favorite” for saving searching time.

Under the detailed store information screen, you may press [SL] to enter Options menu and select “Add To My Fav”.

Browse My Favorite

Under both POI function and map screen, you can press [S Enter] to enter my favorite.

There are 6 groups in my favorite: “GBC Service Center”, “Recommendation”, “Gourmet”, “Fun”, “My POI”,.

MRT Guide (Subway)

Checking All Stations on MRT Routes and Surroundings Map Information

You may select a MRT/Subway line from all MRT routes, and then select the map of station surrounding area that you intend to check with.

1. Following POI main screen, select “MRT” by using [↑][↓][←][→] and press [ok] to enter.
2. A route containing all MRT stations will show by entering, move to the line you intend to check by using [↑][↓][←][→], by which the selected line will glitter and appear 3D condition, and then press [SL] to enter stations list along said line.
3. Entering stations list of this line you have selected, move to the station you intend to check and press [ok] to enter, then you will enter the map of said station. You may also press [←][→] to switch to stations list of other lines.

Yellow Page

Searching All Kinds Of Institutions And Store Map Information In Taiwan

This function offers you to search all store classifications in Taiwan. You may progressively search places you need through classified catalog. First tier includes “Governmental Organization”, “Public Service Industry”, “Finance

/Stocks”, “Education And Art”, “Restaurant”, “Transportation”, “Shopping”, “Medical Health” and “Entertainment”.

1. Select “Yellow Page”.
2. The whole Taiwan map will show after entering, following move selection to the region you want to search.
3. Entering first life function category and moving selection to enter by confirmation.
4. Go through each category to get in store name for searching, and press [SL] or [ok] to enter detailed information of said store.

Gourmet

Searching All Kinds Of Restaurant Map Information In Taiwan

Entering this function, you may progressively find a restaurant through classified catalog. First tier includes “Chinese Food”, “Western Food”, “Asian Flavor”, “Thematic Gourmet Food”, “地方小吃 Local Snacks”, “Café”, “Fast Food” and so on.

1. After entering POI main screen, select “Gourmet Restaurant”
2. The whole Taiwan island will appear by entering, following select the area you want to search.
3. Enter first restaurant category, move selection and enter category by confirmation.
4. Go through each category to get in store name for searching, and press [SL] or [ok] to enter detailed information of said store.

Fun

Searching All Leisure Travel Places In Taiwan

Entering this function, you may progressively search a travel place through two tiers of classified catalog. First tier includes “Tourist Attractions”, “Hotels”, “Health And Leisure”, “” and so on.

1. After entering POI main screen, select “Fun”.
2. The whole Taiwan island will appear by entering, following select the area you want to search.
3. Enter first tier category, move selection and enter category by confirmation.
4. Go through each category to get in store name for searching, and press [SL] or [ok] to enter detailed information of said store.

Map Search

Searching All Streets in Taiwan

As long as knowing the name of a certain store or certain street, you can use this function to find the detailed information and street map of this store.

1. After entering POI main screen, select “Map Search”.
2. The whole Taiwan Island will appear by entering, following select the area you want to search.
3. Select “Street Search” or “Poi Search” function you intend to use.
4. You may key in string to entry line after entering road/street prefix searching screen. The bottom table will list the searching result according to current entry value. You may move to find matched data and press [ok] to enter street map.
5. If entering store searching, you may also key in string to entry line. The bottom table will list the searching result according to current entry value. You may move to find matched data and press [ok] to enter street map.

Recommendation

Browsing New Travel & Entertainment Information Provided By Famous Magazine

This recommendation is collections of entertainment information provided by five magazine publishers and mobile phone stores including Taipei Walker. Each special issue has route excellent in both pictures and literatures and vivid introduction, you may select interested issue for further reading!

Create Your Own POI

Press [SL] to enter Options menu under map screen and select “Create My POI”.

1. Returning the street area you just have browsed, where there is an aiming spot appeared on top of screen. You may use direction key [↑][↓][←][→] to move aiming spot up, down, left and right. After finding the location you want to define, press [ok] to enter group selection screen, and then press [ok] for confirmation after selecting a group.
2. After confirming a group, you may move to each field for editing data.
 - ◆ Press [ok] to enter full text editing screen on “Name”, “Address” and “Memo” field.
 - ◆ Directly enter number on “Tel” field
3. After finishing all editions, press [SL] to save settings, by which the information spot is successfully added!

10. Fun & Games

Welcome to entertainment! This device provides Games, pedometer and JAVA applications. This device is your close specially appointed entertainment agent that increases your life enjoyment and surprise. You can also upload and download latest games from websites in the future!

Games

By using 3-axis sensor, Games creates surprisingly entertainment effect, which allows you to relax anytime during busy life.

After wearing hanging ring, shake your device horizontally and let it decide your opportunities and good luck.

The Games are:

- Dicer - please select your dice numbers
- Lottery Balls - please select your power ball numbers
- Bua-Bei

Pedometer

Pedometer is your exclusive bodybuilding instructor who provides you fist hand health information to keep you in best shape.

If you intend to record your daily activity level by “Pedometer”, select “Pedometer” from entertainment Options, and then select opening pedometer. You may enter “Pedometer” to check records by end of day or after exercising.

This Device Offers

- Walking Timer - The total time starting from previous timer activation to this checking.
- Total Walking Steps - every step leaves its print. Let this device record your trace of life.
- Speed - dividing into stroll, walking, jogging and running. Check here to see how fast you are!

JAVA

There are a numerous sets of built-in 3-axis JAVA games in this device. Please select games you like from contents and experience outstanding entertainment effect according to related description of this device.

11.WEB

The built-in browser in this device supports WAP 2.0, which allows you to browse all WAP pages on wireless network. You may also receive all kinds of service messages from system provider from WAP Inbox, such as news, weather and financial and economic messages.

You may enter "System Settings"→"General Settings"→"Keyboard" to set shortcut of "Right Function Key" as "HiGIGA". You may press [SR] to directly connect GIGA-BYTE mobile WAP pages in standby mode.

Web Page Connection

1. Select "Internet" at Main Menu.
2. Select "Homepage" to enter. You will enter the homepage you have set, or directly connect to the home page of system provider if it is never been set.

Browsing Web Page

Under browsing web page screen, you may use arrow key [↑][↓] to scroll web pages view screen, or press [SR] to end web pages browsing. If moving cursor to objects available for downloading, you may press [ok] to execute downloading functions.

Press [SL] to enter Options menu and execute following functions

- ◆ Connect
- ◆ Exit: end Internet access functions
- ◆ Refresh: rearrange web page of said website
- ◆ Disconnect: halt the downloading process while the web page is in data downloading
- ◆ Homepage: connecting home page
- ◆ Set As Homepage: set current website as home page
- ◆ View URL: view current website connected and press [SR] to return normal website view screen after viewing.

- ◆ HiGIGA: connecting GIGA-BYTE mobile WAP page
You may also select “Internet” from Main Menu and select “HiGIGA” to enter.
- ◆ Go To... : enter the website directly on screen, and press [SL] to confirm connection after competing entry
- ◆ History Record: list 20 latest websites you have browsed
You may also directly select “Internet” from Main Menu and select “History Record”.
 1. After entering history record web pages list, you may select web page and press [ok] for connection.
 2. Or, press [SL] to enter Options menu and select exercising “Connect”, “Set As Bookmark”, “Delete” and “Delete All”.
- ◆ My Bookmarks: save 10 web page topics of Bookmarks you have set
You may also directly select “Internet” from Main Menu and select “My Bookmark”.
From “My Bookmark” list, you may press [SL] to execute “Connect”, ”Edit”, “Send SMS”, “Delete” and “Delete All”. “Send SMS” is to enter message content editing screen and copy the website of Bookmark that facilitates you to share websites with good friends through message!
- ◆ Set As My Bookmark: set current web page as one of Bookmarks. It will show Bookmark screen by entering. On “Title” and “Address” field, you need to press [ok] to enter full text editing screen, and then press [SL] to save and exit after editing.

WAP Inbox

The WAP message sent by system provider will be saved here. If the WAP message contains websites, you may directly connect them.

1. Select “Internet” from Main Menu.
2. Select “WAP Inbox”
3. Under WAP message topics list, you may select message your want to read and enter into its content.
4. After selecting message topic, press [SL] to enter Options menu and execute “Connect”, “Delete” and “Delete All”. You may directly connect to website within message content by using “Connection”.

First Time To Enter Internet Access

There are built-in network connection setting file of 4 system providers in Taiwan and 1 blank setting files. You only need to enter “Connection

Settings” to select your system provider to activate setup files after inserting SIM card, then you can directly apply network connection related setting values. You may also enter setting items for modification.

1. Select “Internet” from Main Menu.
2. Select “Internet Settings”
3. Select “Connection Settings”.
4. After selecting the name of your system provider, press [SL] to select “Activate Profile”.

Edit The Connectivity Profile From System Provider

This device has default setup file of Chunghwa, Taiwan Mobile, Far Eastern and Pan Asia four system providers. You may edit the related connection setup by your own or add setup file. We recommend you to acquire correct information from system providers before editing process.

1. Select “Internet” from Main Menu.
2. Select “Internet Settings”.
3. Select “Connection Settings”.
4. After selecting the name of your system provider, press [SL] to enter Options menu.
5. Select “Edit Profile”.
6. The setup files of each system provider include “WAP settings”, “CSD settings”, “GPRS settings” and “MMS server settings” for editing.

Other Settings

1. Select “Internet” from Main Menu.
2. Select “Internet Settings”.
1. Select “Other Settings”.

The setup items available are: “Show Image”, “Clear Cookies”, “Clear Password” and “Reset to Factory Sett”.

Downloads

The downloaded data saved in the device maybe are image, sound or JAVA programs. The storage location is “Downloads” data file in SD card.

1. Select “Internet” from Main Menu.
2. Select “Download s”
3. Select objects you have downloaded, and then press [SL] to enter Options menu to execute”Open” or ”Delete”.

12. System Settings

This item offers you browsing and setting all mobile related Settings, including Font, Language, Date Time, General Settings, Themes, User Profiles, Security Settings, Power-saving Mode, and Factory Settings. You may also setup your exclusive thematic modes that allow this device be your personal characteristics from inside to outside!

1. Select "System Settings" from Main Menu.
2. Select functions you need

Font

This device provides "Large", "Medium" and "Small" three fonts you're your selection.

- **Font Change**

After entering "Font ", click the selected font size and press enter, by which the screen display will be updated by the font you have selected.

Language

Go to "Language Settings" and select "Language". This device will display the language you have selected by confirmation.

Default Input Method

You may default your commonly used input method to enhance text entry efficiency.

Set Date Time

This function allows you to set city, date and time, the format of date and time display, which allows you to easily control time no matter where you are.

City

Pease use [↑][↓] to move to current city you are in, and press [SL] or [ok] to confirm.

Clock Settings

Pease use [↑][↓] to move to the item you intend to set, and press [0~9] to edit. If you activate "Daylight Saving", then the default time will automatically adjust to an hour earlier.

Date format

Time Format

General Settings

You may set the mobile appearance and operations of various functions by this item, including: ring settings, screen settings, LED indication settings, keyboard settings and on/off timer.

Ring Settings

Ring Settings allows you to select customized Ringtone, Ring Volume, Call Volume, Alert Type, Keypad Tone, Message Tone, Power On/Off Tone, Slide Tone, and Ascending Ring. Please refer to following description for ringer settings.

Incoming Ringtone

It will enter ringer list as selecting “Ringtone”. This device will automatically play demo ringtone along with cursor moving, the ringer will be set as your incoming ringtone as pressing [SL] for confirmation.

You may also press [SL] to select “All Music And Sound” and select MP3, voice memo or background sound as your incoming ringtones.

Screen Settings

This item includes all Settings displayed on screen to let you change colors whatever you want and color your life! The available items for setting include: Main Menu icon, Power On/off Animation, Greeting , Wallpaper , Wait Screen, Screen Saver, Adjust Brightness , Backlight , Color , Main Menu Style.

Main Menu Icon

This device provides you unprecedented function for changing Main Menu icons, which is attached Main Menu icons available while leaving factory for you to change. You may also surf GIGABYTE service website <http://www.HiGIGA.com> to download more icons and enrich your mobile phone display!

Power On/Off Animation

Go to “All Images” from animation and select photos shot by you for Power On/off screen or use defaults of varied themes.

Greeting

You may input words you want to see after Power-on Animation

Wallpaper

You may enter “All Images” and select photos shot by you for wallpaper, or use defaults of varied themes.

Wait Screen

This item allows you to freely setup standby screen. Please check the message you want to show on standby screen.

Screen Saver

In addition to using this function to change screen saver, you may also setup activated time. To protect your personal privacy, you can also set requirement for enter power on password (see “Power On Password” under “Security Settings”).

LED Indication

This device will alert your phone status by using flashing color light. You may check the color light alert you want to activate.

Keyboard

This item includes short, backlight and keypad lock. You may set the right key function on standby mode through this function.

On/Off Timer

You can use this function to set the Power On/off time of this device.

Personal Theme Settings

This device offers you a unique personalized selection, in which you can set and save your personal themes. If the detailed setup has been changed, then it is easy to restore my favorite Settings saved by one touch. There are many sets of personalized themes as this device leaving factory, you may more easily to edit built-in themes or add new themes, as you want.

- Theme

According to different default values of themes, your mobile phone can have diversified appearing styles: including wallpaper, ringtone, font, feature mode, quick access key and Power On/off time and so on.

Under personalized themes, you may press [SL] to open Options menu and operate following functions aiming at single theme.

- **Apply**
Select desired theme from “Personalized Theme” list and select “Apply” to directly apply this theme.
- **Preview**
Preview current setup value of said theme.
- **Save Settings**
Saving all current setup of this device as a new theme, or overwrite factory built-in theme. In case that you want to restore the initial setting you used to after changing any setup item in future, you can go to personalized theme and apply your initial theme.
- **Delete**
You may delete the added theme.
- **Rename**
You may also rename the theme.

Built-in Personalized Themes

- **Valentine Theme**
Romantic and passionate pictures, ringers and quick access functions those are suitable for sharing by lovers.
- **Lady Theme**
Pleasant Mode pictures, ringers and quick access functions those are exclusively prepared for women’s private events.
- **Business Theme**
Provide businessmen the convenient side key function to enhance use efficiency.
- **Senior Theme**
The design mode aims at demands of senior group, accompanying with

clear large font and ringtone that make it easy to use and never loss any call again.

- Children Theme

The design mode aims at children. In addition to interesting pictures and ringers, it is also available for real time clock to cooperate with school schedule and facilitate children to contact parents. The default real time clock is to Power On at 3pm and turn off at 8 am. You may adjust the Power On/off time from “Real Time Clock” under “General Settings”.

Save All Current Mobile Settings

You may add new topic by saving all current Settings.

- Add Topic

Please move to <Add Topic> and select to set current setup as new topic, and then enter the name of new topic.

User Profiles

There are 4 features mode available for your selection. It will convert to headset mode as plugging headset to mobile phone, while it will automatically return previous mode before plugging headset as pulling out headset without necessity to change manually.

Following table is factory default values under various modes. You may press [SL] to enter Options menu and freely adjust all setup depending on personal demand.

Phone Mode	General	Meeting	Silent	Outdoor	Headset
Ringer Volume (0~7)	6	4	3	7	4
Incoming Call Alert	ringer	Vibration	None	Vibration plus ringer	ringer
Answer Mode	slide	slide	Answer by any key slide	slide	slide
Connecting Alert	None	None	None	None	None

Message Tone	Tone 6	None	None	Tone 5	Tone 5
Keypad Tone	None	None	None	DTMF	DTMF

Security Settings

This device is your personal database. To protect personal privacy against invasion, this device offers exclusively most confidential data security function.

Phone Password

When you select to enable or disable this function, you need to enter password. This function will be effective by correct entry. The factory default password is "1111". You may select "Edit" to change password and new password is up to 8 characters. Please keep firmly in mind the password you have set.

PIN Code

As enabling PIN code security function, you need to enter correct PIN number before successfully turning this device on. You may select "Edit" under Options screen and correctly enter password to set new PIN code. The new password is up to 8 characters.

PIN2 Password

As using certain functions such as fixed dialing, this device will ask your PIN2 code. Your SIM card owns this password. You may select "Edit" under Options screen and correctly enter password to set new PIN2 code. The new password is up to 8 characters.

SD En/Decryption

You may use password to lock SD card to protect data safety. As inserting unencrypted SD card, this item will display "Encrypt"; while the SD card is protected by password, then this item will display "Decrypt".

If the inserted SD card has been encrypted, then this device will ask for password of SD card when turning on each time. This SD card will be locked automatically if the password is incorrectly entered for ten times. Both mobile phone and common card reader cannot access data of encrypted SD card. Please select "Decrypt" first.

Icon Lock

You may use password to lock major functions. After setting password, you

need to enter power on password to enter these functions.

The confidential items available are: Call Manager, Messages, Call History, Dictionary, Multimedia, Organizer, File Manager, POI, Fun & Games, Internet, System Settings, STK.

Data Backup

When there is SD card inserted into this device, you may copy all PIM information (contact person, call meters, message) to SD card. The PIM copied in SD card can be reversibly copied back to this device.

Invisible File

Invisible file can hide the important contact person, call meters and messages. Therefore, you don't need to worry that someone would steal important information from this device when it is temporarily apart from you.

Add Invisible Contact

1. Select the contact person you want to hide from "Phonebook" and enter Pin Enquiring Screen by pressing [S Enter].
2. It will enter Invisible Code Setup screen by correct entry. Please enter 4 digit number of password in entry frame.
3. After completing entry, press [SL] to confirm, meanwhile the contact person will be saved in this invisible file.
4. If you enter the code that has been used in invisible file, then said contact person would be saved in the same invisible file.

Browsing Invisible File

After setting invisible person, press speed code to enter invisible file on standby mode:

[#]+ 4 digit invisible file code+ [#]

Under specific function screen, key in above speed code, and then you can browse invisible message and call meters under general functions.

The items contained in invisible file include: Missed calls, Received calls, Dialed calls, SMS Inbox, SMS Outbox, SMS Drafts, MMS Inbox, MMS Outbox, MMS Drafts, File Box, Invisible Contacts

You can still enter the 4-digit-invisible-file-code on the following normal screens to quick view the messages or call history related to the invisible contacts: SMS Inbox, SMS Outbox, SMS Drafts, My Files, MMS Inbox, MMS Outbox, MMS Drafts, Missed Calls, Received Calls, Dialed Calls.

Invisible Missed Call, Received Call and Dialed Call

The contact call meters between you and invisible contacts will be saved here. When there are invisible contacts calling, missed call or dialed calls, the list will only display the protecting code you have set.

Receiving Invisible Message

When there is new message from invisible man, it will only display blank content without any text as opening said message without entry password under general Inbox. Please enter 4-digits invisible file code, the message list within Inbox will display all invisible messages.

Invisible Contacts

Invisible list contains contact persons you have set in this invisible file. You may press [SL] to enter options.

- View

View the contact's name, telephone and other information

- Dial Call
- Send SMS
- Send MMS
- Remove

Remove this contact from invisible contact list to normal contacts

- Set Code

You can choose to let the caller ID shows "System Number", "No Caller ID" or "User-defined"

- Auto Del Record

The calls or messages can be set to auto-deleted after a period of time.

- All visible

Remove all the contacts from invisible contact list to normal contacts.

Restore Invisible Men

In case that you forget invisible file password, you can press [*]+[0]+[*] to enter restoring procedure. You will be required to key in correct phone numbers of 2 invisible contacts of the forgotten invisible file. As the number you keyed in are confirmed, the invisible code will display.

Master Reset

This item offers you mobile phone's IMEI code. Such information helps you for product registration or software update.

Power-Saving Mode

You can choose different levels of LCD Brightness and Keypad Light to save power.

13. STK

This function is provided by your service provider.