

## **GOCLEVER FONE 450**

**OWNER'S MANUAL** 

# VISIT OUR WEBSITE WWW.GOCLEVER.COM

TO SEE MORE PRODUCTS TAB, NAVIO, DVR, DVB-T



## Contents

APPEARANCE AND KEYPAD OPERATIONS	4
USING MEMORY CARD AS A USB DISK	5
Wi-Fi	6
Вьшетоотн	7
MAIL	8
Gmail	8
E-mail	10
DIALING	10
Messaging	14
Contacts	16
Internet Browser	17
RECORDER	19
Сьоск	19
CALCULATOR	20
Camera	20
Camera Mode	20
Video Mode	21
IMAGES	22
Music	23
Calendar	24
FM RADIO	24
SETTINGS	25
SAFETY GUIDE	30
SAFETY WARNINGS AND NOTICES	30
IMPORTANT INFORMATION	36
WARRANTY	40



## **Appearance and Keypad Operations**



- A Speaker
- **B** Power Key
- C Front Camera
- **D** Volume Key
- **E** Menu Key
- **F** Home Key
- **G** Return Key

Keys	Functions		
Home	Press this button to return home from any application or interface.		
	Press it to open recently opened application window.		
Menu	Press it to go to the menu, which allows you to perform actions in the current interface or options menu.		
Back	Press it to return to the previous interface, or to close a dialog box, options menu, notification panel or the keypad.		
Power	Press it to open the phone's menu, then you could choose to lock the screen, turn off the phone, or set it to silent mode.		
Up	Press it to increase volume, or to switch the phone to vibration mode from the silent mode.		
Down	Press it to decrease volume.		
P-sensor	Cover it to switch the screen backlight off.		
Front camera	Entering the camera interface, after switching to the front camera you can take photos of yourself.		



## **Using Memory Card as a USB Disk**


If you want to send music, pictures or other files to the memory card of the phone from a computer, you should set memory card as a USB disk first.

#### Set memory card as a USB disk

- 1) Connect the phone to the computer with a USB cable. A notification icon will appear in the status box.
- 2) Use USB mobile transmission cable to establish connection to the computer
- 3) In the notification panel, touch the USB connection, then touch "Open the USB Storage Device"

#### Uninstalling the USB Disk from computer

The procedure is the same as with connecting the disk.

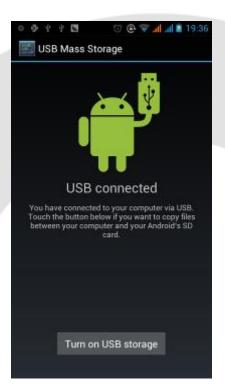

#### Cell phone connections media equipment (MTP)

1) In the Settings menu, switch the developer USB debugging options off.



- 2) Use USB mobile transmission cable to establish a connection to the computer
- 3) In the notification panel, choose the "Media equipment (MTP)" connection mode, can be used with a PC for a SD card.

#### The phone connection camera (PTP)

- 1) Use the USB mobile transmission cable to establish connection to the computer. You don't have to shut down USB debugging, see below. Images can be viewed only from the level of the Camera menu option
- 2) After the connection has been established, captured images can be viewed directly on the PC.

**Notice:** If a PC operation assistant tool such as mobile phone is used, the USB debugging must be switched on.



#### Wi-Fi

Wi-Fi provides a wireless network access within a range of up to 100 m. If you use cell phone to connect to a Wi-Fi network, you should connect to a wireless access point or a so called hot spot.


**Notice:** The availability and coverage of the Wi-Fi signal depend on the intrinsic intensity, infrastructure and other objects penetrated by the signal.

## Opening the Wi-Fi menu and to connecting to a wireless network

- 1) Press Home>Menu, then touch Settings>Wi-Fi and internet
- 2) Select the Wi-Fi to open the Wi-Fi menu. The phone will automatically search for available wireless networks.
- 3) Touch the Wi-Fi settings option. A list of Wi-Fi network will be displaying, showing names and security settings of found network. (an open network or WEP, WPA/WPA2 with password). If you enable the notification option in the

Wi-Fi settings, The status box will display this icon when open available wireless network has been found.

4) Touch one of the Wi-Fi choices to connect to the network. When you choose the open network option, the phone will connect to it automatically. If you choose WEP, WPA/WPA2 with password, you should type the password first, then touch to connect it.

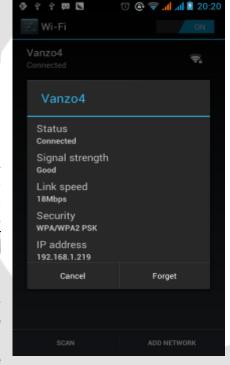

Notice: when the phone is connected to the wireless network, the status box will show this Wi-Fi icon , and the approximate signal strength (the number of lit bars). Touching the connected network will display the name of Wi—Fi network, status, speed, signal, strength, security, information and IP address. If you want to delete the wireless settings, please touch "Not reserved" as presented in the right picture. If you want to connect to this network, you should re-enter these settings.

**Notice:** unless you choose not to reserve the network, there is no need to re-enter the corresponding password when connecting to the previously encrypted wireless network the next time. The Wi-Fi module will search automatically, that is, the phone does not need to perform any additional steps to connect to Wi-Fi networks.

- 1) From the screen of wireless connections and network, touch Wi-Fi settings. The found Wi-Fi networks will be displayed in the Wi-Fi network list.
- 2) Touch to select other Wi-Fi networks, it enables you to connect to the selected network.

Notice: in addition, you can surf the internet using a GPRS connection. At the startup, GPRS in SIM1 is opened by default, users can make the selection manually, the specific location is the "Settings>Wireless and internet>Data connection", menu, touch to select "SIM1, SIM2, No data connection", when the dot turns green, the connection is open.

#### **Bluetooth**

#### Turn on Bluetooth or set the phone as available for detection

- 1) Press Home>Menu, then touch Settings.
- 2) Touch Wireless and internet, then select the Bluetooth box to open the Bluetooth functionality. Once started, the status box will show this icon . Touch "Scan for devices" to start scanning for all devices within range.
- 3) Touch Bluetooth settings, all devices found will be displayed in the list under the icon.

(select the box "Can be detected", set the device(s) to be detected, then the other Bluetooth devices will be able to find the phone.)

**Important:** maximum detecting time of the phone is 2 minutes.

#### Pairing and connecting a Bluetooth headset

- 1) Press Home>Menu, then touch Settings.
- 2) Touch Wireless and internet>Bluetooth settings, then select the Bluetooth box, then your phone will scan for Bluetooth devices within range ,and show all found devices in the list under the icon.

#### Tips:

- a. If the list does not show your equipment, touch the scanning equipment to re-scan for devices.
- b. Make sure that the desired devices are available for detection.
- 3) Touch Headset in the equipment list to finish and establish the connection.

**Notice:** Generally, Bluetooth devices need a password to be paired, they often use "0000" as the default password.



4) The pairing and connection status will be displayed under the headset in the Bluetooth devices list. When the headset is connected to your phone, the status box will show this

icon indicating an established connection. Then you can use the headset to make or receive callings.

Available Bluetooth Devices			
	Bluetooth headset		
C	Phone		

#### Closing a connection via Bluetooth

- 1) Press Home>Menu>Settings>Wireless and internet>Bluetooth settings.
- 2) In the list of Bluetooth equipment, touch or tap and hold the connected hand-free headset.
- 3) Press and select "Cancel the pairing".

#### **Bluetooth proximity sensor**

After pairing the two devices, you can test out the signal strength using the Bluetooth proximity sensor device

Mail		
Gmail		

#### Create an electronic mail account

Select Mail> Settings. You can activate or edit existing e-mail accounts as well as create a new e-mail account.

- a. Select mail, Google account creation interface is displayed. Then touch 'Next step'> Create account>Enter name, last name and the e-mail account.
- b. Google servers determine whether the name can be used, if so, a new interface is displayed prompting to enter a password, then it judges the password security, users who doesn't meet security requirements need to re-enter the password.
- c. A new Gmail account is successfully registered, containing an automatically created test message.



#### Loading mail account

- a. Open Gmail, Skip introduction screen>Logging interface appears >Select login
- b. Enter name, password then log on

After e-mail account initialization and a prompt message "Login successful" displayed, all Google accounts will be synchronized.

#### **Creating and sending mail**

In order to create mail messages, select Mail > Creating mails. Enter the address (recipient), subject and message body. Press MENU to 'Attach files', 'Add Cc/Bcc', send or discard the message.

#### Receiving mail messages

There is sound/tone for new mail messages, when one arrives, the status box will be displaying this button, Press Menu >'Refresh and update the number of unread mail messages.

#### **Deleting mail messages**

After logging to an e-mail account, if you want to delete it, you will need to restore factory settings. When logging the second time, you could press the appropriate menu button to delete it.

**Notice:** many features depend on Gmail Account, for example: Electronic Market, Google Talk, Sync Contact and Calendar.

#### E-mail




#### **Load Email**

a. Open a network connection,

b. When setting the account interface, provide a correct email address and password and then click mobile phone to have it automatically completed sending and receiving server Settings. Defined frequency of Pop-up e-mail checks and use the user Settings interface,

complete Settings, click Next.

c. In order to select a name for the newly created account, enter a user name, and click next. A new, synchronous mailbox is created.

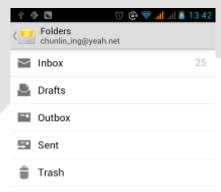

#### **Creating and sending Email**

When creating mails, select Mails > Create mails. Enter the address (recipient), subject and message body. From the MENU level one can 'Attach files', 'Add Cc/Bcc', send and discard messages or save them as drafts.

#### **Checking E-mail files**

Click on the bottom folder options, all folder options will be displayed.

## **Dialing**

When the icon of internet server is displayed on the screen, it is possible to make or receive calls. The signal bar in the top right corner shows the strength of the network signal (the maximum is 4 signal bars).

#### Start dialing

Open application's main menu>Dial. You may choose SIM1 or SIM2 to do the dialing.

#### **Dialing**



From the dialing Keyboard enter the phone number and then click the dialing key, after that you should choose one of the SIM cards or an internet call. If it is necessary to call the extension, you could click the "dial pad" in the bottom of the screen to open the interface or press menu key to select "delay 2 seconds", and then enter the extension number.

Options other than a dialup of a number entered fro, the keyboard include clicking Menu and choosing an IP dial-up or a speed dial.

Video call: a video call usually refers to the Internet and mobile Internet based (3 G Internet) connection, with the phone acting as a transmitter of real-time speech and image (face of the caller, photographs, items, etc.) as a way to communicate. Only 3G connections support this function. Enter a number, click Video dial-up, once the call is answered, both callers can participate in a video call using the built-in camera.



#### Telephone calls in the call log

Every telephone number called and received in "SIM1, SIM2" will be saved in the phone's menu of a call log. In the top left part of every call record "SIM1 or SIM2" will be displayed

All numbers in the call log can be dialed by clicking the button "Dial" on the right side of the screen.

When number list is displayed, click it to catch details; pressing it for a longer time enables dialing using "SIM1 or SIM 2", in the meantime the user can edit, delete, save the number or do other operations.

#### **Receive callings**

When a call incomes (top left part will display the SIM card being called) press "Answer" and slide towards right until the middle button, then the calls may be received.

#### **Proximity sensor**

The sensor will automatically adjust switching the backlight, depending to the distance between phone and human body.

During the call, placing the phone close to the ear will cause the backlight to turn off automatically, which saves the battery and prevents inadvertent touching.




#### Refusing to answer the calls

- a. When a call is incoming in a standby mode, press the "Refuse" button and slide towards left side until the middle button, then the call may be refused.
- b. When a call is incoming while the phone is being used, click on the "Refuse" button to refuse the call.

#### Two-way call/multiparty call (conference call)

**Notice:** this function needs a SIM card supporting the multiparty call feature.

- 1) A call is already active in the phone
- 2) Click "Add calls", make another call (or receive another call, phone opens "call waiting" by default (settings—dialing settings—other dialing settings), after both parties are connected one can view the status of the call.
- 3) select "combine call" you can combine two calls into one way.
- 4) after multiparty call has been made and connection established, you can separate the calls or hang up one of them using "the small arrow of conference call".

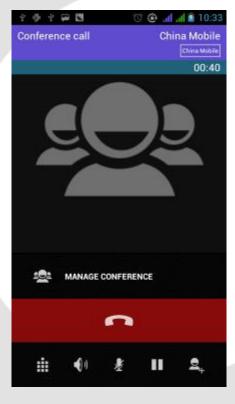

#### Telephone call recording

During the call, select more >start record, it enables recording of the call.

- 1) Settings>Set other functions of the call in the dialing settings, for example: Call Transfer—after all the settings are selected and turned on, you could transfer the call to a certain number.
- 2) From Settings>Dialing settings >Other dialing settings, Select and open "Call waiting". After it has been turned on, you can receive another call when one is already active, the answering and rejecting functions work just like with any ordinary phone.

#### Video call



When you use the video call feather, ensure to have a 3G SIM card installed. From the dialing screen, enter numbers, then press the symbol thus the video call is being made. The second way to use video calls: open the menu Applications>Contacts, press one contact from the listed contacts, then press and hold the phone number and select "Video call".

#### **Call settings**

#### Voice Call

- 1) Voice Mail: The voice mailbox with the option to define the voicemail number.
- 2) IP prefix number: Setting different IP prefix numbers for SIM cards
- 3) Call forwarding: Can be set respectively for two SIM cards, if the line is busy, and no one can to receive the call, no four-way connection will be created
- 3) Call barring: Can set call restrictions for two SIM cards, respectively
- 4) Additional Settings: a. My phone number, b. Call waiting.

#### Video Call

- 1) Local video replacement: Set a picture to display when camera is not in use.
- 2) Display peer video: Display picture replacing peer video when it is unavailable.
- 3) Peer video replacement: Set a picture to be displayed when peer video is unavailable.
- 4) Enable back camera: Enables switching cameras if the option is turned on.
- 5) Bigger Peer video: Turn on to make the peer video bigger than the local video.
- 6) Auto drop back: Drop back to voice call connecting automatically
- 7) Outgoing video call: Display local video when making a video call.
- 8) Incoming video call: Display local video when accept an incoming video call.
- 9) Other settings: a. Call forwarding, b. Call barring, c. Additional settings

#### Internet call



- 1) Account
- 2) Use Internet calling

#### **Other Settings**

- 1) Fixed Dialing Numbers
- 2) Minute Reminder: Turn on minute reminder at 50s of every minute.
- 3) Quick Response: Can edit the text messages rejected by the information contained therein.

## Messaging

**Important:** message title in case of this phone contains the phone number, messages are saved in a form of a conversation instead of the usual folder structure. Messages with blue background are received, and messages with white background are sent.

#### Send SMS to certain phone number

- 1) Press Home>Messaging, touch "New messages".
- 2) On the "Edit" screen:
- a. Click the "Recipient" box to start creating message, you can also click the "Enter" box to start creating the message, in that way you can enter characters.
- b. Click the "Send from SiM1 or SIM2" button to start sending the message.

#### Send MMS to certain phone number

When creating message, it is created as an SMS by default, it will be turned to MMS when following operations are done. You can send a MMS by clicking "Send" after editing.

- 1) On the "Edit" screen click the "Menu" button:
- 2) Click "Attach", you can send the attachments, then the message will be turned to a MMS automatically.

#### Supported file formats



Pictures: GIF, JPEG Videos: 3GP, MP4 Audio: MIDI, MP3, WAV

#### **Notices:**

- 1) If you want send MMS with many pages, you should select "Attach PPT" in the "Attach" interface.
- 2) You can attach up to 10 pictures, in the GIF, JPEG formats.
- 3) Click "Adding themes", the box of "Theme" will appear under the "Recipient" box, meanwhile the message is turned to a MMS automatically.

#### Send messages to multiple numbers

Enter multiple numbers in the input box, each number is divided by a comma. Click on the right side of the head with the receiver plus icon, in enables to select a contact group from the address book.

**Notice:** For now this phone can send mass messages to almost 20 numbers, the exact number depends on the characters, you can only enter 312 characters in the "Recipient" box.

When a message is sent or sent again, a little yellow number will appear. The number of 1 or 2 refers to SIM1 or SIM2. When message sending fails, a red triangle with an exclamation mark will appear.



#### **Contacts**



 
Open the Applications >Contacts menu.

By default, the phone displays contacts and SIM card contacts, contacts are sorted alphabetically.

Click Search Icons, you can go to the contact search screen.

- a. enter the Numbers or letters and a display list of concordant names, which will be shown in the search results.
- b. if no search result matches the contact, a message 'Could not find any contact.' will appear.
- c. Click "Add Contact" Icons, it enables creation of New Contacts. Select Save contacts to the phone or to a SIM card by touching the editing screen.

You can edit contact head, name, telephone number, group, save to and more, and then click "Finish".



#### a. Menu >Delete contacts

With "All" icons checked, and the delete button clicked, all the contact people data, including cell phone and SIM card of contact will be erased.

One or more contacts can be checked separately, then click the delete, delete all selected contacts.

#### b. Menu > To display of the contact

You can choose all contact, one a SIM card of contact, the mobile phone contacts.

c. Choose from the definition, but a choice of a SIM card and of a cell phone choice whether or not to show that all the single contacts is also available.

#### d. Menu >Import/Export

The mobile phone enables third parties to access local, SIM and SD cards for copying appropriate information.

First choose the "Copy source" and then select the next step, selecting copy contact to, which actually makes a copy of the contact.

#### e. Menu > Accounts

By using a synchronous procedure Account and synchronization Settings, one can choose background data and automatic synchronization.

#### f. Menu >Share visible contacts

All contacts can be imported onto a SD card, or sent through Bluetooth, e-mail, text message or MMS share.





Open application interface > Contact, change to the group.

- 1) Click "Add group" Icons in order to create new group, Just to be saved in a cell phone group.
- 2) In "the group name" column provide group name, in "type in the contact's name" column provide contact key word, it can be located in all of contact search, and added to the group. Finally click "Finish".
- 3) In case of a group, click on the Menu button, Menu functions



You can modify the group name, delete or add group of contacts

b. Menu >Delete

You can delete the group, and will not delete the contact itself.

c. Menu >Send messaging by group.

Automatic new information, and the group added to contact the address bar recipients

d. Menu >Send Email by group

If the contact group has a common email address, the automatic new mail, and E-mail address in the address bar will be added to the receiver list

Q

## **Internet Browser**

- 1) In the interface of Internet Browser, touch address field and enter the URL address.
- 2) Use the keypad to enter the URL. The appropriate web sites will appear on the screen. You can touch it directly to go to the page or continue to enter URL.

#### Homepage

Selecting "Homepage", enables the set homepage to be loaded. If you do not set it, you will use the vendor's pre-set sites.


#### **Functions of menu**

1) Menu>Backward

After browsing through multiple pages, it will return to the previous page the current page.

2) Menu>Forward

After browsing through multiple pages, it will move to a web page after the current page.

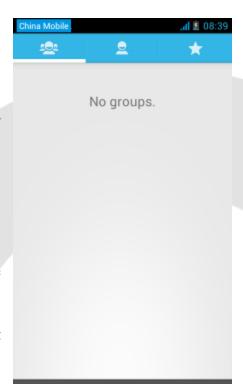



#### 3) Menu>Windows

You can view all opened windows up to the current one.

#### 4) Menu>Bookmarks

- a. Click "Bookmarks" to make the current URL address saved as a bookmark.
- b. Click the bookmark under the bookmarks list, it will open the URL.

#### 5) Menu>More

- a. Add bookmarks, save the current URL as a bookmark.
- b. Find on page, search desired contents in the current page.
- c. Select text, within the text, click and drag to select a piece of text.
- d. Page info, display page address and other information of the currently browsed page.
- e. Share page, select Bluetooth or SMS to share the current page.
- f. Downloads, show all the downloaded content.
- g. History, Show your browsing history, and view the most visited pages of information.
- h. Setting, contains a variety of browser settings.






#### Recorder

Recorder can record voice, and send the recording quickly via Bluetooth or MMS as well as make it a ring tone.

**Notice:** recorder can only save the audio files as AMR format.

- 1) Click the recorder application.
- 2) Keep the phone's microphone near the voice source.
- Click recorder to record voices, and click to stop or Recording list.

All recordings are saved in my recording folder in the default music program.

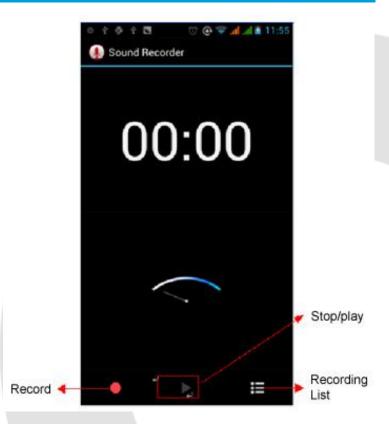

#### Clock

- 1) Open the menu Application, click
- 2) Click screen at any position except the alarm, black screen with time in white shows the standby time to screen blackout. Click again on the screen to restore the normal clock interface.
- 3) Click the Set alarm button on the screen and enter the desired alarm clock setting

#### **Alarm**

After functions have been set, once the phone reaches the present time, a ringing or vibrating alert is generated. Press Menu to add an alarm, doing so may also be performed from the input screed. It is possible to set the alarm according to your needs. Three closed alarms shall be displayed on the screen (two alarm clocks are Monday to Friday 8:30, 9:00).



## **Calculator**

This function can turn your phone into a calculator which enables simple calculations to be performed. Touch the number keys to make the numbers appear in the blank box. From the interface of the calculator, press the MENU button or hold down the screen to the left, then the main panel appears.

#### Camera

#### Camera Mode

#### **Initial preparation**

Install a memory card before using the camera or video camera. All your photos or videos taken by the phone are stored in the memory card.

#### Open camera

Press Home, touch Menu, select Camera. Choose the video mode if you want to make videos. The screen will automatically switch to the landscape mode.

#### **Take pictures**

- 1) Aim your screen at the object.
- 2) Touch the "shutter" button on the screen.
- 3) After taking, photos will be saved in the camera's gallery folder with the name of time they were taken at.
- 4) You can view the photos by touching the preview box button.
- 5) Camera settings


You can touch the button of "Setting Menu" in the interface of the camera to select the settings In the camera viewfinder mode, press Menu, you can switch to video or gallery of photos. In the top right of the camera viewfinder mode, the preview of the previous picture is displayed. Touching the preview box, will result in the photo displayed on the full screen and you can enlarge it to view details.

#### **Camera Settings**

- 1) Capture mode: normal, Face beauty, Smile shot, Best shot, EV bracket shot, 4 shots, 8 shots, 16 shots.
- 2) HDR settings: off, on.
- 3) Flash mode: Auto, On, off.
- 4) White balance: Auto, Incandescent, Daylight, Fluorescent, Cloudy, Twilight, Shade, Warm fluorescent.
- 5) Color effect: None, Mono, Sepia, Negative, Agua, Blackboard, Whiteboard.



- 6) Scene mode, Auto, Normal, Night, Sunset, Party, Portrait, Landscape, Night portrait, Theatre, Beach, Snow, Steady Photo, Fireworks, Sport, Candle light.
- 7) Camera settings: Exposure, Self timer, Sharpness, Hue, Saturation, Brightness, Contrast, Picture Size, ISO, AE meter, Anti-flicker, Restore defaults.

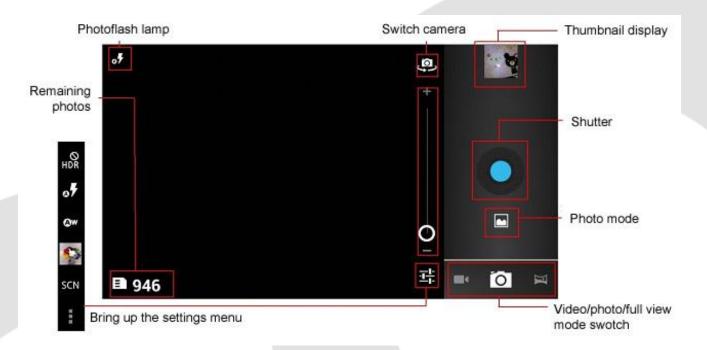

#### Video Mode

#### **Initial preparation**

Install a memory card before using the camera or video camera. All your photos or videos taken by the phone are stored in the memory card.

#### Open camera

Press Home, touch Menu, select Camera. Choose a video camera mode. The screen will automatically switch to the landscape mode.

#### Take pictures

- 1) Aim the screen at your object.
- 2) Touch the "Shutter" button on the screen.
- 3) After taking, the photos will be saved in the camera's galley folder with the name of time at which they were taken.
- 4) You can view the videos by touching the preview box button.

#### 5) Video camera settings

You can touch the "Set" button on the camera screen in order to select the settings In the camera viewfinder mode, press Menu, you can switch between video and photos' gallery. In the top right corner of the camera viewfinder mode, the preview of the previous video is displayed. Touching the preview box will cause the video to be displayed on full screen and you can touch the play button to view it.

#### Videos settings

- 1) Flash mode: on, off.
- 2) White balance: Auto, Incandescent, Daylight, Fluorescent, Cloudy, Twilight, Shade, Warm, fluorescent.
- 3) Color effect: None, Mono, Sepia, Negative, Aqua, Blackboard, Whiteboard.
- 4) Time lapse interval:1s, 1.5s, 2s, 2.5s, 3s, 5s, 10s.
- 5) Video quality: Low, Medium, High, Fine.
- 6) Camera settings: exposure, Self timer, Sharpness, Hue, Saturation, Brightness, Contrast, Picture Size, ISO, AE meter, Anti-flicker, Restore defaults.

#### **Images**

#### Open images

Press Home, touch Applications, then touch Photo gallery. From the camera screen, press Menu to open it, then touch to operate.

#### **Files Interface**

- a. From the library screen, in the upper right corner a slideshow play button is located, click on the way to the slide circulation to display all image files as a slideshow.
- b. Click on the images, enter the picture to see screen.
- c. Choose and press and hold image files to pop-up corresponding operation.

#### **Use images**

After taking pictures, you can view them and share them with your friends.

- a. Use E-mail to send pictures: choose Gmail or E-mail, pictures will be automatically added to an e-mail message. Write your message, click Send.
- b. Use Messaging to send pictures: Select the information, pictures will be added to the MMS. Write your message, click Send.
- c. Use Bluetooth: Bluetooth list, select an already existing pairing of Bluetooth equipment, send a picture via Bluetooth.



#### **Check pictures**

On the photo view screen photos may be slipped and viewed forward or backward view photos.

#### View images

- 1) From the picture screen, touch a photo album to view images.
- 2) Touch the thumbnail to view the picture in the full screen mode. You can choose to display small or large thumbnails. Hold down the screen towards the left side to view the next photo or towards right to view the previous one. In the photo album or list, press and hold down the picture towards the left side to view the next picture, or towards right to view the previous one.

#### Music

The phone can play digital audio files stored in the memory card. The following file formats are supported: AMR, M4A, MIDI, MP3, WAV, OGG.

#### **Open Music**

Press Home, touch the label of Applications, touch Music. Then the interface of Music Media appears.

#### Music Media

Your music files are classified according to the following four categories: Artists, albums, songs and play lists. Touch one of these categories; you can view the list inside the selected category.

Continue the operations, until your desired music appears. For example, if you choose Artists a list of artists sorted by the numbers in English will be displayed. Choose any artist to open the list, then all the albums and songs of the selected artist will appear. Select one album, then the songs in it will be played.

#### **Interface Buttons**



View the playlist



Shuffle playlist



Change the play mode




## Calendar

#### Enter the calendar application

Log on to the Google account, go to the application, On the screen of month or week gray background highlights the specific day. The default display shows the date on the current month.

From the screen, press Menu, four display modes will appear:

- 1) Schedule screen shows a certain schedule(click the initial time and view forward, click the final time to view backwards)
- 2) day screen displays a day's schedule (last clicked date), Slide around to turn pages day by day.
- 3) week screen displays a week's schedule (last clicked date), Slide around to turn pages week by week.
- 4) today screen displays a day's schedule, In the interface of month or week use gray background to highlight the day.
- 5) month screen displays a month's schedule (last clicked date) Slide around to turn pages month by month.

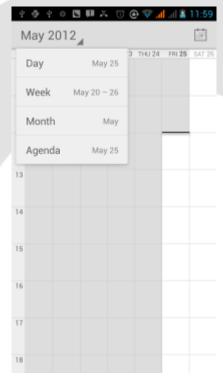

#### **New activities**

- 1) Press menu, More < touch New activities.
- 2) Enter the name of activity in the activity box.

**Notice:** Such as special occasions such as birthday or a day with events, set the all-day option to Yes. If the activity takes place at a certain time period, select the start time and end time.

- 3) Enter the event location, description, guests, repeat, reminder time.
- 4) Click Finish to return to calendar.

#### **FM Radio**

With this program, you may listen to FM radio using the device, FM radio uses a wired headset as an antenna to receive the signal, before starting this program, you can install the original equipment-headphones, when listening, you can switch manually to speakers or to the mode with the wired headphones.



Touch this icon to open the FM radio application.



- 1) Click on the "search" to perform automatic scanning of FM channels, and list all channels displayed on the screen
- 2) Click "FM recording", the current program listened on the radio can be recorded. The tape recording to default file name can be performed using an arbitrary, well-preserved input filename. The FM recording is saved to the default file.
- 3) Click "exit" to close the FM radio, it cannot be listened to in the background.
- 4) Cable headphones must be connected, they act as ns antenna, clicking on the horn button, can switch on the FM radio.
- 5) Click on the frequency of the rear of the five-pointed star icon, adding a channel to the channel list.

#### Listening to FM radio in the background

Click the return to key, it causes the radio program to be moved to the background, right now you can still continue to listen to the show, and can also use any other application.

## **Settings**

Your service provider may introduce some default device settings, so you may not be able to change these settings.



#### SIM management

- 1) Touch it to choose or to disable a SIM card, the card is grey when disabled, the flight mode is displayed in the status bar.
- 2) With the default SIM card , you can choose Voice call, Video call, Messaging, Data connection.



#### Wireless and internet

Flight mode Touch to open or close.

Wi-Fi and Wi-Fi settings Touch Wi-Fi to open to open. Open Wi-Fi ,it can search for available networks automatically, networks without password can be used directly, other need to have the password entered first.

**Notice**: Open Wi-Fi then the flight mode. It will cause the Wi-Fi to close automatically. Open flight mode then connect Wi-Fi - it can be used normally.



#### **Bluetooth**

Bluetooth switching and setting up the Bluetooth connections open and available will cause an automatic search for nearby available Bluetooth equipment to be performed.



#### Data usage

Data usage can set up mobile data traffic limit, if the limit is exceeded, the mobile data services will be closed.



#### **Audio profiles**

This option enables changing phone tones settings, related to the status of received calls or notifications. Including: Vibration, volume, ring tones, ring tone notifications and feedback. Button operation tone, select Sound, screen lock tone, touch. Designed to adapt the phone to every environment.

Select "Standard / Mute / Conference / Outdoor, Touch the spot on the right, when turns green, it opens.

2) Volume: In order to include the ring volume and alarm clock settings, you can manually slide to select.



#### Display

- a. Brightness Adjust the brightness b. Auto rotating screen Rotate phone to change direction
- c. Animation Choose to display animations d. Screen Timeout Adjust the delay before the screen automatically locks down



#### **Storage**

Can view the SD card and cell phone memory usage.

Can Unmount SD card or Erase SD card.

Can choose the default memory.



#### **Applications**

- 1) Unknown sources Allow to install non-electronic market applications
- 2) Manage applications Manage and delete installed applications.
- 3) Running services Touch any of the services listed in> pop up 'Stop the service?' twobutton operation box, touch the 'Stop 'Service is stopped, and disappear from the "Running services" list.
- 4)Storage use you can view downloaded programs, all, on a SD card or checking how many memory space they occupy
- 5)Battery use you can see the status of power usage of the cell phone Standby, Phone idle, Display and Browser.



6)Development: USB debugging: USB debugging only apply in the develop process. This function allows copying data to computers and mobile devices.



#### **Accounts and Synchronize**

- 1) Background data Applications using background data synchronization at any time send and receive data, disabling the background data flow extends battery life and reduces data usage. However, some applications will use the background data for connections.
- 2) Automatic synchronization turn on/off Automatic synchronization, applications Automatically synchronize data or use asynchronous data



#### **Location Services**

- 1) Use wireless Use wireless module to find locations in the application (Google Maps). Touch it to open or close
- 2) When using the GPS satellite positioning, set accuracy to street level(cancel it to save battery).

Touch it to open or close

- 3) GPS EPO assistance, use GPS assistance data(EPO)to speed up GPS positioning
- 4) A-GPS Use of auxiliary data can accelerate the process of GPS positioning.

Open it and it will give you a reminder "It produces GPRS flows when using A—GPS".



#### Security

- 1) Set up screen locks Use images. PIN or password to lock the screen.
- a. Touch "images", the first time there will be a simple unlocking instructions and examples, click "Next step" to continue, then select the step "Make the unlocking image".
- b. Touch PIN Enter PIN numbers to unlock the screen.
- c. Touch password Set password to unlock the screen.
- d. Touch "no" Stop this application.
- 2) Set up SIM card lock Enter (4-8numbers) PIN to set the lock of SIM.

SIM card PIN (Personal Identification Number) is to prevent unauthorized use of SIM cards.PIN code provided with SIM. The service provider gives the initial value of the code.

In order to change a blocked PIN code, you need to open the "SIM Lock ", then go to Change Password screen, the phone will automatically prompt enter the old PIN code and asked to enter a new PIN code twice, finally the phone will prompt that change the code successfully. If you enter an incorrect PIN three times, PIN codes of the SIM card will be automatically locked, a PUK code is usually supplied with SIM card. If this is not the case, you should go to the service provider in order to obtain the codes.

If you enter an incorrect PUK code 10 times, the SIM card will be permanently locked.



- 3) Password visible Password visible during entering
- 4) Select device administration Add or delete device manager.
- 5) Use security credentials Allow application visit security credentials or other credentials.
- 6) Install from SD card Install the encrypted certificate from a SD card.
- 7) set password Set or change Certificate store password
- 8) clear storage Clear all the contents of the certificate store and reset their passwords.

## Languages and keyboard

- 1) Selecting Language District Include all the languages on the phone and totally amounting up to 12.
- 2) Custom Dictionary Add or delete words to/from a custom dictionary.
- 3) Keyboard Settings Vibrating when buttons are pressed, Playing sound when buttons are pressed, Capitalizing automatically, Speech Input(by microphone on the keyboard), Inputting words(speech can be altered by sliding finger on space key), Displaying tips(activate prediction function when you input words); Auto-Text(Automatically input certain words when the spacebar key or specified keys are pressed)
- 4) Input method you can select Android keyboard or Google pinyin input method.

## Backup & reset

Backup data will send a backup of application data, WLAN password and other Settings to Google's servers

Resetting to Factory Settings, Clear all data stored in the phone.

## O Date and Time

- 1) Automation Use date and time provided by the Network.
- 2) Setting Date Touch "+" and "-" to set date.
- 3) Selecting Time Zone Select Time Zone according to where you are. For China please select "GMT+08:00, China Standard Time".
- 4) Setting Time Touch "+" and "-" to set time.
- 5) Use 24 Hour Time Format ON/OFF
- 6) Select Date Format There are 3 kinds of formats you can choose from: Month-Day-Year, Day-Month-Year and Year-Month-Day, among which Year-Month-Day is the default setting.

## Schedule power on/off

You can set time of boot or shutdown by touching the appropriate. You may also select to repeat it or a certain day during a week.



## { } Developer options

- a. USB Debugging: USB debugging is designed only for development and USB disk.
- b. Development device ID BSF7-NVJN-LPDN-7
- c. Stay awake: Screen will never enter sleep mode while charging.
- d. Allow mock locations.



You can check the information about status bar and remaining power.



## **Safety Guide**

When you contact telecommunications or a sales agent, they need the IMEI number of your mobile phone (remove battery to expose number located on the label on back your phone). Please copy this number and keep in a safe place for future use.

In order to avoid the misuse of your mobile phone take the following preventative measures:

- Set the PIN number of your mobile phone's SIM card and change this number immediately if it becomes known to a third party.
- Please keep the phone out of sight when leaving it in a vehicle. It is better to carry the phone with you, or lock it in the trunk.
- Set call barring.

## **Safety Warnings and Notices**

Before using your mobile phone, read and understand the following notices carefully to ensure you use it safely and properly.

#### General attention

- Only the battery and battery charger specified by our company should be used in your mobile phone. Other product might result in battery leakage, overheating, explosion or fire.
- To avoid your phone malfunctioning or catching fire, please do not violently impact, jolt or throw your phone.
- Please do not place the battery, phone or charger in a microwave oven or highpressure equipment. Otherwise it could lead to unexpected accidents such as damage to circuit or fire hazard.
- Please do not use your phone near flammable or explosive gases, otherwise it could cause malfunction of your phone or fire hazard.



- Please do not subject your phone to high temperatures, high humidity or dusty places; otherwise this may lead to the malfunction of your phone.
- Keep your phone out of the reach of small children. Your phone is not a toy.
   Children could hurt themselves.
- To avoid your phone falling and malfunctioning or being damaged, please do not place it on uneven or unstable surfaces.

#### Notices when using your phone

- Turn off your mobile phone where the phone is not allowed, such as at the
  airport or in hospitals. Using the mobile phone in those places may impact the
  normal operation of electronic devices and medical instruments. Follow relevant
  regulations when using your mobile phone in those places. Your mobile phone
  has the auto turn-on feature. Check your alarm clock settings to confirm that
  your mobile phone will not be turned on automatically during flight.
- Please do not use your mobile phone near the weak signal or high precision electronic devices. RF interference might cause malfunctioning of such electronic devices and other problems. Special attention must be paid near the following equipment: hearing aids, pacemakers and other medical electronic devices, fire detectors, automatic doors and other automatic control installations. To find out the effect of mobile phones on a pacemaker or other pieces of electronic medical equipment please contact the manufacturers or local sales agents of the equipment.
- Please do not subject the LCD to impact or use the screen to strike things, as
  this will damage the LCD board and cause leakage of the liquid crystal. There is
  a risk of blindness if the liquid crystal substance gets into the eyes. If this occurs
  rinse eyes immediately with clear water (under no circumstances rub your eyes)
  and go immediately to a hospital for treatment.
- Do not disassemble or modify your mobile phone, as it will lead to damage to the phone such as battery leakage or circuit failure.
- Under very rare circumstances using the mobile phone in certain models of cars
  may negatively affect the internal electronic equipment. In order to assure your
  safety under such circumstances please do not use the mobile phone.

- Please do not use needles, pen tips or other sharp objects on the keypad as this may damage the mobile phone or cause it to malfunction.
- In the event of antenna malfunction, do not use your phone as it could be harmful to human body.
- Avoid letting the phone come into close contact with magnetic objects such as magnetic cards as the radiation waves of the mobile phone may erase the information stored on floppy disks, pay cards and credit cards.
- Please keep small metal objects, such as thumbtacks far away from the receiver. When the receiver is in use it becomes magnetic and may attract these small metal objects and thus these may cause injury or damage the mobile phone.
- Avoid having the mobile phone come into contact with water or other liquids. If liquids enter the phone, this could cause a short circuit, battery leakage or other malfunction.

#### Notices when using battery

- The battery has a limited service life. The remaining life gets shorter as the times of charging increase. If the battery becomes feeble even after the charging, this indicates the service life is over and you have to use a new specified battery.
- Do not dispose of old batteries with domestic garbage. Please dispose of old batteries at the directed places with specific rules for their disposal.
- Please do not throw batteries into a fire, as this will cause the battery to catch fire and explode.
- When installing the battery, do not use force or pressure, as this will cause the battery to leak, overheat, crack and catch fire.
- Please do not use wires, needles or other metal objects to short-circuit the battery. Also, do not put the battery near necklaces or other metal objects as this will cause the battery to leak, overheat, crack and catch fire.
- Please do not solder the contact points of the battery, as this will cause the battery to leak, overheat, crack and catch fire.



- If the liquid in the batteries goes into the eyes, there is a risk of blindness. If this occurs do not rub the eyes, but immediately rinse eyes with clear water and go to the hospital for treatment.
- Please do not disassemble or modify the battery, as this will cause the battery to leak, overheat, crack and catch fire.
- Please do not use or place the batteries near high temperature places such as near a fire or heating vessel as this will cause the battery to leak, overheat, crack and catch fire.
- If the battery overheats, changes color or becomes distorted during use, charging or storage, please stop using and replace it with a new battery.
- If the liquid from the battery comes in contact with skin or EN clothing this could cause burning of the skin. Immediately use clear water to rinse and seek medical tips if necessary.
- If the battery leaks or gives off a strange odor, please remove the battery from the vicinity of the open fire to avoid a fire or explosion.
- Please do not let the battery become wet as this will cause the battery to overheat, smoke and corrode.
- Please do not use or place batteries in places of high temperature such as in direct sunlight, as this will cause the battery to leak and overheat, lower performance and shorten the battery's life.
- Please do not continuously charge for more than 24 hours.

#### Notices when using your charger

- During charging, the phone must be places in well-ventilated environment of +5°C ~ -40°C. Always use the charger supplied by your phone manufacturer.
   Using an unauthorized charger might cause danger and invalidate the authorization and warranty clauses for your phone.
- The standby time and call duration provided by the manufacturer are based on ideal operating environment. In practice, the battery's operating time varies depending on network conditions, operating environment and usage methods.
- Make sure the battery has been installed before charging. It is best not to remove the battery while charging.



- Upon completion of charging, disconnect the charger from your phone and the power supply.
- Please use AC 220~230 volts. The use of any other voltage will cause battery leakage, fire and cause damage to the mobile phone and charger.
- It is forbidden to short circuit the charger, as this will cause electrical shock, smoking and damage the charger.
- Please do not use the charger if the power cord is damaged, as this will cause fire or electrical shock.
- Please immediately clean any dust gathered on the electrical outlet.
- Please do not place vessels with water near the charger in EN order to avoid water splashing onto the charger and causing an electrical shortage, leakage or other malfunction.
- If the charger comes in contact with water or other liquid the power must immediately be switched off to avoid an electrical short or shock, fire or malfunction of the charger.
- Please do not disassemble or modify the charger, as it will lead to bodily harm,
   electrical shock, fire or damage to the charger.
- Please do not use the charger in the bathroom or other excessively moist areas, as this will cause electrical chock, fire or damage to the charger.
- Please do not touch the charger, power cord or power socket with wet hands, as this will cause electrical shock.
- Do not modify or place heavy objects on the power cord, as this will cause electrical shock or fire.
- Before cleaning or carrying out maintenance please unplug the charger from the electrical outlet.
- When unplugging charger, do not pull on the cord, but rather hold on to the body of the charger, as pulling on the cord will damage the cord and lead to electrical shock or fire.

Cleaning and maintenance

- The mobile phone, battery and charger are not water resistant. Please do not use them in the bathroom or other excessively moist areas and likewise avoid allowing them to get wet in the rain.
- Use a soft, dry cloth to clean the mobile phone, battery and charger.
- Please do not use alcohol, thinner, benzene or other solvents to wipe the mobile phone.
- A dirty outlet will cause poor electrical contact, lose of power and even inability to recharge. Please clean regularly.

#### Service and Repair

For repair use the authorized service and qualified staff, any attempt to repair yourself, or by unauthorized service will void the warranty.



## **Important information**

Correct Disposal of This product (Waste Electrical & Electronic Equipment).

(Applicable in the European Union and other European countries with separate collection systems)

This marking indicates that at the end of its working life this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.

Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

The symbol may appear on the battery or on the packaging to indicate that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local government Office, your household waste disposal service or the shop where you purchased the product.

# CE0700 Wireless LAN-Regulatory information

Depending on the model, the wireless LAN built-in into smartphone devices can only be used in the following countries: Austria, Belgium, Bulgaria, Cyprus, Czech Republic, Germany, Denmark, Estonia, Greece, Spain, Finland, France, United Kingdom, Hungary, Ireland, Italy, Lithuania, Luxemburg, Latvia, Malta, the Netherlands, Poland, Portugal, Romania, Sweden, Slovenia, Slovakia, Norway.

#### Conditions of use

When using the IEEE 802.11b/g/n Wireless LAN standard, channels 1 to 13 (2.4 GHz ...2.4835 GHz) are selectable for both indoor and outdoor use, however with restrictive conditions applying in France, Italy and Norway, as follows:

- France: When using this product indoor, all channels can be used without restrictions. Outdoor only channels 1 to 6 are allowed. This means that in Peer-to-Peer, the WLAN feature can only be used outside if the peer sets up the communication on an authorized channel (i.e., between 1 & 6). In infrastructure mode, please make sure the access point is configured to a channel from 1 to 6 before setting up the connection.
- Italy: Use of the RLAN network is governed: Disposal of Old Electrical & Electronic
- with respect to private use, by the Legislative Decree of 1.8.2003, no. 259 ("Code of Electronic Communications"). In particular Article 104 indicates when the prior obtainment of a general authorization is required and Art. 105 indicates when free use is permitted;
- with respect to the supply to the public of the WLAN access to telecom networks and services, by the Ministerial Decree 28.5.2003, as amended, and Art. 25 (general authorization for electronic communications networks and services) of the Code of electronic communications.
- Norway: Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the centre of Ny-Ålesund, Svalbard

## RoHS

This products has been certified as RoHS Compliant.



# **C**€0700 **©**

## **DECLARATION OF CONFORMITY**

No 05/11/12

CE mark was affixed in 2012.

GOCLEVER Sp. z o.o., 4A Sianowska Street 60-431 Poznań, Poland

Declare under our sole responsibility that the product:

Name: FONE 500 / C-500 and FONE 450 / C-450

Brand: GOCLEVER

To which this declaration relates, is in conformity with the essential requirements of the following Directives:

**EMC** 

2004 / 108 / EC

R&TTE

1999 / 5 / EC

LVD

2006 / 95 / EC

the following European norms and standards were applied:

**EMC** 

EN 55022:2010

EN 55024:2010

EN 301 489-1 V1.9.2 EN 301 489-3 V1.4.1 EN 301 489-7 V1.3.1 EN 301 489-17 V2.1.1 EN 301 489-24 V1.5.1

EN 61000-3-2:2006+A1:2009+A2:2009

EN 61000-3-3:2008

EN 50360-2001/AC:2006

EN 62209-1:2006 EN 62209-2:2010 EN 62311:2008 EN 62479:2010 **R&TTE** 

EN 301 511 V9.0.2 EN 300 328 V1.7.1 EN 301 908-1 V5.2.1 EN 301 908-2 V5.2.1 EN 50332-1:2000 EN 300 440-1 V1.5.1 EN 300 440-2 V1.3.1

Place and date:

Poznań, 15.12.2012

Signature:

Roman Panek

GOCLEVER Sp z o.o. ul. Sianowska 4A, 60-431 Poznań NIP: 7811791743 REGON: 300358488

Warranty Card				
WARRANTY CARD				
DATE SOLD:				
DATE MANUFACTURED:				
MATE MANOT ACTORED.				
DEVICE MODEL: GOCLEVER Fone 450				
SERIAL NUMBER:				
DEALER'S NAME /STAMP	SIGNATURE			
32/12/(0.07/10/10/10/10/10/10/10/10/10/10/10/10/10/	Sistem Site			
Date and customer's signature				

#### Repairs history

Date	Confirmed defect	made repairs	Service sign and stamp