 




DIGITAL WIRELESS TELEPHONE



Welcome

Welcome to the world of Motorola digital wireless communications! Motorola is a global leader in communications technology. We are pleased that you have chosen the Motorola Series 60c wireless phone to keep you connected with ease.

All Motorola phones are designed and manufactured to meet Motorola's rigorous



specifications and world-class quality standards. During development, our testing team took the Motorola through rigorous durability tests including temperature, humidity, shock, dust, vibration, and drop tests.

We are confident that you and your callers will find your wireless phone to be a convenient and reliable way to stay in touch. Thank you for choosing Motorola , and enjoy your new phone!

Personal Communications Sector 600 North U.S. Highway 45 Libertyville, Illinois 60048

1-800-331-6456 (United States) 1-888-390-6456 (TTY/TDD United States) 1-800-461-4575 (Canada)

www.motorola.com

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync is a trademark of Starfish, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2001 Motorola, Inc. All rights reserved. Printed in the U.S.A.

Manual number: 6809436A11-0 Cover number: 8988485L07

Menu Map

Main Menu

- Recent Calls
 - Received Calls
 - Dialed Calls
 - Notepad
 - Call Times
- **Phonebook**
- Datebook
- **Quick Dial**
- Radio
- Messages
 - Voicemail
 - Text Msgs
 - **Browser Alerts**
 - **Quick Notes**
 - Outbox
 - Drafts
- **Shortcuts**
- **Voice Notes**
- Browser
- Settings

(see reverse)

Note: This is the standard menu layout. You or your service provider may have modified the menu structure or changed some feature names. Not all features may be available for all users. For example, the Radio feature is displayed only when the FM radio headset accessory is plugged into the accessory connector port on your phone.

Shortcuts

Change display zoom:

Press MENU, then press and hold MENU

Lock/unlock keypad:

Press MENU (*



Display my phone number:

Press Menu #



Go to dialed calls list:

Press 8

Settings Menu

Ring/Vibrate

- 🛉 Alert
 - Alert Detail

Phone Status

- ♦ My Tel. Number
- Battery Meter
- Other Information

Connection

In-Call Setup

- ♦ In-Call Timer

Security

- ♦ Phone Lock
- Lock Keypad
- Lock Application
- Restrict Calls
- New Passwords

• Other Settings

- Personalize
 - Main Menu
 - Keys
 Greeting
 - Banner
 - ◆ Quick Dial

Initial Setup

- Time and Date
- Auto PIN Dial
- Auto Redial
- BacklightStatus Light
 - Zoom
- Scroll
- Animation
 - Language
- Contrast Setting
- ♦ DTMF
- Master Reset
- Master Clear

Network

- Car Settings
- Headset

Phone Diagram



Menu Map	. 3
Phone Diagram	. 5
About This Guide	11
Safety and General Information	13
Getting Started What's in the Box? Installing the Battery Charging the Battery Turning Your Phone On Sending a Call Ending a Call Receiving a Call Displaying Your Phone Number	21 24 25 26 27 27
About Your Phone Display Changing the Zoom Setting Status Light Volume Keys Smart Key External Display Battery Use	28 31 31 32 33 34
Sending and Receiving Calls. Redialing a Number. Using Automatic Redial. Caller ID. Returning an Unanswered Call Dialing an Emergency Number When the Phone is Locked	37 37 38 38

Entering Numbers in the Notepad Terminating an Incoming Call Dialing With Speed Dial Dialing With One-Touch Dial Dialing a Number In a Text Message Additional Dialing Features	40 41 42 43
Using Features While On a Call. Using Call Waiting Making a Three-Way Call Additional On-Call Features	46 47
Using the Menu Navigating to a Feature Selecting a Feature Option Entering Feature Information Entering Text	49 50 51
Menu Feature Descriptions	61
Recent Calls Viewing the Received Calls or Dialed Calls List Using the Notepad Call Times Viewing and Resetting Call Times	71 74 75
Phonebook Fields in a Phonebook Entry Form Storing a Phonebook Entry Recording a Voice Name For a Phonebook Entry Dialing a Phonebook Entry Editing a Phonebook Entry Deleting a Phonebook Entry Checking Phonebook Capacity	

	Synchronizing with TrueSync Software
D	atebook
	Week View
	Day View
	Event View 87
	Storing a New Event
	Changing Event Information 89
	Copying an Event 90
	Deleting an Event
Ra	a dio
	Turning the Radio On and Off
	Tuning a Station 92
	Storing a Preset
	Selecting a Preset
	Sending and Receiving Calls With the Radio On 93
M	essages—Voicemail
	Storing Your Voicemail Number
	Receiving a New Voicemail Message
	Listening to a Voicemail Message 95
M	essages—Text
	Setting Up the Text Message Inbox96
	Receiving a New Text Message 97
	Reading, Locking, or Deleting a Text Message 98
	Sending a New Text Message
	Viewing the Status of Sent Text Messages 101
Sl	nortcuts
	Standard Shortcuts
	User-Settable Shortcuts

Creating a Shortcut	
Voice Notes Recording a Voice Note Viewing the Voice Notes List Playing a Voice Note Locking and Unlocking a Voice Note Deleting a Voice Note	107 109 109 112
Micro-Browser	114
Adjusting Your Settings Ring/Vibrate Reminders Reordering Menu Items Customizing a Soft Key Function Hands-Free Use	16 18 18 19
Data and Fax Calls Connecting Your Phone to an External Device Sending a Data or Fax Call Receiving a Data or Fax Call	123 125
Security Assigning a New Code or Password If You Forget a Code or Password Locking and Unlocking Your Phone Locking and Unlocking Your Keypad Restricting Calls	130 131 132 134

Troubleshooting	136
Programming Instructions	144
Specific Absorption Rate Data	146
FDA Update	148
Warranty	157
Patent Information	165
Export Law Assurances	171
Index	172

About This Guide

Using Your Phone's Features

This user guide introduces you to the many features in your Motorola phone. A reference guide for your phone is also available that explains the phone's features in more detail. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

http://motorola.com/consumer/manuals

or contact the Motorola Customer Call Center at 1-800-331-6456.

Navigating To a Menu Feature

You can access many of your phone's features through the menu system. This guide shows you how to navigate to a specific menu feature as follows:

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to view the dialed calls list.

About This Guide

Optional Features



Features marked with this label are optional network and/or subscription-dependent features. These features may not be offered by all service providers in all geographical areas. Contact your service provider for information about availability.

Optional Accessories



Features marked with this label require the use of an optional Motorola OriginalTM accessory.



IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

RF Operational Characteristics

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1851.25 MHz to 1908.75 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a range from 0.05 watts to 0.54 watts in analog mode and 0.0 watts to 0.28 watts in digital mode.

Exposure To Radio Frequency Energy

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

 United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J

- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- National Radiological Protection Board of the United Kingdom 1995
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:



Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Do NOT hold the antenna when the phone is in use. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone**.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a **Motorola-supplied or approved clip, holder, holster, case, or body harness.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a body-worn accessory, and are not holding the phone in the normal use position at the ear, ensure the antenna is at least one inch (2.5 centimeters) from your body when transmitting.**

Data Operation

When using any data feature of the phone, with or without an accessory cable, **position the phone antenna at least one inch (2.5 centimeters) from your body.**

Approved Accessories

For a list of approved Motorola accessories, visit our website at www.motorola.com.

Electromagnetic Interference/ Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.



Medical Devices

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches
 (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.



Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being "Intrinsically Safe" for use in such areas (for example, Factory Mutual, CSA, or UL Approved). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Operational Cautions

Antennas

Do not use any portable phone that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

GEN011001




What's in the Box?

Your digital wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability. The following illustrations show a sample of the package contents.

Note: Your phone and accessories may not look exactly as pictured.



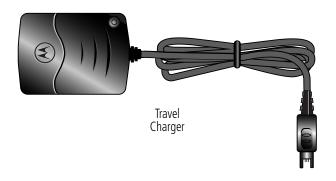

To purchase Motorola Original™ accessories, please phone 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

Installing the Battery

Before you can use your phone, you need to install and charge the battery.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.



Do This

- Remove the battery from its protective clear plastic case.
- 2 If the phone's battery door is already in place, push down the battery door release latch and lift the battery door off of the phone.



3 Insert the battery, printed arrows first, into the battery compartment and push down.



4 Insert the ridge at the bottom of the battery door into the base of the phone, then push the door down and snap it into place.



Charging the Battery

Before you can use your phone, you need to install and charge the battery.

Do This

 Plug the travel charger into your phone with the release tab facing up.



- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged, press the release tab and remove the travel charger.



Tip: When your phone is turned on, the battery level indicator in the upper right corner of the phone display shows the amount of charge left in your battery. (See the "Battery Level Indicator" item on page 30.)



Turning Your Phone On

Do	This	То
1	Open your phone	expose the keypad
2	Press and hold (the power key)	turn on your phone
	Power key	
3	Enter your four-digit unlock code and press OK ()	unlock your phone, if necessary
		The unlock code is originally set to 1234. (For more information, see "Locking and Unlocking Your Phone" on page 132.)

Sending a Call

To call a number, your phone must be turned on, be unlocked, and have a network connection with adequate signal strength.

Do	This	То
1	Extend the antenna	optimize signal reception
		Tip: Your phone uses a two-stage antenna that must be fully extended for proper operation. You may have to pull on the antenna a second time to extend the antenna to its maximum length.
2	Press the keypad keys	dial the phone number (up to 32 digits)
		Tip: If you make a mistake, press DELETE (♠) to delete the last digit, or press and hold DELETE (♠) to clear all digits.
3	Press () (send key)	send the call



Ending a Call

Press	То
(end key)	end the call

Receiving a Call

To receive a call, your phone must be turned on and have a network connection with adequate signal strength. If your phone is locked, you must unlock the phone to answer the call.

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	То
or ANSWER ()	answer the call

Displaying Your Phone Number

From the idle display:

Press	То
MENU # >	see your phone number

See page 5 for a diagram of your phone that describes basic phone components.


Display

The top section of the display shows phone status indicators. The following illustration shows some of the common indicators that you may see at the top of the display when using your phone.

Messages, phone numbers, and menu options appear in the middle of the display. Text labels at the bottom corners of the display show the current soft key functions. A \equiv (menu) indicator in the bottom center of the display indicates that you can open the main menu or a feature sub-menu to see more options. For more information about the soft key and menu key labels, see "Using the Menu" on page 49.

Some of the phone functions described in this guide must be performed from the idle display. The term *idle display* refers to the standard display that you see when your phone is on and ready to use, when you are *not* on a call or using the menu system.



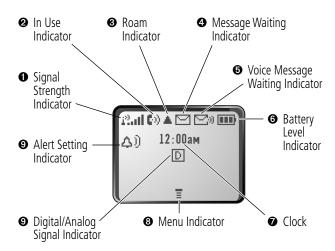

• Signal Strength Indicator Shows the strength of your phone's connection with the network.

Strong Paul Pau Pau Pau Pau Pau Pau No signal

You cannot send or receive calls when the "no signal" indicator is displayed.

- **②** In Use Indicator Appears when a call is in progress.
- **3 Roam Indicator** Appears when your phone uses another network system outside your home network. When you leave your home network area, your phone *roams* or seeks another network.



• Message Waiting Indicator Appears when your phone receives a text message.



To Voice Message Waiting Indicator Appears when you receive a voicemail message.

 Battery Level Indicator Shows the amount of charge left in your battery. The more segments visible, the greater the charge.



Recharge your battery as soon as possible when you see the **Low Battery** warning message.



O Clock Shows the current time.

- **Menu Indicator** Indicates that you can press to open a menu. See "Using the Menu" on page 49.
- **O Digital (D) or Analog (A) Signal Indicator** Shows whether you are receiving a digital or analog signal.
- **© Alert Setting Indicator** Shows the current selected alert. The default alert setting is a ringer.

△)) Loud ring △» Soft ring

△₹ Silent



Changing the Zoom Setting

You can set your phone's display to show either three lines or two lines of text plus soft key labels. Three lines of text display more information, while two lines increase text size.

To change the display view, press once, then press and hold again within two seconds of the first press.

You can also adjust the zoom setting from the menu. See the "Zoom" item on page 65.

Status Light

The status light tells you when you have an incoming call or message, or when your phone is roaming (using a non-home system). The light changes color to indicate different states:



Indication	State
alternating red/green (fast)	incoming call
flashing green	in service, home system
flashing yellow	roaming, non-home system
flashing red (slow)	no service

Indication	State
flashing red (fast)	text or voicemail message received, but no service
alternating green (short)/red (long)	text or voicemail message received, home service
alternating yellow (short)/red (long)	text or voicemail message received, roaming service

By default, the status light indicator is turned off to extend battery life. See the "Status Light" item on page 65 to turn on the status light.

Note: Turning on the status light will substantially reduce your phone's *standby time* (the length of time that your phone's battery retains power when the phone is turned on but is not in use).

Volume Keys

Use the upper and lower volume keys to adjust your phone's earpiece and ringer volume.





When	Press	То
During a call	volume keys	increase or decrease earpiece speaker volume
From the idle display (with flip opened)	volume keys	increase or decrease ringer volume

You can also use the volume keys to scroll up or down through menus and lists

To change keypad volume, see "Select a Ring/Vibration for a Specific Event" on page 117.

Smart Key

The smart key gives you another way to perform many basic phone functions. It's called the smart key because it anticipates the next action you are likely to perform. For example, if you highlight an item and press the smart key,



the smart key selects the highlighted item. You can use the smart key to send and end calls, select menu items, toggle features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key ().

You can also use the smart key to perform specific functions in the external display when the flip is closed. See the following section for details.

External Display

When your phone is on and the flip is closed, the external display shows the time and date. It also displays messages to notify you of events (like incoming calls) that need your attention.

Set Phone Alert

To change your phone's alert in the external display:

Pr	ess	То
1	volume keys	scroll to Alert
2	smart key	select an alert type
3	volume keys	return to the idle display
_		

Return an Unanswered Call

When you cannot answer a call, your phone keeps a record of your unanswered calls and displays the message X Missed Calls, where X is the total number of missed calls. When you see the X Missed Calls message in the external display:

Pr	ess	То
1	smart key	see the received calls list

About Your Phone



Press		То
2	volume keys	scroll through the list and select a call that you want to return
3	smart key	send the call

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other hands-free device with this feature.

Battery Use


Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola approved batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.

About Your Phone

- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.
- The more you talk on the phone or use phone features (like sending text messages), the less standby time your battery has. You can also extend battery life by turning off the status light. (See the "Status Light" item on page 65.)

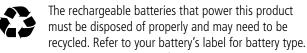

Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.



For basic instructions on how to send a call, end a call, and receive a call, see page 26 of the "Getting Started" section.

Redialing a Number

If you hear an ordinary busy signal, the phone number you dialed is busy.

Pr	ess	То
1	N. D.	hang up
2	OZmo	redial the busy number

Using Automatic Redial

If the network is busy, you hear a fast busy signal, and your phone displays the message **Call Failed**.

With automatic redial, your phone repeats the call attempt over the next four minutes.

Press	То
or RETRY (activate automatic redial

When the call goes through, your phone rings or vibrates once, displays **Redial Successful**, and then connects the call automatically.

You must activate automatic redial in order to use the feature. See the "Auto Redial" item on page 64.

Caller ID



The *calling line identification* (caller ID) feature lets you see who is calling before you answer.

- If the caller's name is stored in your phonebook, the phone automatically displays the name. Otherwise, the phone displays the caller's phone number.
- If caller ID information is not available, your phone displays the message **Incoming Call**.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls. When you cannot answer a call, your phone displays:

- the **!** (missed call) indicator
- the message X Missed Calls Y Unknown, where X is the total number of missed calls and Y is the number of missed calls for which caller ID information is not available.



Press	То
1 VIEW (see the received calls list, with the most recent call at the top
2	scroll through the list and select a call that you want to return
3	send the call

Dialing an Emergency Number When the Phone is Locked

Your service provider may program one or more emergency phone numbers that you can call even if your phone is locked or restricted.

When you see **Enter Unlock Code** in the display:

Press		То		
1 keypa	d keys	dial the emergency number (such as 911)		
2		call the emergency number		

Entering Numbers in the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. These digits can be the last phone number that you called, or a phone number that you simply entered but did not call. These digits remain in the notepad even when you turn off the phone.

You can use the notepad to store a phone number that you intend to call later (such as a phone number told to you by the other party during a call). To retrieve these digits, see "Using the Notepad" on page 74.

Terminating an Incoming Call

While the phone is ringing or vibrating:



Depending on your phone settings and the type of subscription you have with your service provider, the call may be forwarded to another number, or the calling party may hear a busy signal.



Dialing With Speed Dial

The *speed dial* feature lets you dial any phonebook entry with a minimal number of keypresses.

Whenever you store an entry in your phonebook, the entry is assigned a unique speed dial number. If you know the speed dial number for the phonebook entry you want to call, you can use the speed dial feature.

Pr	ess	То
1	keypad keys	enter the one-, two-, or three-digit speed dial number for the entry you want to dial
2	# >	submit the number
3	NW ZO	call the entry

To make an entry in the phonebook or view an existing entry's speed dial number, see "Storing a Phonebook Entry" on page 78.

Dialing With One-Touch Dial

You can call phonebook entries 2 through 9 with the push of a single key. Just press and hold the one-digit speed dial number for one second.

It is recommended that you reserve location 1 in the phonebook for storing your voicemail number. In many cases, your service provider has already stored your voicemail number in location 1. If your voicemail number is not accessible by pressing and holding the key, complete the following steps:

Do	This	То
1	Store your voicemail number in phonebook location number 1 (see "Storing a Phonebook Entry" on page 78)	enable the 🖜 key voicemail shortcut
2	Complete the instructions for "Storing Your Voicemail Number" on page 94	enable voicemail soft key and menu shortcuts

To store entries in locations 2 through 9 in the phonebook, see "Storing a Phonebook Entry" on page 78.



Dialing a Number In a Text Message



If you receive a text message with an embedded phone number, you can dial the number directly.

Note: You must set up your inbox before opening text messages. See "Setting Up the Text Message Inbox" on page 96.

Find the Feature	MENU	>	Mess	ages
		>	Text	Msgs

Pr	ess	То
1	8	scroll to the message with the number
2	MENU	open the Text Msg Menu
3	8	scroll to Call Back
4	SELECT (🗪)	dial the number in the message

If the message contains more than one phone number, press to scroll to a number and then press **SELECT** () to dial.

Additional Dialing Features

In addition to pressing numbers on your keypad, you can insert numbers or characters and send calls in a variety of ways.

While dialing (with digits visible in the display):

Do This	То
Press and then scroll to and select	insert a special character when making a calling card call:
one of the following: • Insert Pause (to insert a p)	Pause tells your phone to wait until the call connects before it sends the next digit.
• Insert Wait (to insert a w) • Insert 'n' (to insert an n)	Wait tells your phone to wait until the call connects, and then to prompt you before it sends the next digit.
(10 110 201 17)	• 'n' tells your phone to stop and to prompt you for a number before it sends the next digit.
Press MENU > Attach Number	attach a number from the phonebook or recent calls list to the end of the digits you entered
Press MENU > Send Message	create a text message addressed to the number entered



You can also call numbers using these features:

Do This	To Call
Press and release the voice key on the right side of your phone and say the entry's name (in two seconds). Voice key	a phone number using the voice dial feature See "Recording a Voice Name For a Phonebook Entry" on page 80.
4 сиі 5 ікі 6мко	
Press Recent Calls > Received Calls or Dialed Calls > entry to call	a missed call or a number from a call you recently dialed or received

Using Features While On a Call

Using Call Waiting



If you subscribe to call waiting, an alert tone sounds while you are on a call to indicate that you have received a second call.

To put the first call on hold and answer the second call:

Pr	ess	То
1	OZWIN	answer the new call
2	DZmw	switch back to the first call

To end the first call and answer the second call:

Press	То
1 🖔	end the current call
	Your phone rings to signal the new call.
2	answer the new call

Using Features While On a Call



Making a Three-Way Call



During a call, you can call and connect a third party so that the three of you can talk together. You cannot do this if you already have a call on hold.

During a call:

Pr	ess	То
1	keypad keys	enter the third person's number
2		call the number and connect the new person
3	Suzo	connect the two calls
4	B	end the entire call

Using Features While On a Call

Additional On-Call Features


While you are on a call, you can perform the following tasks:

DoThis	То
Press MUTE () (if available)	mute a call
or	
Press MENU > Mute	
Press SPEAKER () (if available)	activate an attached speakerphone
or	(hands-free mode)
Press MENU > Spkrphone On	
Press Menu > My Tel. Number	see your phone number
Press Send Tones	send a number to the network as DTMF tones, for credit card calling or password entry
	To activate DTMF tones, see the "DTMF" item on page 65.



Navigating to a Feature

You can access many of your phone's features by using these keys to move through the menu system:

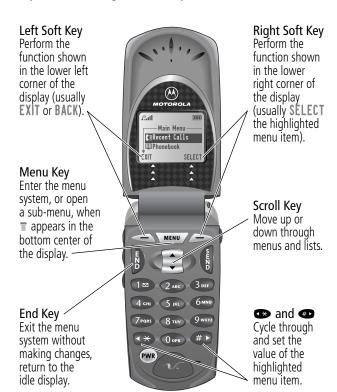


This guide shows you how to navigate to a specific menu feature as follows:

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to see the dialed calls list.

Selecting a Feature Option

Some features require you to select an item from a list:

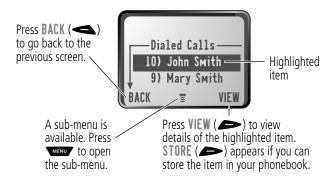




Select an item by highlighting it. Use one of the following approaches:

- Press to scroll up or down to the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.


Entering Feature Information

Features such as the phonebook and datebook require you to enter information to fill in an entry's details:

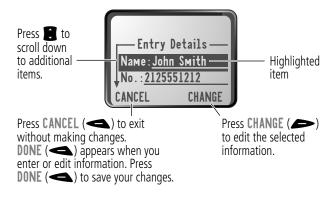


- Enter numbers or text with the keypad. (See "Entering Text" on page 54.)
- When an item has a list of possible values, press or to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and then decide that you do not want to save your changes, press to exit without saving.

The message center lets you compose and send text messages. (See "Entering Text" on page 54.) A *flashing cursor* shows you where the text will appear:

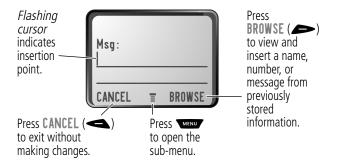



When you enter text, the flashing cursor changes to a *block cursor*, and the soft key functions change:

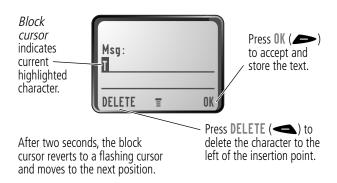

Entering Text

General Text Entry Rules

Use the keypad to enter letters, numbers, and other characters. Press the same key repeatedly to cycle through available characters (see "Character Chart" on page 55):

Press a number key to enter text at flashing cursor location.

Press a number key as many times as necessary to enter the desired character.

Press and hold a number key to cycle between uppercase and lowercase characters



Move flashing cursor up or down one line in text message, or change character in block cursor to uppercase or lowercase

Move flashing cursor to the left or right in text message.



- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalized unless you manually override it. (Hold the number key or press down to force the character to lowercase while it is highlighted by the block cursor.)

Character Chart

Use this chart as a guide for entering spaces, numbers, letters, and other characters. Press and hold a key to cycle between uppercase and lowercase characters.

18	space . 1 ? ! , @ & : ; " - () '¿ ¡ % £ \$ ¥ ¤
2 _{ABC}	abc2äåà α β ç
3 DEF	def3 Δ éè Φ
4 сні	g h i 4 Γ
5 pt	j k 5 Λ
6 ммо	m n o 6 ñ ö ø ò Ω
7 _{PQRS}	pqrs7 Π ß Σ
8 TUV	tuv8Θüù
9wxvz	w x y z 9 Ξ Ψ
O OPR	+ - 0 x * / = > < # §

Predictive Text Entry with iTAP Software

iTAP™ software provides a predictive text entry method that lets you enter the letters of a word using only one keypress per letter.

Activating and Deactivating iTAP Software

You must activate iTAP software prior to entering letters. You can do this from any text entry screen by pressing and selecting the iTAP menu option.

When you are finished using iTAP software, press again from any text entry screen and select **TAP Method** to reset your phone to use the standard text entry method described on pages 54 and 55.


Entering Words

To enter a word:

Do	This	То
1	Press a keypad key	enter the first letter of the word
	once	The letters associated with the key you pressed are shown at the bottom of the display.
2	2 Press keypad keys (one per letter)	enter the rest of the word
		Alternative words and letter combinations are shown at the bottom of the display based on the keys you press. These word choices are updated with each keypress.



Do	This	То
3	When you have entered all the letters of the word, press	locate and highlight the word you want
4	Press SELECT (>>)	add the highlighted word to the text area at the top of the display
		A space is automatically inserted after the word.

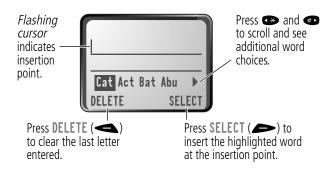

Entering Novel Words

You may enter a word that is not in the iTAP software dictionary. If you enter all the letters of a word but the word is not displayed:

Do	This	То
1	Press DELETE () one or more times	delete one or more letters until you see a letter combination that matches the start of the word
2	Press ◆ and ◆	highlight the letter or letter combination
3	Press SELECT (♠), then press ♠	shift the text entry cursor to the left and "lock" the selected portion of the word
4	Continue entering letters and highlighting letter combinations	spell the word

Punctuation

The iTAP software automatically adds a space after each word. When you enter punctuation, this space is removed. To use punctuation:

Press	То
1≥ or O∞	enter punctuation or other characters as shown in the "Character Chart" on page 55



Capitalization

The first word of a sentence is automatically capitalized, with following words in lowercase. To set or adjust character capitalization:

Press	То
8	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

Entering Numbers

To enter a number:

Do	This	То
1	Enter the first digit and then highlight it	put the iTAP software in number entry mode
2	Press keypad keys	add digits to the number
3	Press SELECT (>>)	enter the number at the insertion point

Deleting Letters and Words

Place the cursor to the right of the text that you want to delete, and then do the following:

Do This	То
Press DELETE (delete one letter at a time
Press and hold DELETE ()	delete the entire word
Continue to hold DELETE ()	delete the entire message

This chapter describes all of your phone's features in alphabetical order. Some descriptions also include page numbers where you can find more detailed information. If you would like to learn more about a specific feature, a reference guide for your phone is also available. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

http://motorola.com/consumer/manuals

or contact the Motorola Customer Call Center at 1-800-331-6456.

BROWSER



Access Web pages and run Web-based applications.



The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See "Micro-Browser" on page 114.

CONNECTION

Connect your phone to a computer or hand-held device to send and receive data and fax calls on the connected device. Connect your phone using a serial cable or USB cable. See "Connecting Your Phone to an External Device" on page 123.

Incoming Call

MENU > Settings

> Connection

> Incoming Call

Specify the format for the next incoming call. You can select Fax In Only, Data In Only, or Normal.

DАТЕВООК



Use the datebook calendar to schedule and review your appointments. See "Datebook" on page 86.

IN-CALL SETUP

Use the in-call setup menu to set the features that are active during a call, such as the in-call timer and call answering options.

Answer Options



Turn call answering options on or off:

Multi-Key Answer by pressing any key

Open to Answer Answer by opening the flip

In-Call Timer



Adjust call timer display and beep settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

Time Display the elapsed time for the

current call

Off No in-call timer display



MESSAGES



Adjust message settings, view and manage the various types of messages your phone can receive and/or send:



Browser Alerts Read alert messages received by your

micro-browser

Drafts Store and edit text messages that you

have written but not sent

Outbox View all outgoing text messages,

delivered and undelivered

Quick Notes Select and send pre-written messages

from the quick notes list

Text Msgs Send and receive text messages. See

"Messages—Text" on page 96

Voicemail Listen to your recorded voice

messages. See "Messages—

Voicemail" on page 94

OTHER SETTINGS

Car Settings





Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and automatically answer calls after two rings. See "Hands-Free Use" on page 120.

Headset



> Other Settings





Set your phone to automatically answer calls after two rings when connected to a headset. See "Hands-Free Use" on page 120.

Initial Setup



Set many basic phone options:

Animation Turn animation off (to conserve the

battery) or on. Animation makes your phone's menus move smoothly as you

scroll up and down.

Auto PIN Dial Some networks require an

authenticating PIN to allow

outgoing calls. Use this feature to automatically dial

your PIN.

Auto Redial Automatically redial calls that fail due

to busy network conditions

Backlight Set the amount of time that the

display backlight remains on, or turn off the backlight to conserve battery

power

Contrast Adjust the contrast setting for your

Setting display



DTMF Switch DTMF tones to be long, short,

or off

Language Set the language for phone menus

Master Clear Reset all options back to their original

factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries

Note: This option *erases all* user-entered information stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it

cannot be recovered.

Master Reset Reset all options back to their original

factory settings *except* for the unlock code, security code, and lifetime timer

Scroll Force the cursor to stop or wrap

around when it reaches the top or

bottom of a list in the display

Status Light Turn the status light off (to conserve

battery power) and on

Time and Date Set the phone's time and date

Zоом

Switch between three lines

(Zoom Out) and two lines (Zoom In) of

display text

Network

> Settings > Other Settings > Network

View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and turn on/off alerts that indicate when a call is dropped or network registration changes.

Personalize



Set several personal phone options:

Banner Change the text that appears in the

idle display

Greeting Change the text displayed when you

turn on your phone

Keys Change the functions of the soft keys

and smart key in the idle display (See "Customizing a Soft Key Function" on

page 119.)

Main Menu Change the order of the main menu

(See "Reordering Menu Items" on

page 118.)

Quick Dia1 Change quick dial number(s)



PHONE STATUS

Battery Meter

> Settings > Phone Status > Battery Meter

View a detailed battery charge meter.

My Tel. Number

> Settings > Phone Status > My Tel. Number

View, enter, and edit your name and phone number.

Other Information

> Settings
> Phone Status
> Other Information

View the phone's feature specifications (if available from the service provider).

PHONEBOOK

MENU > Phonebook

Open the phonebook.

Store names and phone numbers as entries in your phonebook. Then, you can call phonebook entries by selecting them from the phonebook list. See "Phonebook" on page 77.

QUICK DIAL

MENU > Quick Dia1

Dial pre-programmed customer service numbers.

Your service provider may program one or more quick dial numbers, such as the customer service number, into your phone. You can call them by selecting them from the quick dial list.

Note: Your service provider may use a different name for this feature.

RADIO



Listen to FM radio stations with the optional Motorola FM radio headset accessory. This menu feature is displayed only when the FM radio headset is plugged into the accessory connector port on your phone. See "Radio" on page 92.

RECENT CALLS

View the numbers of your recent dialed calls and received calls. See "Recent Calls" on page 71.

Call Times



View call timers.

You can view five timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See "Viewing and Resetting Call Times" on page 76.

Dialed Calls



View a list of recently dialed calls.

Your phone keeps a list of phone numbers from calls you recently dialed (even if the calls did not connect). See "Viewing the Received Calls or Dialed Calls List" on page 71.

Notepad



Call or store the last number entered on the keypad.



You can use this notepad to view the last number you entered, even if you did not call the number. See "Using the Notepad" on page 74.

Received Calls

> Recent Calls > Received Calls

View a list of recently received calls.

Your phone keeps a list of the numbers from calls you recently received (even if you did not answer). See "Viewing the Received Calls or Dialed Calls List" on page 71.

RING/VIBRATE

Alert

> Settings > Ring/Vibrate > Alert

Select a type of ring or vibration alert for incoming calls and messages. See "Ring/Vibrate" on page 116.

Alert Detail

> Settings > Ring/Vibrate > Alert Detail

Change details about the ring or vibration alert. *Alert* represents the name of the current alert setting. See "Ring/Vibrate" on page 116.

SECURITY

Lock Application

MENU > Settings > Security > Lock Application

Lock and unlock specific phone applications (such as phonebook and datebook) so that users must enter the unlock code to use them.

Lock Keypad

MENU > Settings > Security > Lock Keypad

Lock and unlock your keypad. See "Locking and Unlocking Your Keypad" on page 134.

New Passwords

> Settings > Security > New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See "Assigning a New Code or Password" on page 130.

Phone Lock



Lock and unlock your phone. See "Locking and Unlocking Your Phone" on page 132.

Restrict Calls

> Settings > Security > Restrict Calls

Restrict incoming and outgoing calls. See "Restricting Calls" on page 134.

SHORTCUTS



Create keypad or voice shortcuts to menu features. See "Shortcuts" on page 102.

VOICE NOTES



Use the voice key to record messages and phone calls. See "Voice Notes" on page 107.



You can use the recent calls menu to view received calls or dialed calls, retrieve the last number stored in the notepad, and view or reset call times.

Viewing the Received Calls or Dialed Calls List

Your phone keeps lists of the numbers from calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added. Each entry tells you the person's number (or name, if available) and whether the call connected or not. You can call, store, or delete the numbers on these lists.

Shortcut: Press **(** to go directly to the dialed calls list from the idle display.

MENU > Recent Calls

To open the recent calls menu:

Find the Feature

Pr	Press To	
1	8	scroll to Received Calls or Dialed Calls
2	SELECT (>>)	select Received Calls or Dialed Calls

Pr	ess	То
3	•	scroll to an entry you want to call, store, or delete
		Note: ✓ means the call connected.
4	Sam20	call the entry's number
		Tip: Press and hold for two seconds to send the entry number as DTMF tones. To activate DTMF tones, see the "DTMF" item on page 65.
	or	
		view the entry's details if View appears above the key, or store the entry's details in the phonebook if Store appears above the key
	or	
	MENU	open the Last Calls Menu to perform other procedures as described in the following list



The Last Calls Menu includes the following options:

Option	Description
Store	Create a phonebook entry with the selected number in the No. field. (This option is not available if STORE appears above the key, or if the number is already stored as a phonebook entry.)
Delete	Delete the entry. (This option is not available if DELETE appears above the key.)
Delete All	Delete all entries in the current list.
Send Message	Create a new text message, with the selected number in the Tel No . field. See "Sending a New Text Message" on page 100.
Add Digits	Add digits to the end of the selected number.
Attach Number	Attach another number from the phonebook or recent calls list to the end of the selected number.
Send Tones	Send the selected number to the network as DTMF tones, for credit card calling or password entry. (This option is available only during an active call.)
	To activate DTMF tones, see the "DTMF" item on page 65.

Using the Notepad

Your phone uses a notepad to store the most recent string of digits entered—either for a phone number that you called or for a number that you entered but did not call.

To call the number stored in the notepad, press \P from the idle display.

To create a phonebook entry or perform other operations with the number:

Find the Feature	MENU > Recent Calls
	> Notepad

Press	То
MENU	open the Dialing Menu (to attach a number or insert a special character). See "Additional Dialing Features" on page 44.
or	
STORE ()	create a new phonebook entry, with the notepad number copied into the No . field. See "Storing a Phonebook Entry" on page 78.



Call Times

Your phone tracks and records call times. Use the recent calls menu to view and reset a call timer.

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

You can view the approximate network connection time elapsed during the following calls:

Timer	Description
Last Call	Time spent on the last call dialed or received. You cannot reset this timer.
Dialed Calls	Total time spent on dialed calls since the last time you reset this timer.
Received Calls	Total time spent on calls received since the last time you reset this timer.
All Calls	Total time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Total time spent on all calls on this phone. You cannot reset this timer.

Viewing and Resetting Call Times

To view a call timer:

Find the Feature

-		
Pr	ess	То
1	8	scroll to Call Times
7	SFLECT (A)	onen the list of timers

MENU > Recent Calls

scroll to the timer you want

SELECT (view the recorded time

To reset the call timer:

Pr	ess	То
1	RESET ()	reset the time (if available)
2	YES (🇪)	confirm the reset




You can store a list of names and phone numbers in your phone's electronic phonebook. Your phone can store as many as 400 entries. You can view these entries and call them directly from your phone.

To see the list of names stored in your phonebook, press

Phonebook from the idle display. Scroll to a name and press VIEW () to view details of the phonebook entry as shown in the following display.

Fields in a Phonebook Entry Form

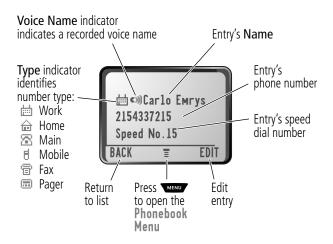

Storing a Phonebook Entry

A phone number is required for a phonebook entry. All other information is optional.

Shortcut: Enter a phone number in the idle display, then press **STORE** () to create a phonebook entry with the number in the **No**. field. Use the following procedure to enter additional information and store the entry.

Enter Information

Find the Feature	> Phonebook
	Menu - Now

Press		То
1	CHANGE ()	select Name
2	keypad keys	enter a name for the phonebook entry (See "Entering Text" on page 54.)
3	OK (>)	store the name
4	CHANGE (🗪)	select No.
5	keypad keys	enter the phone number
6	OK (>)	store the phone number
7	CHANGE (🗪)	select Type
8	8	scroll to the type of phone number
9	SELECT (>	select the number type



Pre	ess	То
10	RECORD ()	record a voice name for the entry, if desired
	Go to step 11 if you do not want to record a voice name for the entry	See "Recording a Voice Name For a Phonebook Entry" on page 80.
11	8	scroll to Speed No. , the number to "speed dial" the entry
		The next available speed dial number is assigned to a new phonebook number by default.
12	CHANGE (select Speed No . if you want to change it
13	keypad keys	enter a different speed number, if desired
14	OK (>)	save the modified speed number
		If your chosen speed number is already assigned to another entry, you are asked if you want to replace that entry.
15	SELECT ()	select MORE if you want to create another entry with the same Name
		Note: You must enter a name and number to use this option.

Complete Phonebook Entry

When you are finished entering information for a phonebook entry:

Press	То
DONE (store the entry and return to the phonebook list
	hunienony list

Recording a Voice Name For a Phonebook Entry

You can record a voice name when you create a new phonebook entry, or when you edit a previously stored phonebook entry. This lets you use voice dial to call the number without dialing (see "Voice Dial" on page 82).

Your phone can store a total of 20 voice names.

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

Find t	the	Feature	MENU	>	Phonebook
--------	-----	---------	------	---	-----------

Do	This	То
1	Press 🕽	scroll to the entry that needs a voice name
2	Press VIEW (>>)	display the entry's detailed view



Do	This	То
3	Press EDIT ()	edit the phonebook entry
4	Press 🛢	scroll to Voice Name
5	Press RECORD ()	begin the recording process
		The phone displays Press Voice key then say name.
6	Press and release the voice	record the voice name
	key on the right side of your phone and say the entry's name (in two seconds)	The phone displays Press Voice Key then REPEAT name.
	MENU Voice key 1 2 2 ARC 3 OFF 4 CHI 5 PAL 6 MINO	
7	Press the voice key and	confirm the voice name
	repeat the name	The phone displays Trained: Voice Name.

Dialing a Phonebook Entry

You can use the phonebook list, voice dial, speed dial, or one-touch dial to call the numbers stored in your phonebook. To use speed dial, see "Dialing With Speed Dial" on page 41. To use one-touch dial, see "Dialing With One-Touch Dial" on page 42.

Phonebook List

Find the Feature

To call a number from the phonebook list:

D	-
Press	lo lo
1	scroll to the entry you want to call
2	send the call

MENU > Phonehook

Voice Dial

To call a number using voice dial:

Press and release the voice key on the right side of your phone and say the entry's name (in two seconds). Your phone goes to the entry in the phonebook list, plays back the voice name stored with the phonebook entry, waits two seconds, then automatically dials the call.	Do This	Result
	voice key on the right side of your phone and say the entry's name (in	the phonebook list, plays back the voice name stored with the phonebook entry, waits two seconds, then automatically dials



Editing a Phonebook Entry

Find the Feature	MENU > Phonebook
------------------	------------------

Pr	ess	То
1	8	scroll to the entry you want to edit
2	VIEW (🗪)	display the entry's detailed view
3	EDIT (edit the phonebook entry

Edit a phonebook entry by following the procedures described in "Storing a Phonebook Entry" on page 78.

Deleting a Phonebook Entry

To delete a phonebook entry:

Find the Feature

YES (

Pr	ess	То
1	8	scroll to the entry you want to delete
2	MENU	open the Phonebook Menu
3	8	scroll to Delete
4	SELECT (>>)	select Delete

MENU > Phonebook

confirm the deletion

Checking Phonebook Capacity

You can check your phonebook's capacity to see how many entries you have used and how many more are available. Your phonebook holds 400 entries.

To check the phonebook capacity for your phone:

Find the Feature

Pr	ess	То
1	MENU	open the Phonebook Menu
2	8	scroll to Ph Book Capacity
3	SELECT (🗪)	select Ph Book Capacity
		The phone displays the number of entries that are in use and the number that are empty.

MENU > Phonebook

Synchronizing with TrueSync Software



You can synchronize phonebook entries between your phone and computer or hand-held device with TrueSync® software, a Motorola accessory product. See the TrueSync user guide for more information.



Setting Up the Phonebook

Find the Feature

You can set up your phone to sort your phonebook list by speed dial number (the standard), name, or voice dial.

Tip: The voice dial sort is identical to the name sort, except that the entries with voice name tags appear first.

MENU > Phonebook

Pr	ess	То
1	MENU	open the Phonebook Menu
2	8	scroll to Setup
3	SELECT (🗪)	select Setup
4	8	scroll to Sort by
5	CHANGE (🗪)	select Sort by
6	8	scroll to the entry you want
7	SELECT (🗪)	select the entry you want


The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can review your schedule of events for the week or by the day, and have the datebook play a reminder alarm for specific events. To schedule or see events:

Find the Feature > Datebook

The datebook is organized by *views*—from the week view, to the day view, to a view of a specific event.

Week View

When you open the datebook, your phone displays a calendar for the week. Lines or filled boxes under each day indicate that events have been scheduled.

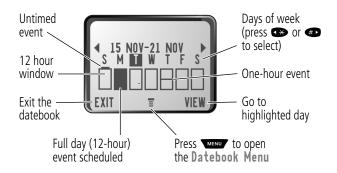



Day View

Select a day in the week view and press **VIEW** () to see the day's events. You can store, edit, view, copy, and delete any event from the day view.



Event View

Select an event in the day view and press **VIEW** () to open the detailed event view. You can edit, copy, and delete events from the event view.



Storing a New Event

A title is required for a datebook event. All other information is optional.

See "Selecting a Feature Option" on page 50 for instructions on scrolling to and selecting options.

Pr	ess	То
1	CHANGE (🗪)	select Title
2	keypad keys	enter a title for the event (see "Entering Text" on page 54.)
3	OK (>)	store the event title
4	8	scroll to other fields and enter information as necessary
		Other fields let you enter start time, duration, date, repeating events, and reminder alarm.
5	DONE (store the new event and return to the day view



Changing Event Information

To change information about an existing event:

Find the Feature MENU	>	Datebook
-----------------------	---	----------

Press		То
1	or scroll to the scheduled event day	
2	VIEW (🗪)	display the day view
3	8	scroll to the event you want to change
4	VIEW (🗪)	display the event view
5	EDIT (edit the event
6	8	scroll to the detail you want to change
7	CHANGE (🗪)	edit the information
8	keypad keys	enter the new information
9	DONE (store the information and return to the day view

Copying an Event

To copy information from a current event to a new event:

Find the Feature		MENU > Datebook
Pro	ess	То
1	* or *	scroll to the scheduled event day
2	VIEW (🗪)	display the day view
3	8	scroll to the event to copy
4	MENU	open the Datebook Menu
5	8	scroll to Copy
6	SELECT (copy the event
7	YES (confirm the copy
		Your phone assumes that you want to change the date, and displays the Date field.
8	keypad keys	enter the date information
9	(move to the month, day, and year
10	DONE (save the copy of the event
11	DONE (return to the day view



Deleting an Event

Find the Feature > Datebook


Pr	ess	То
1	Or #D	scroll to the scheduled event day
2	VIEW (🗪)	display the day view
3	8	scroll to the event to delete
4	MENU	open the Datebook Menu
5	8	scroll to Delete
6	SELECT (🗪)	select Delete
		For non-repeating events, go to step 7. For repeating events, the phone displays a delete event menu:
	a 🖺	scroll to This Event Only or Repeat Events
	b SELECT (select the event(s) to delete
7	YES (confirm the deletion
		The phone briefly displays a Deleted : message and returns you to the day view.

Radio



You can use your phone to tune, store presets, and listen to FM radio stations when the optional Motorola Original™ FM radio headset accessory is plugged into the phone's accessory connector port.

Turning the Radio On and Off

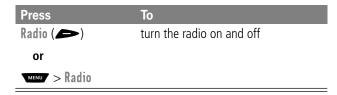

Note: The **Radio** () softkey option and **Radio** menu feature are displayed only when the FM radio headset is plugged into the accessory connector port.

Tuning a Station

To tune a radio station with the radio on:

Do This	То
Press 🕽	scroll up or down to the next frequency
or	
Press and hold	scroll up or down to the next available stereo station

Radio



Storing a Preset

When you tune the station that you want to save:

Do This	То
Press and hold a number key (to ••••)	assign its preset number to the tuned station

Selecting a Preset

To select a preset radio station:

Press	То
a number key	tune the station stored at that preset
(1 to 9 √)	location

Sending and Receiving Calls With the Radio On

Your phone interrupts the radio signal and rings or vibrates as usual to notify you of an incoming call, message, or other event. You can use the FM radio headset to converse with the other party during a call.

Turn the radio off before dialing outgoing calls. You do not have to turn off the radio to dial emergency numbers, or numbers selected from your phonebook or other lists.

Messages – Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone. Contact your service provider for more details.

Storing Your Voicemail Number

Store your voicemail number in your phone to make it faster and easier to use voicemail. Your voicemail number is provided by your service provider.

Find the Feature	MENU	>	Messages	
	MENU	>	VoiceMail	Setup

Press		То
1	keypad keys	enter the phone number for your voicemail
2	OK (🗪)	store the number

Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays **New VoiceMail** (Some networks only indicate when you have messages, whether they are new or not.) If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, listen to the message, or turn off your phone. (See "Reminders" on page 118.)

Messages – Voicemail



From the new message notification:

Do This	То
Press CALL ()	call your voicemail phone number and listen to the message

Listening to a Voicemail Message

To listen to your voicemail messages at any time:



Your phone calls the voicemail phone number you stored. If you do not have a voicemail number stored, the phone guides you through storing a number.



Text messages are brief messages that you can send and receive (such as **Where are we meeting?**). Received messages appear on your phone display or in your text message inbox.

You must set up the text message inbox *before* you can send and receive these messages. The total number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored in your phone.

Setting Up the Text Message Inbox

Find the Feature	MENU > Messages
	MENU > Text Msg Setup

Pr	ess	То
1	8	scroll to Srvce Center No.
2	CHANGE (change the Srvce Center No . which is provided by your service provider
3	keypad keys	enter the phone number for the service center that handles your outgoing messages
4	OK (>)	store your service center number
5	CHANGE (🗪)	change the Expire After period



Pr	ess	То
6	keypad keys	enter the expiration period—the number of days your network tries to send unreceived messages
7	OK (🗪)	store the expiration period
8	CHANGE ()	change the Cleanup setting
9	8	scroll to the period of time that messages stay in your inbox
10	SELECT (🗪)	select the cleanup period
		If you select Custom , continue. Otherwise, the procedure is complete.
11	8	change the entry for the number or label
12	and and	switch between the number and the label
13	DONE (store the custom cleanup period after you finish entering all information

Receiving a New Text Message

Note: You must set up the text message inbox before you can receive text messages.

When you receive a new message, your phone displays **New Message** and gives an alert. If reminders are turned on, your phone sends a reminder every five minutes until you close the

new message notification, read the message, or turn off your phone. (See "Reminders" on page 118.)

When your inbox is full, any new message replaces the oldest unlocked message.

From the new message notification:

Press	То
READ ()	open the message (or your text message inbox if there are multiple messages)

Reading, Locking, or Deleting a Text Message

You can open your text message inbox to read, lock, or delete messages at any time.

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted as new ones are added. If you want to save a message, you should lock it to prevent it from being overwritten as new messages are received.

Find the Feature MENU	<pre>> Messages > Text Msgs</pre>
-----------------------	---

Pr	ess	То
1	8	scroll to the message you want (□! = unread and urgent, ✓ = read, 🔓 = read and locked)
2	READ ()	open the message



Press	То
3 SAVE (close the message without changes
or DELETE (🗪)	delete the message
O'I'	open the Text Msg Menu to perform other procedures as described in the following list

The Text Msg Menu includes the following options:

Option	Description
Call Back	Call the number in the message header or the message text.
Go To	Go to a Web address (URL) in the message.
Reply	Open a new text message, with the message's Reply To number in the To field.
Lock/Unlock	Lock or unlock the message.
Delete	Delete the message or all inbox messages.
or Delete All	Press Yes () to confirm the deletion.
Store Number	Open a new phonebook entry with the message's embedded number in the No . field.

Option	Description
New	Open a new text message form.
Setup	Open the inbox setup menu.

Sending a New Text Message

To create and send a new text message:

Find the Feature

MENU > Messages > Text Msgs
MENU > New

Press		То
1	CHANGE (🗪)	select To
2	keypad keys	enter the phone number where you want to send the message
3	OK (>)	store the number
4	CHANGE (🗪)	select Msg
5	keypad keys	enter the text message (see "Entering Text" on page 54.)
6	OK (>)	store the text message
7	CHANGE (🗪)	select Call
8	keypad keys	enter the number you want your recipient to call back (the message's From field)
9	OK (🇪)	store the number



Press		То	
10	DONE (finish the message	
		Your phone displays Send Message Now?	
11	YES (send the message	
	or		
	NO ()	cancel the message or save it as a draft	

Viewing the Status of Sent Text Messages

Text messages that you send are stored in the outbox. To view the contents of your outbox:

Find the Feature > Messages > Outbox

Messages are sorted from newest to oldest.

The following icons indicate message status:

- Sending in progress
- ✓ Delivered
- × Sending failed

Your phone includes several pre-programmed shortcuts. You can create additional shortcuts, if you like, to mark frequently used menu items.

Standard Shortcuts

The following shortcuts are pre-programmed on your phone. You cannot edit or delete these shortcuts.

Do This	То	
Press MENU, then press and hold MENU	zoom in/out your phone's display view	
(within two seconds)	(See "Changing the Zoom Setting" on page 31.)	
Press MENU (*	lock/unlock your keypad	
Press MENU #	display your phone number	
Press (go to the dialed calls list	
	(See "Recent Calls" on page 71.)	

User-Settable Shortcuts

You can create shortcuts to many menu features and applications. A shortcut takes you directly to the menu item, or performs the menu action (if applicable).



Creating a Shortcut

You can assign a keypad shortcut, or both a keypad shortcut *and* a voice shortcut to a menu item.

A voice shortcut lets you go directly to a menu item by saying its shortcut name. Your phone can store a total of five voice shortcuts.

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

This	То
Press MENU	enter the menu system
Scroll to the item to which you want to assign a shortcut	highlight the menu item
Press and hold MENU	open the shortcut editor
	The phone displays:
	Assign Shortcut for: "Item"?
	where <i>Item</i> is the name of the item you selected.
Press YES ()	view shortcut options
	Press MENU Scroll to the item to which you want to assign a shortcut Press and hold MENU

Do	This	То
5	Press CHANGE (>>)	change the keypad shortcut number, if necessary
	or	
	Press DONE (select the default keypad shortcut number and close the shortcut editor if you do not want to assign a voice shortcut
	or	
	Press 🛢	scroll to Voice if you want to assign a voice shortcut
6	Press RECORD ()	begin the recording process
		The phone displays Press Voice key then say voice shortcut.



Do	This	То
7	Press and release the voice key on the right side of your phone and say the shortcut's name (in two seconds)	record the shortcut name The phone displays Press Voice key then REPEAT voice shortcut.
	MENU VOICE Key N	
8	Press and release the voice key and repeat the name	confirm the shortcut name
		The phone displays Trained: Voice Shortcut

Using Shortcuts

Press **DONE** (

You can use a shortcut from the idle display, while on a call, or while scrolling through a menu.

close the shortcut editor

Use a Keypad Shortcut

If you know the shortcut number:

Pr	ess	То
1	MENU	open the menu
2	the shortcut's number	go to the menu item, or perform the menu action

Select a Shortcut From the List

To select a shortcut from the shortcut list:

Find the Feature > Shortcuts > the shortcut you want

Use a Voice Shortcut

To use a voice shortcut:

Do This		То
1	Press MENU	open the menu
2	Press and release the voice key on the right side of your phone and say the shortcut's name (in two seconds)	go to the menu item, or perform the menu action



The voice note feature lets you record personal messages. You can play back a voice note at any time. There are no pre-recorded voice notes on your phone.

Recording a Voice Note

Your phone can store a total of two minutes of voice note recordings. (That is, the combined recording time of all voice notes cannot exceed two minutes.)

Use this procedure to record a voice note when the idle display is visible.

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

Do This Result Press and hold the voice A tone sounds in the key on the right side of earpiece and the phone your phone for the duration displays the Recording of the recording. Voice Note message. Voice key The phone records the Speak your voice message into the phone. message and displays a recording timer. 3 The phone displays the voice Release the voice key to notes list number and the stop recording.

total recording time.



Viewing the Voice Notes List

The voice notes list shows all your voice notes along with other important information and features.





New Voice Note appears at the end of the list or by itself if no voice notes are stored. Select **New Voice Note** to view instructions on how to record a new voice note.

Playing a Voice Note

To play a recorded voice note:

Find the Feature	> Voice Notes
------------------	---------------

Press	То
1	scroll to the voice note


Press	То
2 PLAY ()	play the voice note

When a Motorola OriginalTM headset accessory or FM radio headset accessory is attached to your phone, voice note playback is automatically routed to the headset.

Tip: You can play a voice note while taking a call. It won't be transmitted to the other party.

Playback Screen

While the voice note is playing, the playback screen is displayed.

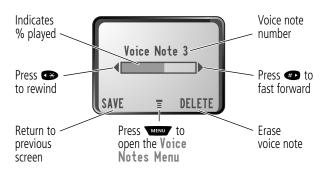



Voice Note Controls

While playing back a voice note, press these keys to do the following:



Locking and Unlocking a Voice Note

Find the Feeture

You can prevent a voice note from being accidentally deleted by locking it. To delete a locked voice note, you must first unlock it.

- Voice Notes

FII	nd the reature	MENUT > VOICE NOTES
Pr	ess	То
1	8	scroll to the voice note you want to lock or unlock
2	MENU	open the Voice Notes Menu
3	8	scroll to Lock or Unlock
4	SELECT (🗪)	lock or unlock the voice note

You can also lock or unlock a voice note while playing it back. When the playback screen is displayed:

Pr	ess	То	
1	MENU	open the Voice Notes Menu	
2	8	scroll to Lock or Unlock	
3	SELECT (🗪)	ELECT (lock or unlock the voice note	

Playback stops when you lock or unlock a voice note. Press any number key to resume playback.



Deleting a Voice Note

Find the Feature

You can delete a single unlocked voice note or all unlocked voice notes. To delete a locked voice note, you must first unlock it. See "Locking and Unlocking a Voice Note" on page 112.

MENU > Voice Notes

Pr	ess	То
1	8	scroll to the voice note you want to delete
2	MENU	open the Voice Notes Menu
3	8	scroll to Delete or Delete All
4	SELECT (🗪)	select the highlighted option
		The phone displays Delete Voice Note X?, or Delete All Voice Notes?
5	YES (delete the selected voice note, or delete all voice notes

Notes:

- You can always press NO (>>>) to cancel deletion.
- A deleted voice note cannot be recovered.

Micro-Browser



The micro-browser lets you access Web pages and on your phone. Contact your service provider to set up access, if necessary.

Starting a Micro-Browser Session

To open the micro-browser:



The micro-browser displays the home page set up by your service provider.

Pr	ess	То
1	8	scroll to a bookmark or service
2	SELECT (🗪)	select the service

Shortcut: If you open a text message with a Web address (URL) in it, you can go directly to the URL by selecting \(\text{MENU} > \text{Go} \) To.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

Micro-Browser



Interacting With Web Pages

You can perform the following operations on a Web page:

Do This	То
Press 🛢	scroll through a text message
Press and then SELECT ()	scroll through and select items in a list
Press keypad keys and then OK ()	enter requested information
Press to scroll to a phone number on a Web page, then press	call the number from the micro-browser
Press 🕶	go back to the previous Web page

You can adjust a wide variety of phone settings to suit your needs.

Ring/Vibrate

Your phone rings or vibrates to notify you of an incoming call, message, or other event. This ring or vibration is called an *alert*. You can use a standard alert for all events, or set different alert types for different events. The alert setting indicator in your display shows the current standard alert setting:

Δ))	Loud ring	Δ»	Soft ring
8d8	Vibrate	ķΔ	Ring and vibrate
Ąz	Silent		

Select a Ring/Vibration for All Events

Find the Feature	MENU	> Settings > Ring/Vibrate	
		> Alert	

Pr	ess	То
1	8	scroll to the alert you want to use
2 SELECT ()		select the alert
		The phone displays the Changed: Alert message.



Select a Ring/Vibration for a Specific Event

You can select the alert that your phone uses for a specific event (such as an incoming call) from 32 different preset tones and vibrations. When you select a ring or vibration alert for a *specific* event, it overrides the default alert set for *all* events.

Tip: This feature also lets you set the ringer volume and keypad volume.

Pr	ess	То
1	8	scroll to the event for which you want to set a new alert
2	CHANGE (🗪)	select the event
		The phone displays the list of available alerts.
3	8	scroll to the alert you want for the event
4	SELECT ()	select the alert
		The phone displays the Changed : <i>Event Alert</i> message.

Reminders

Reminders are alerts that ring or vibrate to notify you about a voicemail or text message that you have received, or a datebook event that you have scheduled.

To set or turn off reminders:

Find the Feature	MENU	> Settings > Ring/Vibrate
		> Alert Detail > Reminders

Pr	ess	То
1	8	scroll to the reminder alert you want: Beep, Vibrate, or Off
		Beep or Vibrate sets the corresponding reminder alert type. Off turns off all reminders.
2	SELECT (select the reminder alert

Reordering Menu Items

You can customize the order of the items in your phone's main menu, depending upon your usage.





Pr	ess	То
1	8	scroll to the menu item you want to move
2	GRAB (🗪)	grab the menu item you want to move
3	8	move the item up or down the menu
4	INSERT (🗪)	insert the item in the new location

Customizing a Soft Key Function

You can relabel the soft keys (and) and the smart key to access different main menu items from the idle display.

Find the Feature > Settings > Other Settings > Personalize > Keys

Press		То
1	8	scroll to Left, Right, or Smart
2	CHANGE (open the key editor
3	8	scroll to the new key function
4	CHANGE ()	confirm the new function
		The key will have the new function whenever the phone is idle.

Hands-Free Use



You can purchase an optional Motorola Original™ hands-free car kit or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Automatic Answer

When you activate automatic answer and connect your phone to a car kit or headset, your phone automatically answers calls after two rings.

Find the Feature	MENU	>	Settin	gs
		>	Other	Settings

Pr	ess	То
1	8	scroll to Car Settings or Headset
2	SELECT (🗪)	select the feature
3	8	scroll to Auto Answer
4	CHANGE (🗪)	select Auto Answer
5	8	scroll to On or Off
6	SELECT (🗪)	confirm the setting



Automatic Hands-Free

You can set up your phone to automatically route calls to a car kit when it detects a connection.

Find the Feature	MENU > Settings
	> Other Settings
	> Car Settings
	> Auto Handsfree

Pr	ess	То
1	8	scroll to On or Off
2	SELECT (🗪)	confirm the setting

Power-Off Delay

When your phone is connected to a car kit, you can set it to stay on for a specified time period after you switch off the ignition. This keeps your phone from draining your vehicle battery by staying on indefinitely, but leaves your phone on long enough that you do not have to re-enter your unlock code when you make short stops.

Find the Feature	MENU > Settings
	> Other Settings
	> Car Settings
	> Power-Off Delay

Press	То
1	scroll to the time delay option you want

Press		То	
2	SELECT (>	confirm your selection	

Caution: If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to accidentally drain your vehicle battery if you select this option.

Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.

Find the Feature	MENU > Settings
	> Other Settings
	> Car Settings
	> Charger Time

Pr	ess	То
1	8	scroll to the charge time option you want
2	SELECT (🗪)	confirm your selection





A Motorola OriginalTM data kit lets you transfer data between your phone and a computer or other external device. You can:

- synchronize data between your phone and an external device with TrueSync[®] software, a Motorola accessory product. See the TrueSync user quide for more information.
- use your phone as a wireless modem to connect to the Internet
- use your phone to send and receive data and fax calls on your computer or hand-held device.

More information about Motorola Original data kits is available at:

http://www.motorola.com/dataaccessories.

Connecting Your Phone to an External Device

Connect your phone to an external device (such as a computer or hand-held device) using a serial cable or a USB cable.

Set Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.

Note: Check your computer or hand-held device to determine the type of cable you need.

Attaching a Serial Cable

Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

Do This

1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.



2 With the Motorola logo and the phone both facing you, plug the detachable head into your phone's accessory connector port.



3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.



Attaching a USB Cable

Do This

1 Plug the end of the cable with the Motorola logo into your phone's accessory connector port. Make sure that the logo and the phone are both facing you.



2 Plug the other end—the USB connection—into the USB port on the external device.

Install the Software

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.

Sending a Data or Fax Call

You can connect your phone to a computer or hand-held device to send data or a fax from the connected device.

Use this feature to transfer data from your computer onto another device, and to synchronize phonebook and datebook information between your phone, computer, and/or hand-held device.

Connect your phone (see "Connecting Your Phone to an External Device" on page 123) and do the following:

Do	This	То
1	Check the phone	make sure that the phone is connected and powered on
2	Open the application on	place the call through the application (such as dial-up-networking or fax)
	your computer	Note: You cannot dial data or fax numbers through your phone's keypad. You must dial them through your computer.
3	End the transfer on your computer	close the call and connection when the transfer is complete

Receiving a Data or Fax Call

You can connect your phone to a computer or hand-held device to receive data or a fax.

Use this feature to transfer data to your computer from another device.



Set Up Your Phone

Before you receive a data or fax call, you must configure your phone for the incoming call type and connect the phone to the device that will receive the call.

Find the Feature	MENU	>	Settings	>	Connection
		>	Incoming	C	all

Do	This	То
1	Press CHANGE ()	select the Next Call menu option
2	Press 🕽	scroll to Data In Only or Fax In Only
		Selecting either of these options mutes the earpiece and routes the next incoming call to the connected device.
3	Press SELECT (>>)	set the format for the next incoming call
4	Connect your	enable the data or fax transfer
	phone to the device	(See "Connecting Your Phone to an External Device" on page 123.)

Note: You cannot answer incoming voice calls when your phone is in data or fax mode. Any voice calls you receive are treated as unanswered calls. You must reset your phone to voice mode to

return these calls. See "Reset Normal Voice Operation" on page 128 and "Returning an Unanswered Call" on page 38.

Transfer the Data or Fax

Your phone notifies you when the data or fax call arrives, and transfers the call to the connected device. You must use the application running on the connected device to answer the call.

End the Data/Fax Connection

When the data or fax transfer is complete:

Do This	То
End the call from the	close the connection
connected device	

Reset Normal Voice Operation

After you receive a data or fax call, you *must* reset your phone to resume normal voice operations. You cannot receive voice calls when your phone is in data or fax mode.

Find the Feature	MENU	> Settings	> Connection
		> Incoming	Call

Do	This	То
1	Press CHANGE ()	select the Next Call menu option
2	Press 🚺	scroll to Normal



Do	This	То
3	Press SELECT (>>)	reset your phone to make and receive regular voice calls

Your phone also reverts to normal voice operations when you turn it off and then turn it back on.

Assigning a New Code or Password

Your phone's four-digit unlock code is originally set to 1234, and the six-digit security code is originally set to 000000 at the factory. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information or modifying your phone settings. The unlock code must contain four digits, and the security code must contain six digits. Be sure to make a note of the new numbers.

Notes:

- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code (such as master clear, master reset, and the unlock code bypass feature).
- If the only password you can change is the unlock code, the New Passwords menu is unavailable and the Unlock Code option appears on the Phone Lock menu. In this case, open the unlock code editor by selecting: Settings
 Security > Phone Lock > Unlock Code.



To change a code or password:

Find the Feature	MENU	>	Settings	>	Security
		>	New Pass	W	ords

Pr	ess	То
1	8	scroll to the code or password you want to change
2	CHANGE (🗪)	select the code or password
3	keypad keys	enter your old code
		If you do not know your code, see "If You Forget a Code or Password" on page 131.
4	OK (>)	submit your old code
5	keypad keys	enter the new code
6	OK (🇪)	assign the new code
7	keypad keys	re-enter the new code
8	OK (🗪)	confirm the new code

If You Forget a Code or Password

If you forget your security code (originally set to 000000), contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following when you see the **Enter Unlock Code** message:

Pr	ess	То
1	MENU	go to the unlock code bypass screen
2	keypad keys	enter your security code
3	OK (>)	submit your security code

Locking and Unlocking Your Phone

You can lock your phone manually or set your phone to lock automatically whenever you turn it off.

When you try to use a locked phone, it asks you to enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked. See "Dialing an Emergency Number When the Phone is Locked" on page 39.

Lock Your Phone Manually

Find the Feature > Settings > Security > Phone Lock > Lock Now

Pr	ess	То
1	keypad keys	enter your four-digit unlock code
2	OK (>)	lock the phone



Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature	MENU > Settings > Security
	> Phone Lock
	> Automatic Lock > On

Pr	ess	То
1	keypad keys	enter your four-digit unlock code
2	OK (>)	set the phone to lock automatically

Unlock Your Phone

At the Enter Unlock Code prompt:

Pr	ess	То
1	keypad keys	enter your four-digit unlock code
		The unlock code is originally set to 1234. If necessary, see "If You Forget a Code or Password" on page 131.
2	OK (>)	unlock your phone

Locking and Unlocking Your Keypad

You can lock your phone keypad to prevent accidental use. This feature is useful in situations where an accidental keypress might inadvertently dial an emergency number or one-touch dial number (for example, when carrying your phone in a purse or pocket).

Press	То
MENU (**)	lock or unlock your keypad

Note: Incoming calls and messages unlock the keypad.

Restricting Calls

You can stop all outgoing or incoming calls, or you can restrict them to the numbers stored in your phonebook.

An incoming call that is restricted is treated as an unanswered call. Your phone displays the **Missed Calls** message and adds the call to the received calls list.

Notes:

- You can still place calls to emergency numbers when outgoing calls are restricted.
- Your phone still receives incoming text messages when incoming calls are restricted.



Find the Feature



Pr	ess	То
1	keypad keys	enter your four-digit unlock code
2	OK (>)	open the restrict calls menu
3	8	scroll to Outgoing Calls or Incoming Calls
4	CHANGE ()	select Outgoing Calls or Incoming Calls
5	CHANGE (🗪)	change the Allow setting
6	8	scroll to A11, None, or Phonebook
7	SELECT (🗪)	select the calls you want to allow

Tip: The phonebook application is not locked when you restrict calls to numbers stored in the phonebook. To prevent a user from adding (and then calling) a new phonebook entry, you may want to lock the phonebook application under these circumstances. See the "Lock Application" item on page 69.

Check these questions first if you have problems with your phone:

Question	Answer
Is your phone set up correctly?	Press . If you do not see your phone number, contact your service provider.
Is your battery charged? Do you see in the display?	The battery level indicator should have at least one segment showing (). If it does not, recharge your battery. (See "Charging the Battery" on page 24 and "Battery Use" on page 35.)
Does the handset have a signal? Do you see P in the display?	Make sure that your antenna is fully extended. The signal strength indicator should have at least one segment showing (22). If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, press the upper volume key on the side of your phone.



Question	Answer
Is the other party unable to hear you?	Make sure that your antenna is fully extended and that your phone is not muted. Press UNMUTE () if necessary to unmute the phone.
	Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.
Has the phone been damaged, dropped, or gotten wet?	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery or battery charger used?	

The following refer to specific problems:

Problem	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	See "If You Forget a Code or Password" on page 131.

Problem	Solution
I pressed the power key, but nothing happened.	Be sure to press and hold until the display appears and you hear an audible alert (this could take a couple of seconds). If nothing happens, check that a charged battery is installed. (See "Installing the Battery" on page 22.)
The display says: Enter Unlock Code. How do I unlock my phone?	Enter the factory-preset unlock code (1234), or the last four digits of your phone number. (See "Locking and Unlocking Your Phone" on page 132.) If this fails, call your service provider (the company that sends you your monthly wireless service bill).
My phone asks for an unlock code when I try to open a feature.	The application you want is locked. If you own the phone but do not know the unlock code, see "If You Forget a Code or Password" on page 131.
My phone does not ring.	If you see ﷺ or ﷺ in the display, then the ringer is turned off. See "Ring/Vibrate" on page 116.
I tried to place a call and heard an alternating high/ low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display says Ready before making a call.



Problem	Solution
I cannot send/ receive calls.	Make sure that your antenna is fully extended and that you have a phone signal (see the "Signal Strength Indicator" item on page 29). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings. Your phone also may have the Restrict Calls feature turned on. If you know the unlock code, you can change this setting in the security menu (Settings > Security).
My phone has poor reception and drops calls.	Make sure that your antenna is fully extended and is not bent or damaged. Also, make sure you have a phone signal (see the "Signal Strength Indicator" item on page 29). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.
I cannot hear others on my phone.	While on a call, press the upper volume key on the left side of your phone. Your phone display should show the volume increasing. Also, make sure that your phone's earpiece is not blocked by its carrying case.

Problem	Solution
I cannot open my inbox.	Before you can use text or information services messages, you must set up the appropriate inbox. See "Setting Up the Text Message Inbox" on page 96.
How do I see the calls I sent or received?	To see the most recent calls you dialed or received, open the "Recent Calls" lists:
	> Recent Calls > Received Calls or Dialed Calls
My phone will not send voicemail commands, passwords, or other codes.	Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be Long , Short , or Off . If you have trouble sending numbers, try changing your DTMF setting.
	1 From the idle display, press:
	> Settings > Other Settings > Initial Setup > DTMF
	2 Press to scroll to Long or Short (analog networks may not recognize short tones).
	3 Press SELECT () to select it.



Problem	Solution
My phone's display is too dark.	You can use the Contrast Setting feature (see page 64) to change the level of contrast in your phone display.
	You can also use the Backlight feature (see page 64) to change the length of time that your phone's backlight display stays on.
My battery didn't last as long as I expected. What can I do to extend battery life?	Your battery's performance is affected by charge time, feature use, temperature changes, and other factors. For tips on extending your battery life, see "Battery Use" on page 35.
I am unable to record a voice note, voice name, or voice shortcut	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) away from your mouth, and speak directly into your phone's microphone in a normal tone of voice.

Problem	Solution
I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?	The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer. Finally, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, and your computer will automatically activate the port.
My phone beeped when I attached the data cable, but my fax and data applications don't work.	You must be in an area with digital coverage. Check your phone's display for the digital signal indicator (D). Some wireless networks may not support data or fax transmission. If you see the digital indicator, but you are roaming on an unfamiliar network, this may be the case. Also, remember that data and fax transmission usually requires a subscription. Call your service provider for more information.

Troubleshooting



Problem	Solution
When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?	19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.
I can't end my data call by closing the application on my computer. What can I do?	Try pressing on your phone. Also try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer. These alternative methods may disrupt the application on your computer.
I launched the micro-browser but the display says: Service Not Available.	You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.
I launched the micro-browser but the display says: Data Server Unavailable.	Try again in a few minutes. The servers may be temporarily busy.

Programming Instructions

Follow this procedure if you need to program your phone's phone number or system ID.

Note: Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- 10-digit MIN (Mobile Identification Number)
- 8- to 15-digit IMSI (International Mobile Service Identifier)
- 8- to 15-digit MDN (Mobile Directory Number)
- 5-digit AMPS SysID number
- 5-digit CDMA SysID number

Programming Instructions

Do	This	То
1	Press 7ress 4cm 6mm 3 or	open the user activation menu
	(These keys spell P-H-O-N-E + MENU MENU).	
2	Press SELECT (select NAM1
3	Press the keypad keys for the 10-digit MIN	open the MIN display and enter the new MIN
4	Press OK (🗪)	store the new MIN
5	Similarly, enter appropriate nu AMPS SysID, and CDMA SysID	mbers for the IMSI, MDN,
6	Press DONE (close the NAM1 list
7	Press BACK ()	close the user activation menu

Specific Absorption Rate Data

This model phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. ¹ Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.42 W/kg², and when worn on the body, as described in this user guide, is 1.23 W/kg². (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

http://www.fcc.gov/oet/fccid after searching on FCC ID IHDT56AD1.

- In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- The SAR information reported to the FCC includes the FCC-accepted Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called "cordless phones," which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that hand-held mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results

obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepithelliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the

- National Cancer Institute is expected to bear on the accuracy and repeatability of these results. ¹
- **2** Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³

2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S.

population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people

are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

Where can I find additional information?

For additional information, see the following Web sites:

Federal Communications Commission (FCC) RF Safety Program (select "Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters"):

http://www.fcc.gov/oet/rfsafety

World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As):

http://www.who.int/emf

United Kingdom, National Radiological Protection Board: http://www.nrpb.org.uk

Cellular Telecommunications Industry Association (CTIA): http://www.wow-com.com

U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health: http://www.fda.gov/cdrh/consumer/

- Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
- Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
- 3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. Int. J. Radiat. Biol., April 8, 1999.
- 4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. Int. J. Oncol., 15: 113-116, 1999.

FDA020400

Limited Warranty for Motorola Personal Communications Products Purchased in the United States and Canada

I. What This Warranty Covers

- <u>Products</u>. Defects in materials and workmanship in wireless cellular telephones, pagers, and/or two-way radios, and certain accessories that are sold with them, such as the battery, battery charger and holster manufactured and/or sold by Motorola (Products).
- <u>Batteries</u>. Defects in materials and workmanship in batteries that are manufactured by Motorola and/or sold with Products are covered by this warranty only if the fullycharged capacity falls below 80% of rated capacity or they leak.
- <u>Software</u>. Physical defects in the media that tangibly embodies each copy of any software supplied with the Products.

II. What the Period of Coverage Is

From the date the Products are purchased by the first end-user:

- <u>Products</u>. The warranty is for one year. Exception: The warranty for Spirit GT series and Talkabout series two-way radio accessories is for 90 days.
- Software. The warranty is for 90 days.
- <u>Repairs/Replacements</u>. The warranty is for the balance of the original warranty or for 90 days from the date you receive it, whichever is longer.

III. Who is Covered

This warranty extends to the first end-user purchaser, only.

IV. What We Will Do to Correct Warranty Problems

At no charge to you, we have the option to repair or replace the Products or software that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

V. How to Get Warranty Service

Please call:

USA
03/1

 Cellular
 1-800-331-6456

 Paging
 1-800-548-9954

 Two-Way
 1-800-353-2729

 TTY (Text Telephone)
 1-888-390-6456

Canada

All Products 1-800-461-4575 **TTY (Text Telephone)** 1-888-390-6456

You will receive instructions on how to ship the Products to Motorola. You must ship the Products to us with freight, duties and insurance prepaid. Along with the Products you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. RETAIN YOUR ORIGINAL PROOF OF PURCHASE.

We will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.

VI. What This Warranty Does Not Cover

 Products that are operated in combination with ancillary or peripheral equipment or software not furnished by Motorola for use with the Products ("ancillary equipment"), or any damage to the Products or ancillary equipment as a result of such use. Among other things, "ancillary equipment" includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.

- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than
 the Motorola-approved battery charger specified for
 charging such batteries; (b) have any broken seals or show
 evidence of tampering; (c) are used in equipment other
 than the Product for which they are specified; or (d) are
 charged and stored at temperatures greater than 60
 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.
- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.

- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Products that are leased.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

VII. Some Other Limitations

This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.

No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.

No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided

by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.

VIII. Patent and Software Provisions

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become noninfringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

This is Motorola's entire liability with respect to infringement of patents by the Products.

Laws in the United States and other countries preserve for Motorola and other third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to reproduce in copies and distribute copies of such software. The software may be copied into, used in and redistributed with only those Products that are associated with such software. No other use, including without limitation, disassembly or reverse engineering of such software or exercise of exclusive rights in such software is permitted.

IX. State Law and Other Jurisdiction Rights

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

USA

 Cellular
 1-800-331-6456

 Paging
 1-800-548-9954

 Two-Way
 1-800-353-2729

 TTY (Text Telephone)
 1-888-390-6456

Canada

All Products 1-800-461-4575 **TTY (Text Telephone)** 1-888-390-6456

To correspond with Motorola about the Products, please write us at http://www.motorola.com or at:

In the USA: Motorola, Inc. 600 North U.S. Highway 45 Libertyville, IL 60048

In Canada:

Motorola Canada Limited 5875 Whittle Road Mississauga, ON L4Z 2H4

Patent Information

Manufactured under one or more of the following U.S. patents:

4291475	4616314	4797947	4890199	4977589	5036532
4302845	4617520	4798975	4896124	4977616	5038253
4312074	4628529	4802236	4896361	4979207	5040127
4365221	4629829	4803726	4897873	4984219	5042071
4369516	4633141	4809356	4903326	4984290	5045824
4369520	4636593	4811377	4903327	4989230	5053924
4369522	4636741	4811404	4904549	4992753	5055800
4374370	4648125	4817157	4904992	4996529	5055802
4378603	4649543	4827507	4905288	5008925	5055803
4390963	4654655	4829543	4905301	5010309	5057762
4398265	4680787	4831647	4912602	5010570	5058136
4400584	4704588	4843621	4916262	5014294	5059885
4400585	4711361	4845772	4918431	5014346	5060264
4434461	4715063	4851966	4918732	5017856	5063340
4455534	4717884	4852090	4922178	5018188	5065408
4486624	4730195	4860336	4941203	5020076	5067139
4491972	4731813	4860341	4942570	5020091	5070310
4523155	4736277	4868576	4945570	5020092	5077757
4546329	4737976	4870686	4956854	5020093	5077790
4574243	4741018	4872196	4959851	5023580	5081674
4581602	4742562	4873683	4963812	5023866	5083304
4581749	4761621	4876552	4964121	5023911	5087004
4585957	4764737	4876656	4970475	5025387	5093632
4593155	4775998	4876740	4972355	5027388	5095503
4594657	4791527	4879533	4972432	5028083	5107487
4602218	4794489	4885553	4972455	5028859	5109400
4605987	4797929	4887050	4975808	5029233	5111162

5113400 5113436 5117073 5117441 5117449 5117450	5153590 5157693 5160898 5162144 5163159 5164652	5205751 5210793 5211581 5212815 5212826 5214675	5257414 5259005 5260170 5260988 5261119 5262710	5323421 5325405 5325429 5327578 5327642 5331123	5402448 5404580 5404582 5406146 5406562 5408693
5121047	5166596	5214774	5263052	5333153	5410275
5121288	5166642	5216389	5263055	5336984	5410741
5121412	5168522	5220290	5265271	5338909	5414711
5122480	5170173	5220936	5267230	5343213	5420759
5122722	5170485	5222078	5276588	5349588	5424689
5124889	5170492	5222104	5276707	5351245	5428362
5127040	5175729	5222251	5276913	5359696	5428820
5127042	5175759	5230007	5276915	5361400	5428836
5127100	5175874	5230093	5278832	5363071	5430416
5128834	5182749	5233506	5278994	5365549	5432017
5133010	5185566	5233633	5280630	5366826	5434947
5134717	5185790	5235492	5280637	5367538	5436802
5140286	5187640	5237257	5280644	5367558	5438684
5140635	5187809	5237570	5285443	5371791	5442680
5142551	5192924	5239127	5287013	5373101	5444764
5142696 5144533	5193223 5195106	5241545 5241548	5287553 5287555	5375143 5375258	5446763 5446766
5144555	5195108	5241546	5287556	5379324	5448763
5148471	5198887	5241688	5289505	5381114	5448770
5148473	5200655	5241066	5297142	5384825	5448771
5150075	5201069	5243355	5299232	5392000	5453997
5150359	5203009	5247544	5301365	5392023	5457744
5150384	5203012	5247565	5308716	5392331	5459640
5151643	5203013	5249302	5321705	5396654	5459774
5152006	5203021	5251331	5321737	5401927	5461643
5152007	5204977	5255292	5321847	5402447	5463351

5463406	5504812	5554996	5606332	5659601	5706019
5463628	5506490	5555550	5606560	5660945	5706313
5463646	5508709	5557743	5606730	5661433	5708445
5463674	5509048	5559471	5613229	5664973	5710862
5463688	5510693	5559522	5613863	5666429	5710987
5463694	5511235	5559806	5615233	5668871	5711001
5465409	5513078	5561436	5615259	5670912	5715520
5465412	5513996	5561437	5615260	5673001	5715524
5469177	5519303	5561852	5621763	5673003	5717307
5471671	5519346	5565881	5621766	5673287	5722052
5475752	5519506	5566224	5625316	5674326	5724004
5477192	5519777	5568548	5625683	5675591	5726983
5485506	5524276	5570453	5628001	5675702	5729221
5485513	5526398	5572223	5628057	5678201	5732350
5486843	5528666	5572224	5628089	5678221	5737327
5487184	5530399	5574976	5629979	5678227	5737685
5488649	5530922	5577267	5630159	5680063	5738954
5490177	5533119	5577268	5630210	5684384	5739792
5491739	5535258	5583520	5630213	5691947	5740525
5493198	5535434	5584054	5630215	5692046	5742894
5493700	5539360	5586146	5631538	5692101	5745116
5493714	5542016	5588041	5633484	5696497	5745566
5495206	5542103	5589796	5633786	5696821	5745848
5495208	5542106	5590177	5634202	5699070	5747970
5497126	5542116	5594778	5640690	5699389	5748727
5497382	5544250	5594951	5642368	5699408	5754141
5497383	5546275	5598129	5646576	5701130	5754455
5499273	5546380	5598431	5649306	5701244	5754583
5499394	5551078	5600341	5649309	5701589	5754645
5499397	5551627	5604050	5656914	5703470	5754956
5502437	5553137	5604468	5656917	5703539	5758271
5504494	5553376	5604787	5657418	5703909	5760714

5761300	5809421	5850440	5889859	5936972	5999115
5761610	5809430	5854549	5892410	5939939	5999821
5764100	5809433	5854785	5893036	5940452	5999832
5764111	5809544	5854972	5894597	5940746	6002922
5764730	5812093	5856763	5896054	5943027	6002937
5764743	5812542	5856766	5896261	5945852	6005498
5766794	5812590	5857148	5898933	5945964	6006104
5771182	5814798	5857192	5900829	5946395	6008636
5771471	5815507	5859522	5901347	5949020	6009168
5777521	5815570	5859567	5901357	5950131	6009309
5777856	5815804	5859890	5903825	5950139	6009325
5784368	5815805	5861853	5903852	5953413	6009336
5784419	5815807	5862460	5905956	5954817	6009552
5784585	5815820	5862493	5907418	5955700	6011699
5787128	5821820	5864799	5907615	5955999	6011784
5787577	5822726	5865487	5909102	5956626	6011959
5793315	5826224	5867063	5910944	5963848	6011961
5793866	5831826	5867127	5912648	5963876	6012634
5796822	5832080	5867140	5920549	5964858	6014376
5797101	5832388	5867510	5920550	5966101	6014552
5798716	5835006	5870670	5923007	5966667	6016312
5799011	5835535	5872744	5924044	5966671	6016422
5799256	5835785	5877633	5925835	5969545	6018584
5801513	5838202	5878075	5925942	5974042	6018651
5801567	5841851	5878209	5926119	5977916	6018671
5802111	5842122	5878336	5926503	5980268	6021332
5805992	5844943	5878353	5926751	5982881	D284759
5807012	5846094	5880637	5930268	5983082	D285439
5808585	5848072	5880646	5930288	5987012	D288432
5808586	5848152	5881377	5930299	5988577	D288683
5809020	5848356	5889737	5933330	5995050	D289156
5809419	5848718	5889768	5936516	5996178	D292578

	5045000	555554	5546665	5556446	5574557
D292920	D315330	D339581	D348665	D358148	D374227
D295627	D315346	D339582	D348666	D359052	D374424
D295973	D315543	D340709	D348668	D359734	D374872
D295975	D315559	D340710	D348674	D359735	D375732
D296187	D315565	D340711	D348880	D359959	D375733
D297734	D315907	D340906	D349273	D360398	D375734
D297735	D316417	D341589	D349701	D360632	D375932
D297736	D316859	D342248	D350113	D361070	D375935
D299136	D320780	D342663	D350348	D361763	D375952
D299137	D322783	D342729	D350349	D362840	D376127
D299232	D324024	D342730	D350350	D362852	D377792
D300742	D324388	D342741	D351375	D365094	D377934
D300827	D325028	D343173	D351840	D365817	D378366
D301473	D325029	D343615	D352497	D366872	D378911
D301476	D325032	D343616	D352503	D367640	D379558
D301883	D325583	D343834	D352946	D368479	D379624
D302015	D325915	D343835	D353131	D368696	D379981
D303656	D327061	D343836	D353361	D369162	D379982
D304189	D327062	D344087	D353587	D369359	D380468
D305427	D328302	D344271	D353588	D369797	D380751
D305717	D332261	D344444	D353591	D370016	D381021
D306015	D332785	D344511	D354055	D370463	D381664
D306163	D334746	D344512	D354062	D370672	D382537
D306293	D337332	D344945	D355181	D372237	D382538
D306299	D338012	D345977	D355895	D372481	D382872
D306441	D338887	D346785	D356084	D372703	D383115
D306583	D339127	D346786	D356309	D372896	D383748
D306594	D339335	D346798	D357224	D372919	D383749
D307271	D339336	D348071	D357249	D373585	D383759
D309301	D339337	D348250	D357457	D373764	D384080
D309451	D339564	D348427	D357680	D374013	D384662
D314173	D339578	D348470	D357681	D374014	D384951

D384952	D388081	D393470	D400204	D407685	D412000
D385271	D388082	D394256	D400209	D407708	D412487
D385283	D388424	D394423	D400496	D408401	D412709
D385555	D388429	D394425	D400526	D408402	D413893
D385873	D388430	D394433	D400527	D408418	D413898
D385874	D388775	D394438	D400874	D408783	D414159
D385875	D388783	D394439	D401554	D408815	D415122
D385877	D388793	D395301	D401929	D409186	D415499
D385888	D389157	D395302	D403265	D410459	D416226
D386175	D389476	D395431	D404397	D410460	D417224
D386494	D389478	D395642	D405080	D410929	D417449
D386757	D389488	D395875	D405782	D411165	D419155
D387054	D389641	D396472	D405801	D411196	D419290
D387055	D390221	D397337	D406098	D411202	D419565
D387199	D390222	D397689	D406191	D411204	PAT022500
D387346	D390509	D397694	D406586	D411507	
D388078	D391567	D398926	D406695	D411535	
D388079	D391955	D400161	D406812	D411843	
D388080	D391966	D400165	D407063	D411844	

Other patents pending.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

A	В
optional 12, 92, 120, 123 standard 21–22 accessory connector port 5 Add Digits feature 73 alert defined 116 indicators 30, 116 reminders 118 setting 116	backlight 64 banner text 66 battery car kit charger time 122 charging 24 extending battery life 32, 35–36, 64, 65, 141 installing 22–23 level indicator 29, 30 meter 67
setting 110 setting in external display 34 type, selecting 117 alert setting indicator defined 30, 116	block cursor, defined 53 browser alerts 63 browser. <i>See</i> micro-browser 61
illustration 29 animation 64 antenna 26 application, locking 69 appointments. <i>See</i> datebook Attach Number feature 44, 73 auto PIN dial 64	calendar. See datebook call adding digits after phone number 73 alert type, selecting 117 alert, setting 116
automatic redial activating 64 using 37–38	alert, setting in external display 34 answer options 62 answering 27

all (continued)	call timers
attaching phone number to	described 75
prefix digits 44	resetting 76
call waiting 46	viewing 68, 76
calling card 44	call waiting 46
data call, setting 61	caller ID 38
dialed calls list 45, 68	calling card call 44
emergency number 39	calling line identification. See
ending 27	caller ID
fax call, setting 61	car kit
in-call timer 62	automatic answer 120
incoming call type, setting	automatic hands-free 121
61	charger time 122
muting 48	power-off delay 121–122
placing 26	clock
received calls list 45, 69	defined 30
receiving 27	illustration 29
restricting 70, 134–135	codes. <i>See</i> passwords
sending 26	computer
speakerphone, activating	connecting to phone
48	123–125
terminating 40	synchronizing data 84, 123
three-way call 47	contrast 64
timing 75	cursor 52–53
unanswered call 34–35,	customer service, calling 67
38–39	customizing the menu 118
voice dial 45	

D	display (continued)
data call connecting to external device 61, 123–125 incoming call format, setting 61 receiving 126–129 sending 125–126 date, setting 65 datebook adding an event 88	banner text 66 contrast 64 described 28–30 greeting 66 idle display 28 illustration 29 language 65 zoom 31, 65 drafts folder 63 DTMF tones 48, 65, 72, 73,
alarm 88 calendar 86 changing event information 89 copying an event 90 day view 87 deleting an event 91 event view 87 reminders 88, 118 week view 86	earpiece illustration 5 volume, adjusting 33 emergency number 39 end key functions 5, 27 menu functions 49
Datebook Menu 86, 87 default passwords 130 dialed calls list 45, 68, 71–73 digital/analog signal indicator defined 30 illustration 29 display animation 64 backlight 64	ending a call 27 Enter Unlock Code message 132, 133 event alert 117 external device connecting to phone 123–125 synchronizing data 84, 123 external display 34–35

F	headset
fax call connecting to external device 61, 123–125 incoming call format, setting 61	automatic answer 120 FM radio 68, 92 use with external display 35 headset jack 5 holster 21
receiving 126–129 sending 125–126 flashing cursor, defined 52 flip	l idle display, defined 28 in use indicator
answering call by opening 62 external display and 34 turning the phone on 25	defined 29 illustration 29 inbox, text message 96 in-call timer 62
FM radio headset 68, 92	incoming call terminating 40 type, setting 61
greeting, display 66	Incoming Call message 38 indicators
Н	alert setting 29, 30, 116
hands-free mode and external display 35 automatic answer 120 automatic call routing 121 charger time 122 defined 120 power-off delay 121–122 speakerphone, activating 48	battery level 29, 30 digital/analog signal 29, 30 in use 29 menu 28, 29 message waiting 29, 30 missed call 38 ring alert 30, 116 roam 29 signal strength 29 silent alert 30, 116

indicators (continued) vibrate alert 30, 116 voice message waiting 29, 30 voice name 77 iTAP software activating and deactivating 56 capitalization 59 deleting text 60 entering numbers 59 entering words 56–58 punctuation 58	L language 65 Last Calls Menu opening 72 options 73 left soft key customizing 119 functions 5, 49 lock applications 69 keypad 134 phone 132–133 voice notes 112 lock application feature 69 loud ring alert 30, 116
key end 5, 27, 49 left soft key 5, 49, 119 lock 134 menu 5, 27, 49 power 5, 25 right soft key 5, 49, 119 scroll 5, 49 send 5, 26, 27, 71 smart 5, 33 voice 5, 81, 107–108 volume control 5 keypad volume 117 keypad, answering calls with 62	making a call 26 master clear 65 master reset 65 menu customizing 118–119 Datebook Menu 86, 87 entering text 54–60 features 61–70 language, setting 65 Last Calls Menu 72–73 locking applications 69 navigating 11, 49–50 Phonebook Menu 77

menu (continued) rearranging features 118–119 scroll feature 65 Text Msg Menu 99–100 using features 11, 50–53 Voice Notes Menu 109, 110, 111	micro-browser (continued) defined 61, 114 functions 115 go back to previous page 115 starting 114 microphone 5 missed call indicator 38
menu indicator defined 28, 30	Missed Calls message 34, 38
illustration 29 menu key 5, 27, 49	muting a call 48 my telephone number 48, 67
message deleting 98–99 dialing number from 43 drafts folder 63 inbox setup 96–97 locking 98–99 outbox 63, 101 quick note 63 reading 98–99 reminders 94, 97, 118 text 43, 63, 96–101 voicemail 63, 94–95 message waiting indicator defined 30	n'r' character 44 network settings 66 notepad defined 40, 68 entering digits 40 retrieving digits 74 O one-touch dialing 42 optional accessory, defined 12 optional feature, defined 12 outbox 63, 101
illustration 29 micro-browser browser alerts 63	

call a number from 115

P	phone (continued)
passwords changing 70, 130 default 130 if you forget a password 131–132 patents 165–170 pause character 44 phone accessories, optional 12 accessories, standard 21–22 answer options 62 connecting to external device 61, 123–125 date, setting 65 feature specifications 67 flip 25 keypad, locking and unlocking 134 language, setting 65 locking 132–133 muting a call 48 network settings 66 one-touch dialing 42 passwords 70, 130, 131–132 security code 131 specifications 67 speed dial, using 41	time, setting 65 turning on/off 25 unlock code 132 unlocking 25, 132–133 voice dial 45 phone number adding digits after 73 attaching to prefix digits 44 attaching two numbers 73 redialing 37 viewing your own 27, 48 voice dial 45 phonebook attaching phone number to prefix digits 44 attaching two numbers 73 capacity, checking 84 deleting an entry 83 dialing an entry 83 entry name 77 fields 77 number type indicator 77 one-touch dialing 42 phone number 77 sorting entries 85 speed dial number 41, 77, 79 speed dial, using 41
, ,	

phonebook (continued) storing an entry 78–80 synchronizing entries 84,	recent calls 71–73 adding digits after phone number 73
123 voice name entry 80–81	attaching phone number to prefix digits 44
voice name indicator 77	attaching two numbers 73
Phonebook Menu 77	redial
PIN code, dialing automatically 64	automatic redial 37–38 busy number 37
power key 5, 25	reminders
predictive text entry	datebook 88
activating and deactivating	setting 118
56	text message 97
capitalization 59	voicemail message 94
deleting text 60	restricting calls 70, 134–135
entering numbers 59	right soft key
entering words 56–58	customizing 119
punctuation 58	functions 5, 49
	ring alert
Q	indicators 30, 116
quick dial	setting 116
setting number 66 using 67	setting in external display 34
quick note 63	type, selecting 117
·	ring and vibrate alert
R	indicator 30, 116
radio 68, 92–93	ringer
received calls list 45, 69,	setting in external display 34
receiving a call 27	volume, adjusting 33, 117

roam indicator defined 29 illustration 29	soft ring alert 30, 116 speakerphone 48 speed dial changing number 79 number, defined 41
scroll feature 65 scroll key 5, 49 security code 131 send key 5, 26, 27, 71 sending a call 26 short message service. See text message shortcuts creating 103–105 standard 102 using 105–106	sorting phonebook entries by 85 using 41 standby time defined 32 increasing 36 status light 5, 31–32, 65 synchronizing data 84, 123 T text
signal strength indicator defined 29 illustration 29 silent alert indicator 30, 116 smart key customizing 119 defined 33 functions 33 illustration 5 SMS. See text message soft keys customizing 66, 119 functions 49 illustration 5	activating/deactivating iTAP software 56 block cursor 53 character chart 55 entering from keypad 54–60 flashing cursor 52 iTAP software predictive text entry 56–60 text message 43, 63, 96–101 Text Msg Menu opening 99 options 99–100 three-way call 47

time, setting 65	voice key (continued)
timers	recording a voice name 81
described 75	recording a voice note
resetting 76	107–108
viewing 68, 76	voice message waiting
travel charger	indicator 29, 30
charging phone battery 24	voice name
illustration 22	defined 80
TrueSync 84, 123	phonebook indicator 77
,	recording 80–81
U	voice note
unlock	defined 107
keypad 134	deleting 113
phone 132–133	locking and unlocking 112
unlock code 132	playback controls 111
amock code 132	playback screen 110
V	playing 109–111
vibrata alart	recording 107–108
vibrate alert	total recording time 107
indicator 30, 116	viewing voice notes list 109
setting 116	Voice Notes Menu 109, 110,
setting in external display 34	111
.	voice shortcut
type, selecting 117 voice dial	creating 103-105
	defined 103
dialing a number 45, 82	using 106
recording voice name 80–81	voicemail 63, 94–95
voice key	
dialing a number 45 functions 5	
TUTICUUTIS 3	

```
volume
earpiece 33
keypad 117
ringer 33, 117
volume keys 5, 32

W
wait character 44
warranty 157–164
Web pages
functions 115
viewing 114
```

zoom setting 31, 65



Wireless Phone Safety Tips

"Safety is your most important call!"

Your Motorola wireless telephone gives you the powerful ability to communicate by voice— almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a hands-free device. If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.

- 3 Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving. Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.*

 
- 9 Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.*
- 10 Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

^{*} Wherever wireless phone service is available.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

For more information, please call
1-888-901-SAFE or visit the
CTIA Web site at
www.wow-com.com™







DIGITAL WIRELESS TELEPHONE