

Model-No.:
PH540

EN

USER MANUAL

TABLE OF CONTENTS

1. UNDERSTANDING YOUR DEVICE	1
1.1 GENERAL INFO	1
2. GETTING STARTED	2
2.1 INSTALLING SIM CARD	2
2.2 POWERING ON/OFF THE DEVICE	4
3 TEXT ENTRY	5
3.1 INPUT METHOD	5
4. HOME SCREEN	7
4.1 APPLICATION TAB	8
4.2 CUSTOMIZING SCREEN	9
5 MENU FUNCTIONS	10
5.1 CALLING	10
5.2 MESSAGING	11
5.3 CONTACTS	14
5.4 EMAIL	16
5.5 CAMERA	17
5.6 VIDEOS	19
5.7 GALLERY	20
5.8 SOUND RECORDER	20
5.9 DOWNLOADS	21
5.10 FILE EXPLORER	21
5.11 BROWSER	22
6 SETTINGS	23

1. UNDERSTANDING YOUR DEVICE

1.1 GENERAL INFO

M550 is a dual SIM phone that encloses features, such as **Android version 5.1, Wi-Fi, 8.0 MP Auto focus back Camera & 2.0 MP front camera, etc.** This phone is provided with two SIM slots for two different SIM cards. You can select to operate SIM cards as per your personal and professional needs.

 
 


2. GETTING STARTED

2.1 Installing SIM Card

Your device is provided with two SIM slots for two different SIM cards. In order to install SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards.
- Insert the SIM card in the device.

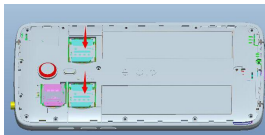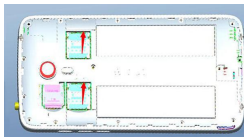


Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to

avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

 - Switch off your device.
- Slide the T-Flash card into the slot.

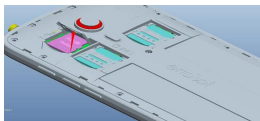

Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging.....  Fully Charged..... 

You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

2.2 POWERING ON/OFF THE DEVICE

 
Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon towards to unlock the screen.
- If the screen turns off, then press the Power Key to turn on the display.

Turning Off the Device



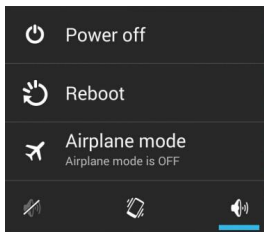

- Press and hold the Power Key for 3 seconds.
- A pop-up window appears, select Power off.
- Select OK to confirm.

 



3 TEXT ENTRY

 
3.1 Input Method

To entry text, please follow the methods mentioned below:

- Click the input field, then the bottom of the screen will appear the virtual keyboard.
- Click the letters on the virtual keyboard, text will be output on the screen.
- Select  to transform the letter case.
- Select  to switch to the Numbers and Punctuation interface.
- Select  to delete the latest input character.
- Icon  in different input field will change to different character, it used to end the current input, and enter next movement.

 




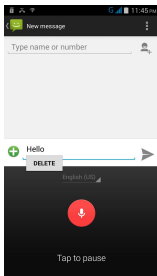



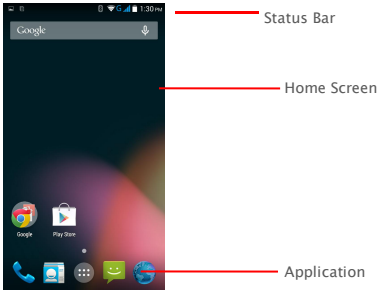

- Select  to open the voice input interface, then speak to input.



4. HOME SCREEN


From Home screen, you can quickly access common features, view notifications of missed calls, received messages and check connection status.



	Network intensity of SIM card
	Battery level of the device
	New short message
	Missed call notification
	Wifi connected
	USB connected
	Headset is plugged in
	Bluetooth is activated

4.1 APPLICATION TAB

 
Tap Application Drawer to access applications and settings of the device. The Application tab enables you to access the Main Menu and choose among the various utilities/ features available in the device.

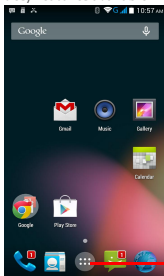

Application

4.2 CUSTOMIZING SCREEN

 The device features a touch screen with idle displays and access to utilities at just one-touch. The screen can be customized by adding various widgets, shortcuts and folders.

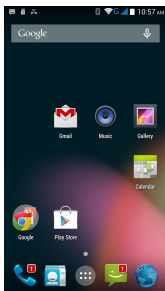

Shortcuts

In order to add a shortcut on the screen:

- Long press on the desired application to add on the screen.

Widgets

Save time with live updates right on Home screen and get all of your personalized updates at one place.


Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- In the idle mode, tap Menu Key > Wallpapers.
- Select your desired wallpaper from the various options.

5 MENU FUNCTIONS


5.1 Calling

If the icon  appears on the screen, then you can make or receive calls.

 
 
To make a call, please follow the steps mentioned below:

- Enter the Main Menu, select Phone.
- Enter the phone number using the on-screen keyboard.





Tap  to erase a wrong number. Tap and hold it to erase the entire number.

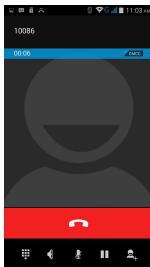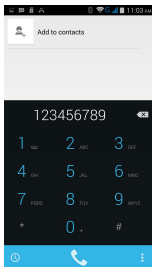- After entering phone number, tap .
- To end the call, tap  to end the call.





Answer/Reject an Incoming Call

 
When you receive an incoming call, a notification message appears on the screen. In order to accept the call, drag  towards right. If you wish to reject the call, drag  towards left.

5.2 MESSAGING

Your device features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Messaging.

Creating a Message


- Tap  to compose a new message.
- In Type name or number field enter the recipient's phone number.
- Type message in the Type text message to compose field.
- Tap  to Send.

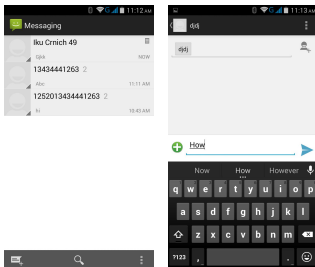

Receiving and Managing Messages


When you send and receive messages to/from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

To reply to a text message

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Select Type text message to enter your message.
- Click  to Send.

To forward a text message

- Enter the Main Menu, select Messaging.
- Tap to view a message thread.
- Press and hold a message to view the message options.
- Select Forward.

- In the Type name or number field, enter the recipient's phone number.
- Click  to Send.

To delete all text messages

- Enter the Main Menu, select Messaging.
- Tap Menu > Delete all threads.
- All the messages will be deleted.



To copy message text

You can use this function to copy the text from a message to a new message you are composing.

 
- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Press and hold the message to view the submenu options.
- Select 'Copy'.
- Go to Compose new message.
- Press and hold Type message.
- Select 'PASTE' to paste the copied text to your new message.

MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:


- Enter the Main Menu, select Messaging.
- Select .
- Tap Menu > Add subject.
- In the Type name or number field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, tap  Attach.


- To insert text, tap Type text message, and then enter your message.

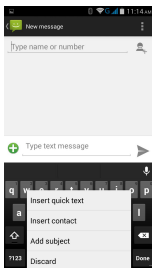

5.3 CONTACTS

To add a Contact


- Enter the Main Menu select Phone.
- Enter number, tap  create new contact.
- Select the storage.
- You can enter contact information such as name, phone number, email address etc, if you select storage as “Phone”.
- Tap Done to save the contact.

Tip: Enter the Main Menu and select People, then tap  also can create New contact.

A screenshot of a mobile application's contact form. At the top, there's a status bar with icons for signal, Wi-Fi, and battery, and the time 11:19 AM. Below the status bar is a header with a checkmark icon, the word 'DONE', and a menu icon. The form is titled 'Phone contact' with an orange contact icon. It has several input fields: 'Name' with a dropdown arrow and a profile picture icon; 'Add organization'; 'PHONE' section with a 'Phone' field and a 'MOBILE' label; 'EMAIL' section with an 'Email' field and a 'HOME' label; 'ADDRESS' section with 'Street', 'PO box', 'Neighborhood', 'City', and 'State' fields, each with a dropdown arrow.

To import contacts

 
- Enter the Main Menu select People.
- Tap Menu > Import/Export.
- Select to import contacts from Phone contact/ Phone storage/ SIM Card/ SD Card.
- Select a particular source to import the contacts from.
- Select Next.
- Select the destination, such as Phone storage to copy contacts to SD Card.
- Select Next.
- Select “0 selected” to import all contacts or mark the required contacts.
- Select “OK”.

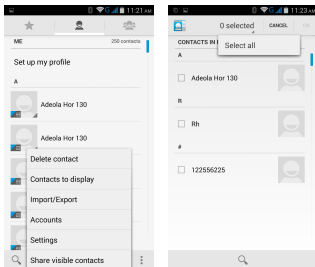

5.4 EMAIL

Setting up an Email Account

 
- Enter the Main Menu, tap Email.
- Enter your Email address and Password.
- Tap Next. The device will automatically retrieve email settings.
- Enter Name and Account display name.
- Tap Next.

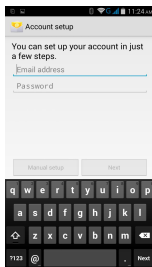




5.5 CAMERA

 
Capturing an Image

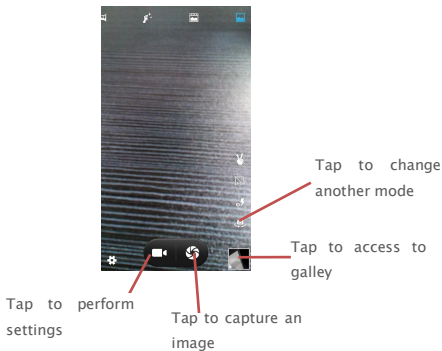- Select Camera. The screen will automatically switch to landscape view.
- Aim the phone at the subject. Tap  to take the shot.



Capturing a Video

 
- Select Camera. Click  switch to video mode.
- Aim the phone at the subject. To start recording, select .
- To stop recording, select .

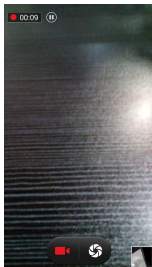

5.6 VIDEOS

You can view/play your videos stored on your SD Card through the Video Player.

 
Tap  select Application tab > Videos to play videos on the memory card.

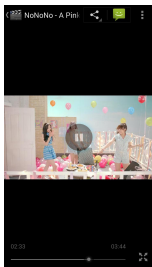


5.7 GALLERY

In the Gallery you can view the captured images, recorded video clips, and downloaded images, etc. The picture folder and video folder will be displayed. Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

5.8 SOUND RECORDER

 You can use the sound recorder to record sounds and also select to save the recordings in your phone. Tap  select Application tab > Sound Recorder. In the sound recorder interface, you can press menu key to select recording mode.

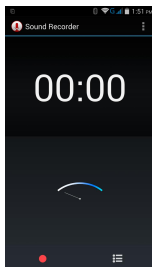

5.9 DOWNLOADS

In this application, you can view your downloads, such as: audios/ Videos/pictures/ applications, you can re-download, delete or cover these files.

5.10 file EXPLORER

This application allows you to view various files on your device both in phone storage and SD card. You can view the details and select these files to copy, delete, or share as you need.

5.11 BROWSER

Browser is a tool which enables you to access the Internet.

To open a web page

- From the Main Menu, select Browser.
- Tap the address bar.
- Type the URL and select “Go”.
- Tap Menu to access more functions, such as bookmarks, history and other browser related settings.

To scroll the page


- Use finger gestures to scroll up or down.
- To scroll left or right, tap and swipe your finger towards right/left.

6 SETTINGS

Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Device, Personal, Account and System.

WI-FI

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap 'ON' to activate Wi-Fi.
- Tap Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap  to add a connection.

3G

The device supports WCDMA protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

Settings > Wireless & Networks > More > Mobile networks > 3G Service

- Power off, insert USIM or SIM card.
- Power on.
- Open setting, select Wireless & Networks, tap 'More'.
- Select mobile network, enter 'Access Point Names' interface.
- Touch menu button, select New APN;
- Set as below:
- Name: (any name like airtel).
- APN: airtelgprs.com.
- Touch menu button, select save.

- Go back to access point names interface, confirm the new APN selected.

BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu.
- Click Bluetooth to turn on Bluetooth.
- To make your device discoverable, select Bluetooth settings and check discoverable.

Enable or Disable SIM card PIN

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Use PIN to Lock SIM card. Click to enable/disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

BACKUP & RESET

You can use the Privacy settings to manage your personal information, such as backup of the data, automatic restore and factory date reset.

For more information please check our website
www.mpmaneurope.com



A pleine puissance, l'écoute
prolongée du baladeur peut
endommager l'oreille de
l'utilisateur