


Getting Started With Your





www.nuumobile.com

A1 Overview

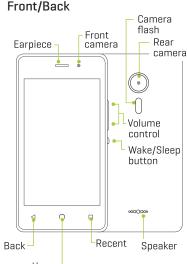

Home

Top $\overline{}$ microUSB connector AUX-In/Headset iack

Getting Started

How to use the phone keys

In any screen, tap the back key " <1 " to return to previous screen or exit the application. Tap the home key " () " to return to the home screen. Tap the menu key " []" to use the setting/option menu. Tap the " on/off " button, to turn on or off the screen and block the screen.Long press "on / off " to shut down or to restart your mobile. Press and hold the " on/off " button and then press the volume down key to take a screen capture.

Language

Tap the settings icon. Scroll down and tap the "Language and input", then choose language in the field "language"

Calls

Press the "contact" icon, email, message or any number on the phone to make a phone call. Or make a phone call by inputting the number on the dial keyboard on the "dial" application

Message

Tap the "Messaging" icon to send messages to your contacts. Input a name or a number on the receiver field or choose someone from your contact list, then press the send button after writing your message. Press the " @ " button if you want to attach a picture, a video, a file, etc...

Writing and conving a text

Mobile phone will make recommendation while you write. If you want to copy or cut a text, long press the text for a few seconds and use the selecting arrows to select or the "select all" options and copy or paste your text.

Camera

Tap the "camera" icon to open the camera. Mobile phone supports a variety of picture modes, HDR panoramic, automatic smile mode, etc... Voice control allows to take group or family pictures without having to touch the phone.

Gallery

Tap the "gallery" icon to open the gallery to browse your photos, tap in one photo to open it. Tap " to enter the edition mode. You can add color filter effects, rotate, add frames etc...

Video camera

Tap the "Camera" icon to open the camera and switch to video mode. Tap " I a " to record videos.

Mail

Tap the "Email" icon. After setting your email account, you can send and receive emails in your phone anywhere you are.

Music

Tap the "Music" icon, and listen to your music. Playlist can be categorized by artists, albums and others.

FM Radio

Connect the earphones to the audio jack, tap the "Radio" icon and select frequency

Empezando

Botones exteriores

En cualquier pantalla: Pulsa " < " para volver a la pantalla anterior o salir. Pulsa tecla de iniciopara volver a la pantalla de inicio. Pulsa " a para acceder a las opciones de configuración. Pulse "on/off" para bloquear o desbloquear la pantalla. Mantenga pulsado "on/off" para apagar o reiniciar el teléfono. Pulse "on/off" y el boton de bajar el volumen para realizar una captura de pantalla.

Idiomas

Pulse el icono de "Alustes" y entre en la opcion de "idioma y entrada de texto" Para cambiar de idioma.

Hacer Hamadas

Pulse el icono de contactos, email, mensajes o cualquier numero de teléfono en el móvil para realizar una llamada. También puede hacer llamadas usando el teclado en la aplicación "Teléfono"

Mensaie

Pulse el icono de mensales para enviar un mensale a un contacto. Escriba un numero de teléfono o un nombre en el campo "recipiente" o escoja un contacto de la lista de contactos, a continuación escriba el mensaje que desea enviar y pulse el botón de enviar. Pulse "⊕ "siguiere añadir, fotos, videos, etc...

Escritura y conia

Teléfono móvil hace recomendaciones al escribir. Si quiere copiar un texto, púlselo durante unos segundo y a continuación podrá copiarlo o cortarlo.

Grabación

Pulse el icono de "cámara" para tomar una foto. El Teléfono móvil incluye una variedad de modos inteligentes. HDR panorámico, modo sonrisa. El control por voz permite realizar fotos en grupo y familiar sin tocar el teléfono.

Galería de fotos vedición

Pulse el icono de "galería" para ver fotos. Pulse " 🔄 " para entrar en le modo edición y ajustar el color o añadir efectos divertidos a sus fotos

Vídeo

Pulse el icono de "cámara" para iniciar la cámara cambie a modo grabación. Pulse" Cono de a grabar videos.

Pulse el icono de "email" y después de configurar su cuenta podrá recibir y enviar correos electrónicos desde su móvil.

Musica

Pulse el icono de "Musica" y disfrute de su musica ordenada por artistas álbumes y otras categorías.

Radio FM

Enviar Email

Inserte los auriculares en el conector. Pulse el icono de 'Radio' para escuchar la radio.

Commencer

Utiliser les touches de mobiles

sur n'importe quelle moment, Appuyez " ⊲ " .retournezàl' ancienne page ou quittez. Appuyez clé de la maison , retournez au menu. Appuyez " 🔲 ", mettez la liste de réglage . Appuyez le bouton de l'écran , appuyez longuementpour quelques secondes, vous pouvez choisir é teindre ou allumer à nouveau le telephone. Appuyez et tenez le bouton de "Marche/Arrêt" et la touche de volume. on aural' interception de l'écran.

Changement de langues

Appuvez la touche de réglages, donc vous pouvez entrer dans la colonne de "langue et saisie". après vous pouvez choisir la langue dans la colonne de "langue"

Faire les annels

Appuyez le bouton de contact, email, message et après yous faites un appel, yous pouvez utiliser la touche "appel" dans l'application

Message

Appuyez la touche message, après vous pouvez envoyer un message à une personne, saisissez le nom et le numéro de telephone dans la zone "destinataire", ou choisissez quelqu'un dans la liste de contacts. Appuyze le bouton d "envoyer" après la saisie de message. Appuyer le bouton" () si vous voulez envoyer une photo, video etc.

Saisie et édition

Téléphones portables a des suggestions si vous êtes en train de saisir. Si vous voulez éditer le texte, choisissez le texte s'il vous plait et appuvez le pour quelques seconds, dé placez le point de saisie ou choisissez tout, déplacez le point d'insérer ou choisissez tout, couper et copier.

Enregistrez les moments colorés

Taper le bouton de "Appareil photo" pour ouvrir l'appareil photo Téléphones portables vous supportez les obotos avec de beauté intelligente. HDR, panorama, sourire mode avec identification automatique, appareil photo sonore vous offre plus de chose intéressant dans le soirée parmi les amies et les familles

Profiter des nhotos coloré

Taper le bouton "Galerie" pour ouvrir atlas, c'est facile de voir les photos et les films. Taper " 🎑 " pour modifier une photo, vous pouvez le couper, colorer.

Faire un film

Taper le bouton "Appareil photo" pour ouvrir l'appareil photo, changer a la mode de video, taper " commencer a noter les moments importants dans votre vie.

Envover un e-mail

Taper le bouton "e-mail". Après installer votre account, vous pouvez envoyer ou recevoir un émail avec votre telephone. Il vous offre de contacter avec vos amis et vos clients partout.

Profiter les musiques

Taper le bouton "Musique". Vous pouvez écouter les musique par artists, albums, songs et les autres modes

FM radio

Insert the earphone plug into the socket. Tap the "FM Radio" icon, so you can Chooose the radio frequency.

Warranty Information

Limited One Year Warranty Information

NUU limited (hereafter referred to as NUU), warrants this device to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Removable lithium-polymer battery is covered under warranty for a period of one (1) year from date of original purchase. If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owner's manual from our website for reference or contact the authorized local distributor. Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, NUU will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. **The product must include proof of purchase, including date of purchase.** To obtain the Warranty Service, Customer must contract the authorized local distributor within the applicable warranty period to obtain warranty service authorization. Products or parts shipped by Customer to local distributor without that provides for the authorized nor and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for the package.

THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT DULY SIGNED BY NUU WARRANTIES EXCLUSIVE, IF THIS PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPLACEMENT OR REPAIR OF THE PRODUCT OR PART OR REFUND OF THE PURCHASE PRICE PAID, AT NUU. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES (OR CONDITIONS), EXPRESSED OR IMPLIED, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE, NUU SHALL NOT BE LIABLE FOR LOSS OF PROFITS OR ANY SPECIAL. INCIDENTAL, OR CONSEQUENTIAL DAMAGES WHICH THE PURCHASER MAY SUSTAIN, IN NO EVENT SHALL NUU'S LIABILITY EXCEED THE PURCHASE PRICE OF THE DEFECTIVE PRODUCT. NUU NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS, NUU SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR, OR MODIFY THE PRODUCT, WATER DAMAGE, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OTHER HAZARDS, OR ACTS OF GOD. THIS WARRANTY DOES NOT COVER PHYSICAL DAMAGE TO THE SURFACE OF THE PRODUCT. INCLUDING CRACKS OF SCRATCHES ON OUTSIDE CASING. THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM THE USE OF THIS PRODUCT IN CONJUNCTION WITH ACCESSORIES, OTHER PRODUCTS, OR ANCILLARY OR PERIPHERAL EQUIPMENT AND NUU DETERMINES THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF. THIS WARRANTY DOES NOT APPLY TO ANY MALFUNCTION OR FAILURE OF THE PRODUCT OR PART DUE TO ANY COMMUNICATION SERVICE CUSTOMER MAY SUBSCRIBE TO OR USE WITH THE PRODUCT, WARRANTY IS VOID IF THE WARRANTY STICKER IS REMOVED.LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW, NUU ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THIS PRODUCT, EVEN IF NUU OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPLACEMENT. REPAIR, OR REFUND OF THE PURCHASE PRICE PAID, AT NUU'S DISCRETION, THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HERE-IN SHALL FAIL OF ITS ESSENTIAL PURPOSE

Disclaimer: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

NUU Service Center: 3111 19th Street NW Rochester, MN 55901-6606 USA Phone: 507-529-1441

FCC Information

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different www.nuumobile.com from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

FCC RF Warning Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty Registration

Register Your Device

Thank you for choosing NUU mobile. To receive helpful tips and faster tech support, register your device online at

www.nuumobile.com

Customer Support

Questions? Let us help. We're here to support you.

Phone: Toll Free: 844-NUU-3365 507-529-1441 U.S. hours: M-F 8:00am-4:30pm CT See our website for after-hours support.

Email: support@nuumobile.com

The complete user manual for the NUU Mobile A1 can be found online at

www.nuumobile.com

 \bigcirc

Learn more about NUU Mobile products, features and accessories at



www.nuumobile.com