



Getting Started With Your


A3L



www.nuumobile.com

A3L Overview


Front/Back

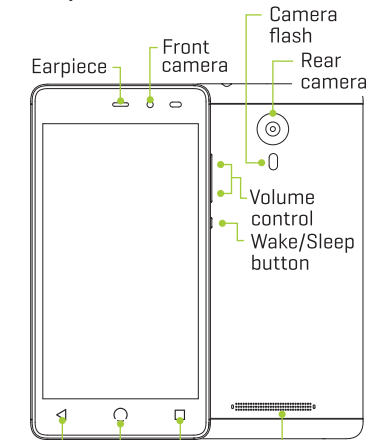

Back

Recent Speaker

 Top



microUSB connector

AUX-In/Headset jack

Getting Started

How to use the phone keys

In any screen, tap the back key "◀" to return to previous screen or exit the application. Tap the home key "○" to return to the home screen. Tap the recent key "□" to display all the programs that are currently in use. Tap the "on/off" button, to turn on or off the screen and block the screen. Long press "on/off" to shut down or to restart your mobile. Press and hold the "on/off" button and then press the volume down key to take a screen capture.

Language

Tap the settings icon. Scroll down under "Personal" and tap "Language & input", then select your preferred language by tapping "Language".

Calls

Tap the "Phone" icon, then tap on the contacts icon "☎" to select the contact you would like to make a call to. Or, simply make a call by inputting the number after selecting the "dial" application.

Message

Tap the "Messages" icon, then "+" to create a new message. Input a name or number into the receiver field or choose someone from your contact list, then input your message. Press the paperclip button if you want to attach a picture, video or other media. When done, click "▶".

Writing and copying a text

The phone will make recommendations as you type. If you want to copy or cut text, long press the text for a few seconds and use the selecting arrows to select, or use the "select all" option, then copy or paste your text.

Camera

Tap the "camera" icon to open the camera. The phone supports a variety of picture modes such as HDR, flash, Face beauty etc. To access these modes, select the "options" icon.

Gallery

Tap the "gallery" icon to open the gallery to browse your photos, tap in one photo to open it. Tap "✓" to enter the edit mode. You can add color filter effects, rotate, crop and so on. Click "save".

Video camera

Tap the "camera" icon to open the camera and switch to "video" mode by tapping "□" to record.

Mail

Tap the "Gmail" icon. Then select the "pen" icon on the lower right corner to compose a new message. Use the paperclip to attach files or images. Tap on "send" when done. Note: You must set up an email account first.

Music

Tap the "Play Music" icon. You can "Listen Now" (subscription required) or click on the menu button "☰" on the top left of the screen to access your Music Library to play your own music.

FM Radio

Connect earphones to the audio jack, tap the "FM Radio" icon and select frequency.

Comenzando

¿Cómo usar los Botones del teléfono?

En cualquier pantalla pulsa la tecla "◀" para regresar a la pantalla anterior ó para salir de la aplicación. Pulsa la tecla de inicio "○" para regresar a la pantalla principal. Pulsa la tecla más reciente "□" para mostrar todos los programas que están actualmente en uso. Pulsa el botón "encender/apagar" para bloquear o desbloquear la pantalla. Mantén pulsado el botón de "on/off" y luego presiona el botón que baja el volumen para obtener una captura de pantalla.

Idioma

Pulsa el ícono de configuración. Desliza la pantalla por debajo de "Personal" y pulsa "Idioma y entrada de texto", después elige tu idioma de preferencia pulsando "Idioma".

Llamadas

Pulsa el ícono de "Teléfono", y después presiona en contactos ícono "☎" para seleccionar al contacto que te gustaría marcar. O, simplemente haz la llamada al escribir el número después de elegir la aplicación "Marcar".

Mensajes

Pulsa el ícono de "Mensajes", después el de "+" para crear un nuevo mensaje. Escribe un nombre ó el número dentro del campo de destinatario ó bien elige a alguien de tu lista de contactos, después escribe tu mensaje. Presiona el botón del clip si quieres agregar una foto, un video u otro medio. Al terminar, pulsa el botón de "▶".

Escribe y copia un texto

Tu teléfono hará recomendaciones mientras escribes. Si deseas copiar o cortar un texto, pulsa el texto durante unos segundos y usa la flecha de selección para escoger, o usar la opción de "elegir todo", después copia y pega tu texto.

Cámara

Pulsa el ícono de "Cámara" para tomar una foto. El teléfono incluye una variedad de modos tales como el de HDR, Flash, Face Beauty, etc. Para tener acceso a éstos modos, elige el ícono de "Opciones."

Galería

Pulsa el ícono de "galería" para abrir y ver tus fotos, pulsa en una foto para abrir. Pulsa "✓" para entrar al modo de edición. Puedes agregar filtros de color con efectos, rotar, recortar, etc. Presiona el botón de "guardar".

Cámara de Video

Pulsa el ícono de "Cámara" para abrir la cámara y cambiarlo al modo de "video" pulsando "□" para grabar videos.

Correos Electrónicos

Pulsa el ícono de "Gmail". Después selecciona el ícono de "pluma" que se encuentra en la esquina de la parte inferior a la derecha para componer un nuevo mensaje. Usa el clip para añadir archivos ó imágenes. Pulsa en "Enviar" cuando termines. Nota: Debes crear primeramente una cuenta electrónica.

Música

Pulsa el ícono de "Tocar Música". Puedes "Escuchar Ahora" (es necesario una suscripción) ó haz click en el botón de Menu "☰" que se encuentra en la parte superior del lado izquierdo de la pantalla para tener acceso a la Biblioteca de Música y tocar tu propia música.

Radio FM

Conecta los audífonos a la entrada auxiliar, pulsa el ícono de "Radio FM" y selecciona la frecuencia.

Commencer

Comment utiliser les touches du téléphone

Dans tout écran, appuyez sur la touche de retour "◀" pour retourner à l'écran précédent ou quitter l'application. Appuyez sur la touche d'accueil "○" pour retourner à la page d'accueil. Appuyez sur la touche récente "□" pour afficher toutes les programmes qui sont actuellement en cours d'utilisation. Appuyez sur la touche "on/off", pour activer ou désactiver l'écran et le bloquer. Tenir la touche "on/off" pour fermer ou redémarrer votre mobile. Appuyez et tenir la touche "on/off" puis appuyez sur la touche "baisser le volume" pour prendre une capture d'écran.

Langue

Appuyez sur l'icône des paramètres. Descendez vers le bas de la rubrique "Personnel" et appuyez "Langue et saisie", puis sélectionnez votre langue préférée en appuyant sur "Langue".

Appels

Appuyez sur l'icône d'appel, puis cliquez sur contacts l'icône "☎" pour sélectionner le contact que vous voulez appeler. Ou simplement faire un appel en entrant le numéro après avoir sélectionné l'application "Composer".

Message

Appuyez sur l'icône "Messages", puis "+" pour créer un nouveau message. Entrer un nom ou numéro dans le récepteur ou choisir quelqu'un dans votre liste de contacts, puis entrer votre message. Appuyez sur le bouton de trombone si vous souhaitez d'attacher une photo, une vidéo ou d'autres médias. Lorsque vous avez terminé, cliquez sur "▶".

Écrire et copier du texte

Ce téléphone fera des recommandations quand vous tapez. Si vous voulez copier ou couper du texte, Faire un appui long sur le texte pour quelques secondes et utiliser les flèches de sélection pour sélectionner, ou utiliser l'option "Sélectionner tout". Enfin, copier ou coller votre texte.

Caméra

Appuyez sur l'icône "Caméra" pour ouvrir la camera. Ce téléphone supporte une variété de mode d'images telles que HDR, le tréne, le visage de beauté, etc. Pour accéder à ces modes, sélectionner l'icône "options".

Galerie

Appuyez sur l'icône "Galerie" pour ouvrir la galerie afin de parcourir vos photos, appuyez sur une photo pour l'ouvrir. Appuyez "✓" pour entrer le mode d'édition. Vous pouvez ajouter les effets par rapport à la couleur, la rotation, la recadrage et ainsi de suite. Cliquez "Enregistrer".

Caméra vidéo

Appuyez sur l'icône "Caméra" pour l'ouvrir et changer au mode "vidéo" en tapant "□" pour enregistrer.

Courriel

Appuyez sur l'icône "Gmail". Ensuite, sélectionner l'icône "stylo" en bas à droite pour composer un nouveau message. Utiliser le trombone pour attacher les fichiers ou les images. Appuyez sur "envoyer" quand vous avez terminé. Note: Vous devez d'abord créer un compte du courriel électronique.

Musique

Frappez sur l'icône "Play Music". Vous pouvez "Listen Now" (abonnement requis) et frappez sur le bouton "☰" dans le menu en haut à la gauche de l'écran pour accéder à votre bibliothèque musicale pour écouter votre musique.

Radio FM

Connecter les écouteurs à la prise audio, appuyez sur l'icône "Radio FM" et sélectionner la fréquence.

Warranty Information

Limited One Year Warranty Information

NUU Limited (hereafter referred to as NUU), warrants this device to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Removable lithium-polymer battery is covered under warranty for a period of one (1) year from date of original purchase. If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owner's manual from our website for reference or contact the authorized local distributor. Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, NUU will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. **The product must include proof of purchase, including date of purchase.** To obtain the Warranty Service, Customer must contact the authorized local distributor within the applicable warranty period to obtain warranty service authorization. Dated proof of original purchase from the authorized reseller will be required. NUU is not responsible for Customer's products or parts received without a warranty service authorization. Products or parts shipped by Customer to local distributor must be sent prepaid and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for tracking of the package.

THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT DULY SIGNED BY NUU. WARRANTIES EXCLUSIVE. IF THIS PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPLACEMENT OR REPAIR OF THE PRODUCT OR PART OR REFUND OF THE PURCHASE PRICE PAID, AT NUU. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES (OR CONDITIONS), EXPRESSED OR IMPLIED, INCLUDING (WITHOUT LIMITATION), ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE. NUU SHALL NOT BE LIABLE FOR LOSS OF PROFITS OR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES WHICH THE PURCHASER MAY SUSTAIN. IN NO EVENT SHALL NUU'S LIABILITY EXCEED THE PURCHASE PRICE OF THE DEFECTIVE PRODUCT. NUU NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. NUU SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR, OR MODIFY THE PRODUCT, WATER DAMAGE, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OTHER HAZARDS, OR ACTS OF GOD. THIS WARRANTY DOES NOT COVER PHYSICAL DAMAGE TO THE SURFACE OF THE PRODUCT, INCLUDING CRACKS OR SCRATCHES ON OUTSIDE CASING. THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM THE USE OF THIS PRODUCT IN CONJUNCTION WITH ACCESSORIES, OTHER PRODUCTS, OR ANCILLARY OR PERIPHERAL EQUIPMENT AND NUU DETERMINES THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF. THIS WARRANTY DOES NOT APPLY TO ANY MALFUNCTION OR FAILURE OF THE PRODUCT OR PART DUE TO ANY COMMUNICATION SERVICE CUSTOMER MAY SUBSCRIBE TO OR USE WITH THE PRODUCT. WARRANTY IS VOID IF THE WARRANTY STICKER IS REMOVED. LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW, NUU ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THIS PRODUCT, EVEN IF NUU OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPLACEMENT, REPAIR, OR REFUND OF THE PURCHASE PRICE PAID, AT NUU'S DISCRETION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HERE-IN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Disclaimer: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

NUU Service Center: 3111 19th Street NW Rochester, MN 55901-6606 USA Phone: 507-529-1441

FCC Information

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

FCC RF Warning Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty Registration

Register Your Device

Thank you for choosing NUU mobile. To receive helpful tips and faster tech support, register your device online at

[nuumobile.com/my-account/
product-registration](http://nuumobile.com/my-account/product-registration)

Customer Support

Questions? Let us help. We're here to support you.

Phone: Toll Free: 844-NUU-3365
507-529-1441
U.S. Hours: M-F 8:00am-4:30pm CT
See our website for after-hours support.

Email: support@nuumobile.com

WhatsApp: 1-507-271-6007



Learn more about NUU Mobile products, features and accessories at



www.nuumobile.com