

Some of the contents in this manual may differ from your device depending on the software of the device or your service provider.

**SAMSUNG
ELECTRONICS**



GT-B7610 user manual



SAMSUNG

Read me first!

When you need information, instructions, and tips to learn more about your device, you have several options available:

- **Windows Help System** (on your device) - your device includes Windows Mobile Help. This embedded, searchable help system explains how to use various Microsoft programs and features.
- **Extended Usage Guide** (online) - on the Samsung website, you will find the Extended Usage Guide in Adobe Acrobat (.pdf) format. You can either view the guide online or download and print the file for your convenience. The Extended Usage Guide contains advanced usage tips and more details about particular functions of your device. To view the file, you must have Adobe Reader or Adobe Acrobat installed-you can download Adobe Reader free from Adobe's website (www.adobe.com).
- **User Manual** (printed) - this user manual has been specially designed to guide you through the functions and features of your device. It contains extensive information about Samsung software and features and tips for using and maintaining the device. For any topics not covered in this manual, please refer to the embedded help as described above.

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



Warning – situations that could cause injury to yourself or others



Caution – situations that could cause damage to your device or other equipment



Note – notes, usage tips, or additional information

 


Refer to – pages with related information;
for example: ► p. 12 (represents "see page 12")





Followed by – the order of options or menus you must select to perform a step; for example: Tap **Start** > **Settings** (represents **Start**, followed by **Settings**)



Square brackets – device keys; for example: [>] (represents the End/Power key)

Copyrights and trademarks

Rights to all technologies and products that comprise this device are the property of their respective owners:

- This product includes software licensed from MS, an affiliate of the Microsoft Corporation. Microsoft and software bearing the Microsoft name are registered trademarks of the Microsoft Corporation.
- Java™ is a trademark of Sun Microsystems, Inc.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Bluetooth QD ID: B015278
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- DivX® is a registered trademark of DivX, Inc., and is used under license.
-  and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.
- XTRA is a registered trademark of Qualcomm, Inc.



ABOUT DIVX VIDEO

DivX[®] is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into Divx video. DivX Certified to play Divx[®] video up to 320x240.

ABOUT DIVX VIDEO-ON-DEMAND

This DivX Certified[®] device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Contents

Introducing your device	9
Unpack	9
Get to know your device	10
Assemble and prepare your device	16
Turn on your device for first time	21
Customise your device	24
Use Widgets	28
Work with applications	30
Enter text	34
 Communication	 42
Work with contacts	42
Calling	47
Messaging	50
 Multimedia	 54
Camera	54
Media Player	64
Photo	68

Digital Frame	69
FM Radio	71
Video Editor	73
Games	77
Java	77
Personal productivity	78
ActiveSync	78
Clock	82
Schedule	85
Notes	87
Memo	88
Voice Recorder	89
Tasks	91
Calculator	92
Unit Converter	94
Smart Reader	95
Smart Search	99
Web applications	101
Web browsing with Opera	101
Search Widget	103
Streaming Player	104

RSS Reader	105
Podcast	107
Communities	110
Marketplace	113
Microsoft My Phone	113
Connectivity	114
Connect to the internet or your network	114
GPS	119
Bluetooth	121
Wi-Fi	125
Connected Home	128
Troubleshooting	133
Safety and usage information	138
Index	151

Introducing your device

Unpack

Your package contains the following items:

- Handset
- Battery
- Travel adapter (charger)
- CD-ROM*
- Stereo headset
- PC data cable
- User manual

 


- The items supplied with your device and available accessories may be different depending on your region or service provider.
- The supplied accessories perform best for your device.


* The CD-ROM contains Microsoft ActiveSync software, add-on software, and other applications.

Get to know your device


Front view

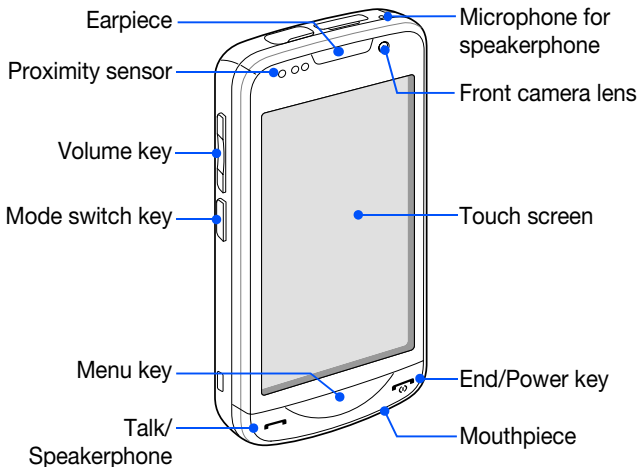

Rear view

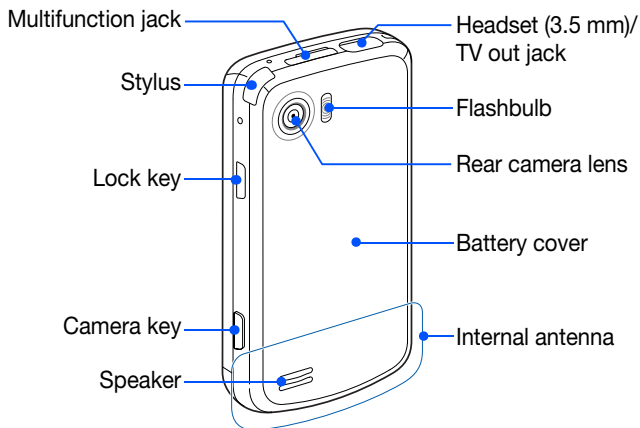 



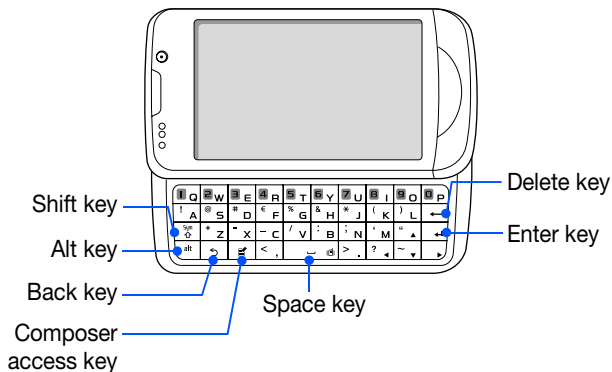 




Inside view


















 

 
The image may be different depending on your region or service provider




 

 



 

Keys














Key	Function
	Open the dialling screen; Make or answer a call; Activate the speakerphone during a call (press and hold)
	Access Main menu; Open the Task Switcher screen (press and hold)
	Turn the device on or off (press and hold); End a call; Return to the Today screen
	Adjust the volume; During a call, adjust the voice volume; During an incoming call, mute the call ringer
	Switch between the Work mode screen and the Life mode screen (press and hold)
	Activate Sleep mode; Lock the external keys and the touch screen (press and hold)
	Activate the camera; In Camera mode, take a photo or record a video

Icons

Icon	Function
	UMTS network available
	UMTS network available (data call unavailable)
	UMTS network connected
	HSDPA network available
	HSDPA network connected
	ActiveSync in progress
	Battery level
	Low battery
	Battery charging

Icon	Function
	Attempt to access via Bluetooth or Bluetooth activated
	Bluetooth visibility activated
	Receiving data via Bluetooth
	Bluetooth stereo headset connected
	Bluetooth hands-free connected
	Call on hold
	Call forwarding activated
	Connected to a computer
	Data call in progress


Icon	Function
	EDGE network available
	EDGE network connected
	GPRS network available
	GPRS network connected
	Searching for a signal
	Missed call
	More status icons available (tap the icon to see them)
	New text message
	New email message
	New multimedia message
	New voice mail message

Icon	Function
	No signal
	No SIM or USIM card
	Pending alarm
	Radio off
	Ringer on
	Ringer set to vibrate
	Roaming (outside of normal service area)
	Signal strength
	Synchronisation error
	Urgent notification (tap the icon to see the message)
	Voice call in progress
	Wi-Fi activated
	Wi-Fi data call in progress

Assemble and prepare your device

Before you can use your device, you must install the SIM or USIM card, install the battery, and charge the battery. Installing a SIM or USIM card is optional, but may be required to fully utilise some applications and store media files.

 Insert the SIM or USIM card and battery

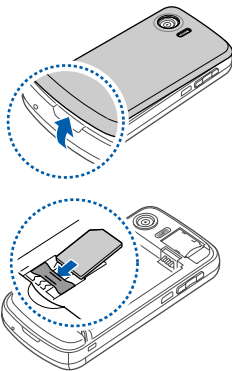


1 Remove the battery cover.


2 Insert the SIM or USIM card.



 Insert the SIM or USIM card with the gold-coloured contacts facing the device.

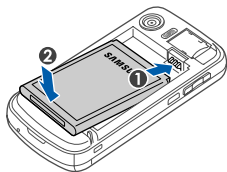



3 Insert the battery.

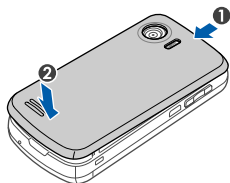 

4 Replace the battery cover.

 Charge battery

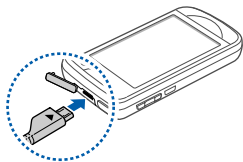


- 1 Open the cover to the multifunction jack on the top of the device.
 - 2 Plug the small end of the travel adapter into the device.
 - 3 Plug the large end of the travel adapter into a power outlet.
 - 4 When charging is finished, unplug the travel adapter from the power outlet.
 - 5 Remove the travel adapter from the device.
-  Although a charger cable is connected,
- The battery may not charge in some situations to protect the device.
 - The battery level may remain low if the device is using a large amount of power.

Insert a memory card (optional)

By inserting a memory card, you can store multimedia files and messages or back up your important information. Your device accepts microSD™ or microSDHC™ memory cards up to 32 GB (depending on memory card manufacturer and type).




 Formatting the memory card on a PC may cause incompatibility with your device. Format the memory card only on the device.

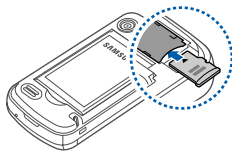


- 1 Remove the battery cover.
- 2 Insert a memory card with the label side facing up.
- 3 Replace the battery cover.

 Attach a hand strap (optional)

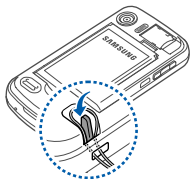

- 1 Remove the battery cover.
- 2 Slide a hand strap through the slot and hook it over the small projection.
- 3 Replace the battery cover.

 Turn on your device for first time

- 1 Press and hold  to turn on your device.
- 2 Follow the on-screen instructions. Your device will automatically connect to the cellular network.

Activate Sleep mode

You can activate Sleep mode to save power when you do not use your device.

To activate Sleep mode, press the Lock key. Your device will turn off the screen. To deactivate Sleep mode, press the Lock key again.

Lock external keys and touch screen

You can lock the external keys and the touch screen to prevent any unwanted device operations from accidentally pressing any of the keys and the screen.

To lock the keys and the screen, press and hold the Lock key. To unlock, tap and hold the lock icon.

 
Use the touch screen

You can perform the following actions on your device's touch screen:



For optimal use of the touch screen, remove the screen protection film before using your device.

- Tap: Touch the screen once to select commands or launch applications.
- Tap-and-hold: Tap and hold an item to see a list of available actions. Tap the action you want to perform on the pop-up menu.
- Drag: Tap-and-hold a scroll bar or text and then drag it to move the bar or select text.

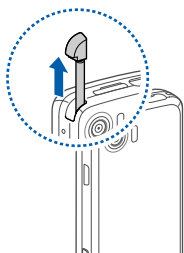



A special slot for storing the stylus is included on the top of your device.



 
If your device does not respond accurately to your screen taps, realign your touch screen. To realign the screen, tap **Start > Settings > Basic Settings** tab > **General Settings > Align Screen > Align screen**.

Disable wireless functions

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **Wireless Manager**.
- 3 Tap  next to **Phone**.
 - Your device will show  on the Today screen.

To enable wireless functions, repeat steps 1-3 above.

Reset the device

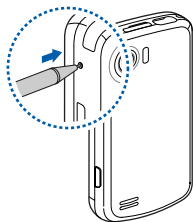

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is still responsive but a program is frozen, close the program via Task Switcher. ► p. 32

If your device is frozen and unresponsive, use a small object, such as a toothpick, to press the reset button.

Customise your device


Learn to change themes and background images, add or remove items, and adjust the system volume from the Today screen.

Change your theme or background image

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Display and Light**.
- 3 Tap **Theme** or **Wallpaper** and select the desired option to customise the display.
- 4 Tap **Yes** > **No** (if necessary).
- 5 When you are finished, tap **Done**.

Add or remove items on the Today screen

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Display and Light**.

- 3 Tap **Items on Today**.
- 4 Tap the check boxes next to each item you want to display on the Today screen.
 Some items are not compatible with Samsung widgets.
- 5 Tap **Done**.

Use Work mode and Life mode

You can use a different theme and background image for Work mode and Life mode. To change settings for each mode,

- 1 Tap **Start > Mode Manager**.
- 2 Change the name for a mode (if necessary).
- 3 Tap **Settings** under the mode you want.
- 4 Change the background image, call alert type, ringtone, vibration type, and items on the Today screen.
- 5 Tap **Done**.

Press and hold the Mode switch key to switch between two modes.

Assign categories to each mode

You can filter the data in the phonebook, call log, schedule, and message menus according to the categories you have assigned to each mode.


- 1 Tap **Start > Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings > Data Filter**.
- 3 Tap **Category in Work** or **Category in Life**.
- 4 Tap **Menu > Edit**.
- 5 Tap the check boxes next to the categories you want to assign to each mode.
- 6 When you are finished, tap **Done**.

Adjust the system volume

To adjust the system volume, press the Volume key up or down.

Activate Etiquette pause

You can temporarily pause the music player or mute event alarms by placing the device face down when Etiquette pause is activated. To activate Etiquette pause,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Motion Settings** > **Etiquette**.
- 3 Tap  next to **Enable etiquette pause**.
- 4 Tap **Done**.

Use Widgets






Use widgets on the Today screen. Widgets are user friendly shortcuts to commonly used applications allowing you to customise the Today screen.







 





Open the widget toolbar

Tap the arrow at the bottom left of the Today screen to open the widget toolbar. You can rearrange widgets on the widget toolbar or drag them to the Today screen.



Depending on your region or service provider, available widgets may vary.

Widget	Function
	Browse your photos and set a photo as the wallpaper
	Listen to music via the mini player
	Listen to the FM radio
	Change the current sound profile
	View a new message or missed calls


Widget	Function
	Monitor your wireless connections
	Get the latest weather updates from AccuWeather*
	Get updates from Yahoo! Finance*
	Search the web with Yahoo!*
	Download new widgets from a website*
	Search the web with Google*
	View the current time and date
	View upcoming schedules and all schedules for today
	Use services from Flickr*
	Use services from Picasa*
	Use services from FaceBook*
	Add application shortcuts to the Today screen

* These widgets require a connection to the internet, which may result in additional charges.

Drag the widgets to the Today screen

- 1 Open the widget toolbar.
- 2 Drag a widget from the widget toolbar to the Today screen. You can position the widget anywhere on the screen.

Customise widgets

- 1 Open the widget toolbar.
- 2 Tap  at the top of the widget toolbar.
- 3 Tap the check boxes next to items that you want to appear on the widget toolbar.
- 4 When you are finished, tap **Done**.



Work with applications

Learn to open applications or folders and switch between open applications.

Open applications or folders

- 1 Tap **Start** or press the Menu key.
- 2 To open an application, tap the application icon.
- 3 To open a folder, tap **File Manager** and navigate to the desired folder.

Organise applications

- 1 Press the Menu key.
- 2 Tap **Edit**.
 - Tap  to move an application to **Others**.
 - Tap  to move an application from **Others**.
 - Scroll left or right to move to one of the Menu mode screens.

- Tap and hold an application icon and move it to the location you want.
- Tap the screen name field to edit the screen name.

3 Tap **Save**.

Switch applications

Your device allows you to multi-task by running multiple applications at the same time.

To switch from one active application to another,

1 Press and hold the Menu key.


- Task Switcher shows thumbnail images of all open programs.


2 Tap a thumbnail to switch to the corresponding application.

Close applications


To send the current application to the background, tap **X** or **OK**.

To close an application,

- 1 Press and hold the Menu key to open the Task Switcher screen.
- 2 Tap **End**.
- 3 Tap .

If you tap , scroll left or right to an application, and tap **End** to close it.

Use the Composer screen


- 1 Right slide open the device.
- 2 Rotate the device anti-clockwise to the landscape location.
- 3 Press  from the QWERTY keyboard.
 - Some applications you can use with the QWERTY keyboard appear.

- 4 Tap an application.
- 5 Use the application and enter text using the QWERTY keyboard.

Access the Windows Mobile Help system

To access the help system of your device, tap **Start > Help**. The embedded Windows Mobile Help system appears.

Enter text

When you need to enter text, tap the default input panel icon () at the bottom of the screen. Tap the arrow next to the icon and select one of the following input methods for entering text:

- Block Recognizer
- Keyboard
- Letter Recognizer
- Samsung Keypad
- Transcriber

 
 
You can tap the input panel icon at any time to show or hide the input panel.



You can also use the external QWERTY keyboard. When you need to enter text, right slide open the device. Use the QWERTY keyboard as you would with the PC's keyboard. However, the Navigation keys and the Enter key of the QWERTY keyboard may not work with some applications.

Enter text with Block Recognizer

Write individual letters and numbers in the writing area in the Palm Graffiti style.

- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Block Recognizer**.



- 3 Write each character in the writing area at the bottom of the screen:
 - Write letters on the left side of the writing area.
 - Write numbers on the right side of the writing area.
-  Drag your finger upward in the writing area to change the case (**ABC**, **Abc**, or **abc**). Tap once on the screen to enter symbols (**123** or **abc** will change to the  icon). Drag your finger leftward to delete the last letter. To view demonstrations of how to enter characters, refer to the embedded help system.

 
 
 
Enter text with the keyboard


- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Keyboard**.
- 3 Tap characters to enter your text:
 - To switch to numbers and symbols, tap **123**.
 - To access special characters, tap **áü**.

Enter text with Letter Recognizer


Write individual letters and numbers on the touch screen.

- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Letter Recognizer**.
- 3 Write each character in the writing area at the bottom of the screen:




- Write upper-case letters in the **ABC** column on the left side of the writing area.
 - Write lower-case letters in the **abc** column in the middle of the writing area.
 - Write numbers and symbols in the **123** column on the right side of the writing area.
-  To view demonstrations of how to write characters, refer to the embedded help system.

Enter text with Samsung Keypad

 - 1 Tap the input panel icon.
 - 2 Tap the arrow next to the input panel icon and select **Samsung Keypad**.
 - 3 Tap characters to enter your text:
 - To enter the text in T9 mode, tap **MODE** to turn on **xt9**. Tap the appropriate keys to enter an entire word.
 - To enter the text in ABC mode, tap **MODE** to turn off **xt9**. Tap the appropriate key to enter a character.
 - To enter numbers, tap **123**.
 - To enter symbols, tap **SYM**.
-  To change the keypad style, tap and hold **MODE**, select a style, and tap **Done**.



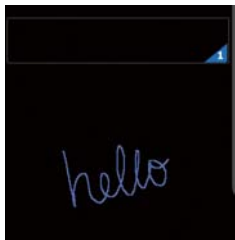


 




Enter text with Transcriber

With Transcriber, you can write anywhere on the screen. Unlike Letter Recognizer or Block Recognizer, you can use cursive (joined-up) handwriting to write complete words.



- 1 Tap the input panel icon.
- 2 Tap the arrow next to the input panel icon and select **Transcriber**.
- 3 Write legibly anywhere on the screen.
- 4 Pause and allow Transcriber to convert your writing to text.

You can access the following tools from the Transcriber toolbar:

Tap	To
	Change Transcriber options
	View demonstrations of how to write characters
	Open the list of punctuation marks, symbols, and numbers
	Change the input mode to A , a , or 123
	Insert a space
	Start a new line
	Move the cursor to the left
	Move the cursor to the right
	Clear your input
	Open the embedded help

Communication


Work with contacts

Learn to use contact cards and groups to store personal information, such as names, phone numbers, and addresses.

Create a new Outlook or SIM contact card

- 1 Tap **Start** > **Phonebook**.
- 2 Tap **New** > **Save to outlook** or **Save to SIM**.
- 3 Enter contact information.
- 4 When you are finished entering information, tap **Done** to save the contact card.

Search for a contact card

- 1 Tap **Start** > **Phonebook**.
- 2 Tap .
- 3 Tap a few letters of the contact's name.
 - As you enter letters, the screen will show contacts that match your input.
- 4 Tap a contact to open it.


Copy or move contact cards

To copy or move contact cards from your device's memory to a SIM or USIM card and vice versa,


- 1 Tap **Start** > **Phonebook**.
- 2 To copy contacts, tap **Menu** > **Copy** > a copy option. Refer to step 4.
- 3 To move contacts, tap **Menu** > **Move** > a move option.

- 4 Tap the check boxes next to the contacts that you want to copy or move.
- 5 Tap **Done**.

Organise your contacts into categories

- 1 Tap **Start > Phonebook**.
 - 2 Tap a contact in the device's memory.
 - 3 Tap **Edit**.
 - 4 Scroll down and tap the categories field.
 - 5 Tap the check boxes next to the desired categories.
 - 6 Tap **Done**.
 - 7 Tap **Done** to save the contact card.
-  You can filter your contacts according to their categories by pressing the Mode switch key on the phonebook screen. ► p. 26

Assign a speed dial number to a contact card

- 1 Tap **Start** > **Phonebook**.
- 2 Tap .
- 3 Tap **New** and select a contact.
- 4 Select the contact's phone number to use for speed dialling.
- 5 Select a speed dial location.

Assign a photo to a contact card

- 1 Tap **Start** > **Phonebook**.
- 2 Tap a contact in the device's memory.
- 3 Tap **Edit**.
- 4 Tap the photo icon at the top left of the contact card.

- 5 Select a photo.
- 6 Tap **Done** twice to save the contact card.





Assign a ringtone to a contact card

- 1 Tap **Start > Phonebook**.
- 2 Tap a contact in the device's memory.
- 3 Tap **Edit**.
- 4 Scroll down and tap **Add field**.
- 5 Scroll down and tap the ringtone field.
- 6 Select a ringtone.
- 7 Tap **Done**.
- 8 Tap **Done** twice to save the contact card.

Calling

Learn to make and receive calls, reject calls, and adjust the call volume.



Make a call

- 1 Press [.
- 2 Enter an area code and phone number.
- 3 Tap  or press [].
 - For a video call, tap **Menu** > **Video Call**.
- 4 To end the call, press [.

 
Make a call from Phonebook

- 1 Tap **Start** > **Phonebook**.
- 2 Tap a contact.
- 3 Tap a number.

Answer a call

- 1 Press [].
- 2 For a video call, tap **Show me** to allow the caller to see you via the front camera lens.
- 3 To end the call, press [].


Reject a call




 
Press []. When you reject a call, the caller will hear a busy tone.

Adjust the call volume

To adjust the call volume, press the Volume key up or down during a call.

Call an international number



- 1 Press [].
- 2 Tap **Keypad** (if necessary).

- 3 Tap and hold  to insert the + character (this replaces the international access code).
- 4 Tap the number keys to enter the complete number you want to dial (country code, area code, and phone number), and then tap  or press [] to dial.
- 5 To end the call, press [].

Access the call log

- 1 Tap **Start** > **Call Log**.
- 2 Select one of the following filters for your call log results:


Icon	Function
	All calls
	Incoming calls
	Outgoing calls
	Missed calls

- 3 Scroll through the call log.
- To make a call, tap  next to the number you want to dial.
 - To check the call time, tap **Menu > Call Timer**. Tap  to reset the call time.
 - To only display the calls from or to the contacts of the categories assigned to the current mode, press the Mode switch key. ► p. 26


Messaging







Learn to use messaging functions.

Send a text message

- 1 Tap **Start > Message**.
- 2 Tap .
- 3 Tap **Tap to add recipients** and an option to enter a contact.
- 4 Tap the message field and enter your message text.
- 5 Tap **Send** to send the message.

Send a multimedia message

- 1 Tap **Start** > **Message**.
- 2 Tap .
- 3 Tap **Tap to add recipients** and an option to enter a contact.
- 4 Tap the message field and enter your message text.
- 5 Tap the input panel icon to display the toolbar.
- 6 Tap one of the following icons to add an attachment:

Icon	Function
	Attach a photo
	Attach a music file
	Attach a video
	Capture and attach a photo
	Record and attach a voice memo
	Record and attach a video

- 7 Tap **Menu** > **Attach** > an option to attach other types of files (if necessary).
- 8 Tap **Send** to send the message.

Add an email account

- 1 Tap **Start** > **E-mail** > **Setup E-mail**.
- 2 Enter your email address and password, and then tap **Next**.
- 3 Follow the on-screen instructions to complete the account setup.

Send an email message

- 1 Tap **Start** > **E-mail**.
- 2 Tap the name of an email account.
- 3 Tap **Menu** > **New**.
- 4 Enter the recipient's address.

- 5 Tap the subject field and enter a message subject.
- 6 Tap the message field and enter your message text.
- 7 Tap **Menu** > **Insert** > an option to attach other types of files (if necessary).
- 8 Tap **Send** to send the message.

View messages

You can access message folders for all your messaging accounts (email, SMS, and MMS).

To view messages,

- 1 Tap **Start** > **Message** or **E-mail**.
- 2 Tap the name of an account (if necessary).
- 3 Tap a message to view it.
 - To only display the messages from the contacts of the categories assigned to the current mode, press the Mode switch key. ► p. 26

Multimedia


Learn to capture photos and videos, listen to music, and take advantage of your device's multimedia features.


Camera

Your device allows you to take digital photos or record videos.

Capture a photo

 
- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.

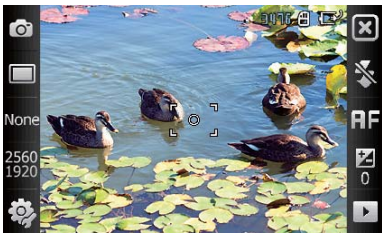

 The camera interface appears only in the landscape orientation.









- 3 Aim the lens at the subject and make any adjustments.
▶ p. 55
- 4 Press the Camera key to capture the photo.







View a photo

- 1 From the viewfinder, tap .
- 2 Scroll to the photo you want.

Adjust Camera settings


From the viewfinder, tap an icon and then tap a mode or setting.


Icon	Function
	Switch to camcorder
	Change the shooting mode: <ul style="list-style-type: none">: Single: Continuous: Smile: Mosaic: Panorama: Action



Icon	Function
	<p>Change the scene mode:</p> <ul style="list-style-type: none"> • : None • : Portrait • : Landscape • : Sunset • : Dusk & Dawn • : Night Shot • : Text • : Sports • : Back Light • : Party & Indoors • : Beach & Snow • : Fall Color • : Firework • : Candle Light
	Change the image size
	Change the camera settings
	<p>Change the flash setting:</p> <ul style="list-style-type: none"> • : Off • : On • : Auto
	<p>Change the auto focus setting:</p> <ul style="list-style-type: none"> • : Auto • : Macro • : Face
	Adjust the brightness
	Access quick view

 Record a video

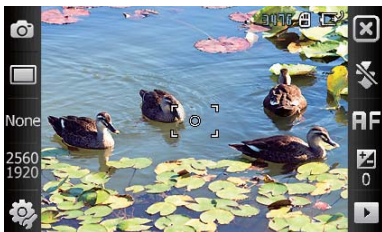

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.



 The camera interface appears only in the landscape orientation.








- 3 Tap  to launch the camcorder.
- 4 Aim the lens at the subject and make any adjustments.
► p. 58
- 5 Press the Camera key to begin recording.
- 6 When you are finished, tap  or press the Camera key to stop recording.







Play a video

- 1 From the viewfinder, tap .
- 2 Scroll to the video you want.
- 3 Tap  to play the video.



Adjust Camcorder settings


From the viewfinder, tap an icon and then tap a setting.

Icon	Function
	Switch to camera
	Change the recording mode: <ul style="list-style-type: none">• : Normal• : MMS• : Slow
	Change the video resolution
	Change the camcorder settings



Icon	Function
	Change the flash setting: <ul style="list-style-type: none"> •  : Off •  : On •  : Auto
	Adjust the brightness
	Access quick view

Capture photos in Smile shot mode

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap  > .

- 4 Aim the camera lens at your subject and press the Camera key.
 - The device recognises faces in an image and detects when your subjects smile. When all your subjects are smiling, the camera will automatically capture the photo.
-  In some cases, you may have to disable smile shot to capture a photo of your subject, even if he or she is smiling.



Create a photo mosaic

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap  > .
- 4 Select a mosaic type.
- 5 Aim the camera lens at your subject and press the Camera key to capture the first shot.

 
- 6 Repeat step 5 to capture the rest of the shots. When you have captured all the shots necessary for the mosaic, the camera will automatically combine them into one photo.



Capture panoramic photos

- 1 Press the Camera key.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap  > .
- 4 Aim the camera lens at your subject and press the Camera key to capture the first shot.

- 5 Slowly move the device to a direction. The device captures the next photo automatically.

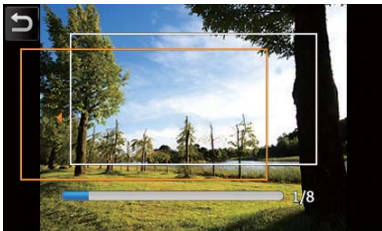




- 6 Repeat step 5 to capture the rest of the shots. When you have captured all the shots necessary for the panoramic photo, the camera will automatically combine them into one panoramic photo.

Capture photos in Action shot mode

In Action shot mode, you can capture shots of a moving subject and then combine them into a single photo that shows the action.

- 1 Press the Camera key.

- 2 Rotate the device anti-clockwise to the landscape orientation.
 - 3 Tap  > .
 - 4 Aim the camera lens at your subject in motion and press the Camera key to capture the first shot.
 - 5 Move the device to follow the moving subject. The device captures the next photo automatically.
 - 6 Continue to follow the subject until the device has captured all the shots necessary for the action photo. The camera will automatically combine them into one photo.
-  • Move the device horizontally or vertically to track the moving subject.
- In Action shot mode, the part of the scene that is not captured appears black.
 - The distance between the camera and subject should be at least 3 metres.
 - For best results, capture photos in well-lit areas with plenty of contrast between the subject and the background.

Media Player

Your device is equipped with Media Player, as well as Windows Media Player. The procedures that follow explain how to use Media Player. For information about Windows Media Player, refer to embedded help system.

Add music files to your device



Use any of the following methods to add music files to your device:

- Copy files to a memory card and insert the card into the device ► p. 19
- Download files from the wireless web (refer to the embedded help system)
- Receive via Bluetooth ► p. 124
- Synchronise with ActiveSync® ► p. 79











Update the library

- 1 Tap **Start** > **Media Player**.
- 2 Tap **Search** to locate and add new files to the Media Player library.
- 3 When the library is updated, tap **Done**.

Play music or video files

- 1 Tap **Start** > **Media Player**.
- 2 Tap **Player** (if necessary).
- 3 Tap  to open the currently playing list.
- 4 Tap .
- 5 Select files you want to play and tap **Done**.
- 6 Tap a file.


7 During playback, use the following controls:

Icon	Function
	Adjust the volume
	Skip to the previous file; Scan backward in a file (tap and hold)
	Pause playback
	Resume playback
	Skip to the next file; Scan forward in a file (tap and hold)
	<ul style="list-style-type: none">•  : Change the sound effect•  : Select a surround sound system•  : Change the shuffle or repeat option•  : Specify a section to repeat




- SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies.
- WOW HD™ significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

Create a playlist

- 1 Tap **Start** > **Media Player**.
- 2 Tap **Library** to view the library.
- 3 Tap .
- 4 Tap **Menu** > **New Playlist**.
- 5 Enter a title for your new playlist.
- 6 Select a photo for your playlist (if necessary).
- 7 Tap **Done**.

Add files to a playlist

- 1 Select a playlist.
- 2 Tap .
- 3 Select files you want to add and tap **Done**.

Photo


Learn to view photos and slideshows.

View a photo

- 1 Tap **Start** > **Photo**.
- 2 Tap a folder or tap **All** to view thumbnails.
- 3 Tap a thumbnail to view the photo.
 - While viewing the photo, tap and hold the screen. When up and down arrows appear, scroll up or down to zoom in or out.

Start a slideshow


- 1 Tap **Start** > **Photo**.
- 2 Tap a folder or tap **All** to view thumbnails.



- 3 Tap **Menu > Slide show**.
 - You can tap the screen and  to select a background music.
- 4 To end the slideshow, tap the screen and **OK**.








Digital Frame

With Digital Frame, you can view slideshows with background music.

View slideshows with background music

- 1 Tap **Start > Digital Frame**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap .
- 4 Select a folder of photos to view and set transition effects and time.
- 5 Tap the sound field.

- 6 Tap the check boxes next to music files you want, and tap **Select**.
- 7 Tap  next to **Enable Background Sound**.
- 8 Tap **Done**.
- 9 To begin the slideshow, tap .
- 10 During playback, use the following controls:








Icon	Function
	Change the layout of the display
	Skip to the previous photo
	End the slideshow
	Skip to the next photo
	Change the style of the date and time on the screen
	Change the slideshow settings
	Close Digital Frame

- Use the Volume key to adjust the volume.

FM Radio

You can listen to your favourite stations with FM radio.


Listen to the FM radio

- 1 Plug a headset into the headset jack.
- 2 Tap **Start** > **FM Radio**.
- 3 Tap **OK** to scan radio stations automatically.
- 4 Tap **Done** twice.
- 5 Tap  to turn on the radio (if necessary).
- 6 Tap  or  to scan through available radio stations.
 - To tune a radio station, tap  or .
 - To adjust the volume, tap .
 - To change the sound output, tap .

Save radio stations by automatic tuning

- 1 From the radio screen, tap **Scan** > **Yes** (if necessary).
- 2 When the scan is complete, tap **Done** twice.

Save radio stations manually

- 1 From the radio screen, scroll to the radio station you want to save.
- 2 Tap one of the  symbols near the bottom of the screen.

Select a radio station

- 1 From the radio screen, tap **FM 1** or **FM 2**.
- 2 Tap the radio station you want from the area near the bottom of the screen.


Record the FM radio










- 1 From the radio screen, tap **Menu** > **Record** to record the current station.
- 2 When you are finished, tap **Stop**. The recorded file is saved in **My Storage** > **FM Radio**.

Video Editor







With Video Editor, you can edit or make videos by combining photos or videos.




 
Create a storyboard

- 1 Tap **Start** > **Video Editor**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap **Storyboard**.
- 4 Tap .



- 5 Tap the check boxes on each thumbnail image (videos or images) you want to add to the storyboard. To select all, tap  (to deselect all, tap .
- 6 Tap **Done**.
- 7 Customise the storyboard as desired by tapping the following icons (refer to the Extended Usage Guide for more information about customising storyboards):
- : add clips
 - : add audio files
 - : create a text slide
 - : delete clips or change the order of clips
 - To edit viewable duration, dub clips (record audio), add subtitles, edit transitions, and add effects, tap a thumbnail image and an appropriate icon.
- 8 Tap .
- 9 Tap  to preview the video.
- 10 Tap  to save the video.
- 11 Tap **OK**.

Add pre-recorded audio to a video


- 1 Tap **Start** > **Video Editor**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Select **Music movie**.
- 4 Select a style and tap .
- 5 Tap the check boxes on images to add and tap .
- 6 Delete images or tap  to change how they are displayed (if necessary).
- 7 Tap .
- 8 Tap an audio file and tap .
- 9 Tap .
- 10 Tap **Enter text here**.
- 11 Rotate the device clockwise to the portrait orientation.

- 12 Enter a video title and tap **Done**.
- 13 Rotate the device anti-clockwise to the landscape orientation.
- 14 Tap .
- 15 Tap  to preview the video.
- 16 Tap  to save the video.
- 17 Tap .

Auto-crop a video

- 1 Tap **Start** > **Video Editor**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Select **Auto cut**.
- 4 Select a style and tap .
- 5 Tap the check box on a video and tap .

6 Tap  to preview the video.

7 Tap  to save the video.

8 Tap .

Games

Play fun games, such as Bubble Breaker and Solitaire. You can also download and play Java games on your device. To access games, tap **Start** > **Games** > a game.

Java

Your device supports applications and games built on the Java platform. To download Java-based applications,

1 Tap **Start** > **Java**.

2 Tap **Download Applications...** to launch the Opera browser and go to the Samsung Mobile website.

3 Follow the directions on the website to download new Java-based applications.

Personal productivity

ActiveSync

With ActiveSync, you can synchronise your device with a computer and back up and restore your data.

Install ActiveSync on your computer

Before you can synchronise your data, you must install ActiveSync, either from the supplied CD-ROM or the Microsoft website (<http://www.microsoft.com>).

To install ActiveSync from the supplied CD-ROM,

- 1 Insert the CD-ROM into your computer.
- 2 Follow the on-screen instructions to complete the setup.
- 3 When installation is complete, follow the on-screen instructions in the Synchronisation Setup Wizard to connect your device to the computer and create a data sharing partnership.

Connect your device to a computer

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **USB Connection** > **ActiveSync**.
- 3 Tap **Done**.
- 4 Connect one end (mini-USB) of the PC data cable to the multifunction jack on your device and the other end to the USB port on your computer.

Synchronise your data

When you connect your device to a computer, ActiveSync should begin synchronising your data automatically. You can begin the synchronisation manually by clicking **Sync** from the Microsoft ActiveSync window. To stop a synchronisation in progress, click **Stop**.

You can also manually find and copy files from your device to a computer and vice versa. From the Microsoft ActiveSync window, click **Explore**.

For more information on synchronising your data, refer to the embedded help system.



If you format the My Storage folder by using a connected computer, the writing speed to the My Storage folder may be reduced. Format the My Storage folder only from the device to avoid this situation.

Add an Exchange server

- 1 Tap **Start** > **ActiveSync**.
- 2 Tap **Menu** > **Add Server Source...**
- 3 Enter an email address.
- 4 Tap **Next**.
- 5 Enter your Exchange user name, password, and domain name.

- 6 Tap **Next**.
- 7 Enter a server address. To establish a secure connection, tap the check box that reads **This server requires an encrypted (SSL) connection**.
- 8 Tap **Next**.
- 9 Select the types of data to synchronise.
- 10 When you are finished, tap **Finish**.

Change the synchronisation schedule

If you routinely synchronise your data via an Exchange server, you can configure settings for both peak and off-peak schedules. To change the synchronisation schedules,

- 1 Tap **Start > ActiveSync**.
- 2 Tap **Menu > Schedule...**

- 3 Set the following options:
 - **Peak times:** set the frequency of synchronisations during peak hours
 - **Off-peak times:** set the frequency of synchronisations during off-peak hours
 - **Use above settings when roaming:** set to use the synchronisation schedules even when roaming
 - **Send/receive when I click Send:** set to synchronise when you tap **Send** in Messaging
- 4 When you are finished, tap **OK**.

Clock

Learn to set and control alarms, reminders, and world clocks. You can also use the stopwatch.

Set an alarm

- 1 Tap **Start** > **Clock**.
- 2 On the **Alarm** tab, tap **New**.
- 3 Set the alarm options.

4 When you are finished, tap **Done**.



The auto power-up feature sets the device to automatically turn on and sound the alarm at the designated time if the device is turned off. To use this feature, set the alarm to sound at least 3 minutes later.



Stop an alarm

When an alarm without snooze sounds, tap **Dismiss**. When an alarm with snooze sounds, tap **Dismiss** to stop it or **Snooze** to delay the alarm for the length of time you specified. Alarms with snooze will repeat according to the number of times you specified in the settings or until you tap **Dismiss**.

Schedule an anniversary

- 1 Tap **Start** > **Clock**.
- 2 On the **Anniversary** tab, tap **New**.
- 3 Set the anniversary options.
- 4 When you are finished, tap **Done**.

Create a world clock

- 1 Tap **Start** > **Clock**.
- 2 On the **World Clock** tab, tap **New**.
- 3 Tap  to open a list of cities.
 Tap **Name** or **Time** to sort the list by name or timezone.
- 4 Tap a city.
- 5 Tap **Done**.
- 6 Tap **Set as Home Clock** to reset the time zone (if necessary).
- 7 Tap **Done**.

Use the stopwatch


- 1 Tap **Start** > **Clock**.
- 2 On the **Stop watch** tab, tap **Start**.
- 3 Tap **Lap** to record lap times.

- 4 When you are finished, tap **Stop**.
- 5 Tap **Reset** to clear the recorded times.

Schedule

Use Schedule to keep track of appointments, birthdays, or other events.





Create a calendar event

- 1 Tap **Start** > **Schedule**.
- 2 Tap **New**.
- 3 Complete the fields and adjust the settings for your event.
- 4 When you are finished, tap **Done**.
 -  In the month view, a small triangle will appear under dates with scheduled appointments.

Change the calendar view

1 Tap **Start** > **Schedule**.

2 Tap a tab to change the calendar view:

- : a full month in one view
- : hourly blocks for the days in one full week (Sunday to Saturday)
- : hourly blocks for one full day
- : a list of scheduled appointments



To only display the appointments of the categories assigned to the current mode, press the Mode switch key while viewing the list of scheduled appointments. ► p. 26

Stop an event reminder

When the reminder alarm sounds for a calendar event, tap **Dismiss**.

Notes

Use Notes to create memos, sketches, and recordings.

Create a note

- 1 Tap **Start** > **Notes**.
- 2 Tap **New** to create a new note (if necessary).
- 3 Enter your note with the input panel.
 - To create sketches ► Create a sketch
 - To create recordings, tap **Menu** > **View Recording Toolbar**.
- 4 When you are finished, tap **OK**.

Create a sketch

- 1 Tap **Start** > **Notes**.
- 2 Tap **New**.
- 3 Make your sketch with strokes.

- 4 To edit the sketch, tap **Menu > Draw**.
 - Tap the sketch to make the selection handles appear. You can then use the handles to drag or resize the sketch or tap **Menu** to access other options.
- 5 When you are finished, tap **OK**.

Memo



Use Memo to create memos that combine text and freehand drawing. To create a memo:

- 1 Tap **Start > Memo**.
- 2 Tap **New** (if necessary).
- 3 Create your memo with the drawing tools and input panel.
- 4 When you are finished, tap **Save**.
- 5 Tap **OK**.

Voice Recorder






Use Voice Recorder to record, listen to, and send voice memos.

Record a voice memo

- 1 Tap **Start** > **Voice Recorder**.
- 2 Tap **Record** (if necessary).
- 3 Set recording volume and tap  to begin the recording.
- 4 Record your voice memo.
- 5 When you are finished, tap .
- 6 Tap **OK**.

Listen to a voice memo

- 1 Tap **Start** > **Voice Recorder**.
- 2 Tap a memo. Playback will begin automatically.
- 3 During playback, use the following controls:

Icon	Function
	Adjust the volume
	Skip to the previous file; Scan backward in a file (tap and hold)
	Pause playback
	Resume playback
	Skip to the next file; Scan forward in a file (tap and hold)

Tasks

Use Tasks to create to-do lists and reminders.

Create a task

1 Tap **Start > Tasks**.

2 Tap **Menu > New Task**.

3 Enter details for the task.



To set a reminder for the task, tap the due field and set a due date. Next, tap the reminder field, select **Remind me**, and then specify the time and date of the reminder.




4 When you are finished, tap **OK**.

Mark a task as completed





After completing a task, tap **Start > Tasks**, and tap the check box next to the task name. Once you have marked a task complete, you will no longer receive any scheduled reminders for that task.

Calculator

Use the calculator to perform basic mathematical calculations.
To perform a calculation,

- 1 Tap **Start** > **Calculator**.
- 2 Enter the first number using the calculator buttons on the screen.
 - To clear the displayed numbers, tap .
 - To clear the last digit entered in a multi-digit entry, tap .
- 3 Tap the appropriate math function.
- 4 Enter the second number.
- 5 To view the result, tap .

You can use the following buttons while performing calculations:









- : clear the number you entered
- : clear any value that is stored in the calculator's memory
- : recall the stored value from memory and inserts it into the current calculation
- : add the current number to the value stored in the calculator's memory

To use a scientific calculator,

- 1 Tap **Start** > **Calculator**.
- 2 Tap **Scientific**.
- 3 Rotate the device anti-clockwise to the landscape orientation.
- 4 Perform a calculator by using the buttons on the screen.

Unit Converter

Use Unit Converter to convert one unit of measure to another. To perform a conversion,

- 1 Tap **Start** > **Unit Converter**.
- 2 Select a type of measurement from the tabs at the top of the screen:
 - : Tip Calculator
 - : Length
 - : Weight
 - : Area
 - : Volume
 - : Temperature
 - : Currency
- 3 Select the unit of measure to convert.
- 4 Enter the base amount. The device displays the conversion result.
 -  For Currency, tap **Edit Rate** to input the basic rate first.

Smart Reader

Use Smart Reader to capture information from a business card or a document, and translate text.

Capture images of business cards or documents

- 1 Tap **Start** > **Smart Reader**.
- 2 Rotate the device anti-clockwise to the landscape orientation.
- 3 Tap **BizCard** or **Document**.
- 4 Align the business card or document in the screen.
 - For business cards, you must align the corners of the card with the corners of the frame (the frame will turn green when aligned).

5 Press the Camera key to capture the image.



- If you have activated the **BizCard automatic capture** setting, the device will automatically capture the image once the card is aligned in the frame.
- For best results, place business cards or documents on a flat, level surface and ensure adequate lighting.

6 Tap **Save**.


7 Tap **OK**.




Translate text

1 Tap **Start > Smart Reader**.

2 Rotate the device anti-clockwise to the landscape orientation.

3 Tap **Translation**.

4 Tap  to select a translation type.





- 5 Align the text in the screen.
- 6 Press the Camera key to capture the image.
- 7 Draw a rectangle over the area you want to translate.
- 8 Tap .
 - To check the translated word, tap .
 - To draw a new rectangle, tap .

View captured images

- 1 Tap **Start** > **Smart Reader**.
- 2 Rotate the device anti-clockwise to the landscape orientation.

3 Tap **Image**.

4 Tap the following tabs to sort captured images:


Icon	Functions
	View all captured images
	View captured images of business cards
	View captured images of documents
	View captured images of translations

5 Scroll left or right to an image.



Smart Search

Use Smart Search to search for any specific data stored in your device (including contacts, call logs, media files, schedules, messages, or programs) or on the web.

Search inside the device

- 1 Tap **Start** > **Smart Search**.
- 2 Tap the **My Phone** tab (if necessary).
- 3 Tap **All** > a category.
- 4 Tap the text input field.
- 5 Enter a letter or a word of the data to search and tap .
 - Any data including the letter or word you have entered will be listed.
- 6 Tap the data you want to access.

Search on the web

- 1 Tap **Start** > **Smart Search**.
 - 2 Tap the **Web** tab (if necessary).
 - 3 Tap **Google** > **Google** or **Bing**.
 - 4 Tap the text input field.
 - 5 Enter a letter or a word of the data to search on the web and tap .
 - Any data including the letter or word you have entered will be listed.
 - 6 Tap the data you want to access.
-  You can also get the data from Google Services (Mail, YouTube, Maps) or Bing Services (MSN Today, Hotmail, Messenger).

Web applications

Web browsing with Opera

Learn to access and bookmark your favourite web pages with the Opera Mobile browser.










- You may incur additional charges for accessing the web and downloading media.
- Available icons may vary depending on your region or service provider.

Browse the web

- 1 Tap **Start** > **Opera Browser**.
- 2 Scroll through the web page.




3 Navigate web pages by tapping the following controls:

Icon	Functions
	Return to the previous page
	Open a favourite web page
	Open a new tab or page, or page you have previously accessed
	Open the homepage
	Open the browser menu

To search the web, tap the address bar at the top of the screen, tap the lower field and enter a keyword, and tap . To change the default browser from **Opera Browser** to **Internet Explorer**, tap  > **Settings** > **Advanced**. Clear the check box next to **Set Opera as default browser**. To zoom in or out on some web pages, double-tap or tap and hold the screen.

Bookmark your favourite pages


To add a web page to your list of favourite pages,


- 1 Tap **Start** > **Opera Browser**.
- 2 Tap  > **Saved Pages**.
- 3 Tap .
- 4 Enter a name for the web page, the web address, and select a folder (you can add a new folder by tapping **Add new folder** in the drop-down menu).
- 5 When you are finished, tap .

Search Widget

Use Live Search and use many service links in directory such as Directions, Maps, Hotmail, and Messenger.

- 1 Tap **Start** > **Search Widget**.
- 2 Tap **Continue** (if necessary).


- 3 Enter a letter or a word of the data to search in Live Search and tap .

 Tap **directory** to use service links.





 
Streaming Player

Use Streaming Player to watch videos or listen to audio files directly from the internet.

Stream media from the internet

- 1 Tap **Start** > **Streaming Player**.
- 2 Tap .
- 3 Enter the URL of a streaming media file.
- 4 Tap **Connect**.

5 During playback, use the following controls:

Icon	Function
	Adjust the volume
	Pause playback
	Resume playback
	Stop playback
	Zoom in or out

RSS Reader

Learn to use RSS Reader to get the latest news and information from your favourite websites.

Subscribe to RSS feeds


To subscribe to RSS feeds by entering an address,

1 Tap **Start** > **RSS Reader**.

2 Tap a feed category.

- 3 Tap **Add Feed**.
- 4 Tap **Add RSS/ATOM URL**.
- 5 Enter the address of an RSS feed and tap **Done**.
- 6 Enter the name of the RSS feed and set a feed category.
- 7 Tap **Add**.

To subscribe to RSS feeds by searching,

- 1 Tap **Start > RSS Reader**.
- 2 Tap a feed category.
- 3 Tap **Add Feed**.
- 4 Tap **Search for Feeds**.
- 5 Use the input panel to enter a keyword and tap .
- 6 Tap a feed.
- 7 Tap **Add > OK**.

Update and read RSS feeds

- 1 Tap **Start** > **RSS Reader**.
- 2 Tap a category > a feed.
- 3 Tap **Update**.
 - Your device will attempt to connect to the internet. If necessary, activate your internet connection.
- 4 Tap **Done**.
- 5 Tap a headline and a link.

Podcast

Use Podcast to search for, download, and listen to podcasts.


Subscribe to Podcasts

To subscribe to Podcasts by entering an address,

- 1 Tap **Start** > **Podcast**.

- 2 Tap **Menu** > **Add Podcast URL**.
- 3 Enter the address of a podcast and tap **Add** > **OK**.

To subscribe to Podcasts by searching,

- 1 Tap **Start** > **Podcast**.
- 2 Tap **Menu** > **Search Podcast**.
- 3 Use the input panel to enter a keyword and tap . Your device searches for related podcasts and displays the results.
- 4 Tap the podcast you want to subscribe to and tap **Add** > **OK**.

Download and play podcasts

- 1 Tap **Start** > **Podcast**.
- 2 Tap a podcast.

- 3 Tap **Menu > Download**.
- 4 Tap items you want to download.
- 5 Tap **Done** to download the items.
- 6 When you are finished, tap **OK**.

Update your podcast library

Once you have subscribed to podcasts (► p. 107), you can easily update your library to listen to the latest episodes. To update your podcast library,

- 1 Tap **Start > Podcast**.
- 2 Tap **Update**.
- 3 Tap podcasts you want to update.
- 4 Tap **Done > Done**.

Communities

Communities is a convenient feature that allows you to post your photos to websites and blogs.

Upload photos

Use Communities to upload photos directly to your website or blog. To upload photos,

- 1 Tap **Start** > **Communities**.
- 2 Tap **Accept** (if necessary).
- 3 Tap a blog or website.
- 4 Tap **Upload**.
- 5 Tap **Accept** (if necessary).
- 6 Log in to the blog or website by following the on-screen instructions.
- 7 Enter a title for your image and tap **Tap to Add**.

- 8 Navigate to an image and tap the thumbnail.
- 9 Select other options (if necessary).
- 10 Tap **Done**.
 - The image will be uploaded to the website or blog.
- 11 When the upload is complete, you can go to the website, view the upload details, or return to the list of sites by tapping the appropriate button.

Upload photos at a later time (Upload reservation)

With the Upload reservation feature of Communities, you can set a specific date and time to upload your photos to a website or blog. To create an upload reservation,

- 1 Tap **Start > Communities**.
- 2 Tap **Menu > Options > Upload reservation**.
- 3 Tap **New**.

- 4 Tap a website or blog.
- 5 Enter a title for your image and tap **Tap to Add**.
- 6 Navigate to an image and tap the thumbnail.
- 7 Select other options (if necessary).
- 8 Tap the **Date** field and select a date for the upload reservation.
- 9 Tap the **Time** field and set a time for the upload reservation.
- 10 Tap **Done**.

Marketplace

Marketplace allows you to find and add new applications to your device. With Marketplace, you can search, browse, preview, buy, and download new applications directly to your mobile device. Available applications depend on your network operator and service provider.

Tap **Start > Marketplace**.

Microsoft My Phone

Use Microsoft My Phone to synchronise your contacts, calendar, tasks, text messages, music, photos, videos, and other documents with your my phone account at <http://myphone.microsoft.com>.

Tap **Start > Microsoft My Phone**.



Connectivity

Connect to the internet or your network

You can connect to your Internet Service Provider (ISP) and use the connection to send and receive email messages and to browse the internet. You can also connect to any private network, such as a corporate network you use at work.


Connect to the internet

- 1 Obtain the following information from your internet service provider: phone number for your ISP server, user name, and password.
- 2 Tap **Start** > **Settings**.
- 3 On the **Advanced Settings** tab, tap **Connection** > **Connections**.

- 4 In **My Internet**, tap **Add a new modem connection**.
- 5 Create a modem connection. To view detailed information for any screen while changing the settings, tap .
- 6 When the connection is successfully configured, run **Opera Browser** or **Internet Explorer** to begin browsing the internet. Your device will automatically attempt to connect.
 To set up a network card or wireless network connection to your ISP, add a new connection under **My Work Network**.

Connect to work

- 1 Obtain the following information from your network administrator: server phone number, user name, and password.
- 2 Tap **Start > Settings**.
- 3 On the **Advanced Settings** tab, tap **Connection > Connections**.

 



 

 


- 4 In **My Work Network**, set up a modem, VPN server connection, or proxy server. To view detailed information for any screen while changing the settings, tap .
- 5 When the connection is successfully configured, run **Opera Browser** or **Internet Explorer** to begin browsing the internet. Your device will automatically attempt to connect.



You can select an authentication method for GPRS connections by using **GPRS Authentications**.

End a connection

To disconnect,

- When connected via VPN, tap the network connection icon (, , , , , or ) on your status bar, and then tap **Disconnect**.
- When connected via ISP, tap any connectivity icon on your status bar and tap the active network connection icon (, , , or). The wireless manager screen appears. Tap **All Data Connection** and **Disconnect**.

- When connected via a cable, detach your device from the computer by disconnecting the cable.
- When connected via a modem or a network (Ethernet) card, remove the card from your device.

To set options to end a network connection,

- 1 Tap **Start > Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings > Wireless Manager**.
- 3 Tap **Menu > Data con. Settings**.
- 4 Tap the check box next to an option.
 - **End key (Short Press)**: When you press the End key, the network connection is disconnected.
 - **Sleep**: When Sleep mode activates, the network connection is disconnected.
 - **No packet for**: When the data packet is not transferred for the specific time interval, the network connection is disconnected.
- 5 Tap **Done**.

Find the active network connection

The icons at the top of the screen will show active connections. Tap any connectivity icon to view the active connection. A small window will display the connection information.



Wi-Fi and data connections can be active at the same time. When both connections are active, the device will use Wi-Fi as the default internet connection.

Use Internet Sharing

Set your device to be used as a wireless modem.

- 1 Connect your device to another device or computer via the USB port or Bluetooth.
- 2 Tap **Start** > **Internet Sharing**.
- 3 Select the PC connection and network connection type.
- 4 Tap **Connect** to activate the internet connect.

GPS

To use GPS applications of your device, you can connect to an external GPS receiver and enhance the GPS functionality.



Connect to an external GPS receiver

By default, the device uses the internal GPS receiver but you can connect to an external GPS receiver.

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **GPS** > **Connection**.
- 3 Tap the **GPS program port** field > a port for GPS applications.
- 4 Tap the **GPS hardware port** field > a port for the external GPS receiver.
- 5 Select the baud rate and set whether or not to manage GPS automatically.
- 6 Tap **Done**.

Update the GPS functionality


Enhance the GPS functionality by downloading GPS data files. You can improve the speed and accuracy of positioning capability and expand your navigation to areas where cellular networks are not accessible.

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **General Settings** > **GPS** > **Assist GPS**.
- 3 Check  next to **Enable A-GPS**.
- 4 Enter the address server and select an access point.
 The default address server is 7275.
- 5 Tap **Done**.

Bluetooth

You can connect with other Bluetooth-enabled wireless devices within a range. Walls or other obstacles between devices may block or impair the wireless connection.

Turn on the Bluetooth wireless feature

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth**.
- 3 Tap the device icon in the middle of the screen.
 - The device will start searching and display the icons of Bluetooth-enabled devices.
- 4 To allow other devices to find and connect to your device, tap **Menu** > **Device Info**, and tap  next to **Enable visibility to other devices**.
- 5 Tap **Done**.


Change your Bluetooth device name

You can alter the name that your device will display to other Bluetooth-enabled devices. To change the device name,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth** > **Menu** > **Device Info**.
- 3 Tap the name input field.
- 4 Enter a device name.
- 5 Tap **Done**.

Search for and pair with a Bluetooth-enabled device

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth**.

- 3 Tap **Search**.
 - Your device will search for and display the icons of Bluetooth-enabled devices.
 - To select a search option, tap **Menu > Options > All Devices** under **Select Search Options > a device type > Done**.
- 4 Drag a device icon into the centre.
- 5 Enter the 1- to 16-digit Bluetooth PIN for the device you are trying to connect to and tap **Done**.
 -  To pair with another Bluetooth-enabled device, both devices must use the same passcode. Headsets or hands-free car kits may use a fixed passcode, such as **0000**.


Send data via the Bluetooth wireless feature

- 1 Locate an item or a file to send.
- 2 Select a sending option.
- 3 Select a device on the list.


Receive data via the Bluetooth wireless feature

- 1 Enter the PIN for the Bluetooth wireless feature and tap **Next** (if necessary).
- 2 When a pop-up window appears, tap **Hide** (if necessary).
 - Tap **Cancel** to stop receiving the data.
- 3 When prompted to allow incoming data, tap **Yes** to save the data to your device.

To receive all incoming beams,

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth** > **Menu** > **Device Service**.
- 3 Tap **Options** next to **Object Push**.
- 4 Check  next to **Enable to receive all incoming beams**.
- 5 Tap **Done**.

Activate the smart pairing option

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Bluetooth** > **Menu** > **Device Service**.
- 3 Tap **Options** next to **Hands-free** or **Wireless Stereo**.
- 4 Check  next to **Enable smart pairing**.
- 5 Tap **Done**.

Wi-Fi

Your device features wireless networking capabilities that allow you to connect to wireless local area networks (WLANs).

-  This device uses non-harmonised frequency and is intended for use in all European countries.
The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Activate and connect to a WLAN

1 Tap **Start** > **Settings**.

2 On the **Basic Settings** tab, tap **Network Settings** > **Wi-Fi**.



3 Tap the device icon in the middle of the screen.

- The device will start searching and display available WLAN connections.

◀ 4 Drag a network icon to the device icon in the middle of the screen.

- The device will attempt to connect to the WLAN.

5 Select a network profile and enter a password, and tap **Done** (if necessary).

Create a new Wi-Fi connection

- 1 Tap **Start** > **Settings**.
- 2 On the **Basic Settings** tab, tap **Network Settings** > **Wi-Fi**.
- 3 Tap **Menu** > **Add New**.
- 4 Enter a network name and configure connection settings.
- 5 When you are finished, tap **Next**.
- 6 Enter network authentication settings.
- 7 Tap **Next** (if necessary).
- 8 Set the IEEE 802.1x access option and the extensible authentication protocol (EAP) type (if necessary).
- 9 Tap **Finish**.
 - The new Wi-Fi network will appear on the Wi-Fi screen. To connect to the network, drag the network icon to the device icon in the middle of the screen.

Connected Home

The connected home application allows you to share media files between devices in your home. You can access and play files from devices that support the Digital Living Network Alliance (DLNA) standard.

Play your files on another device

- 1 Search for and connect to a network using the WLAN.
▶ p. 126
- 2 Tap **Start** > **Connected Home**.
- 3 Tap **SELECT CONTENTS**.
- 4 Tap the icon in the middle of the screen to select your device.
- 5 Tap **Menu** > **Settings**.
- 6 Tap **Sharing Folders...** under **My media Sharing**.
- 7 Tap **Add..** to share a folder (maximum of three folders).

8 Navigate to and tap a folder name.




You can change a shared folder by tapping **Change...** and locating a new folder. You can remove a folder from the list of shared folders by tapping **Delete**.

9 Tap **Done** twice.

10 Tap the circle in the middle of the screen to select your device.

11 Select a folder and locate files.


12 Tap  to return to the now playing list.

13 Tap **SELECT PLAYER**.

14 Select a player—the one that will play the media files.

- The media files of the selected folder appear or start playback on the selected player. You can control playback using icons of your device.
- A buffer may occur on the player depending on the network connection and the connected server.

Play files from one device to the other device

- 1 Search for and connect to a network using the WLAN.
▶ p. 126
- 2 Tap **Start** > **Connected Home**.
- 3 Select **SELECT CONTENTS**.
- 4 Select a device—the one that contains media files.
- 5 Select a folder and locate files.
- 6 Tap  to return to the now playing list.
- 7 Select **SELECT PLAYER**.
- 8 Select a player—the one that will play the media files.
 - The selected media files appear or start playback on the selected player. You can control playback using icons of your device.
 - A buffer may occur on the player depending on the network connection and the connected server.

Download files to your device

- 1 Search for and connect to a network using the WLAN.
▶ p. 126
- 2 Tap **Start** > **Connected Home**.
- 3 Select **SELECT CONTENTS**.
- 4 Select **Menu** > **Settings**.
- 5 Tap **Change...** under **Download location**.
- 6 Navigate to and tap a folder name.
- 7 Tap **Done**.
- 8 Select a device—the one that contains media files.
- 9 Select a folder and locate files.
- 10 Tap **Menu** > **Download**.
- 11 Select files and tap **Download**.
 - The files will be downloaded to your device.


Delete files

You can delete files from the now playing list to prevent them from being played on your device. This will not delete the file from the device that contains the original files.

Troubleshooting

If you have trouble with your device, try these procedures before you contact a service professional.

When you turn on your device, the following messages may appear:

Message	Try this to solve the problem:
The SIM card is missing.	Ensure that the SIM or USIM card is installed correctly.
Enter PIN.	When using the device for the first time or when the PIN requirement feature is enabled, you must enter the PIN supplied with the SIM or USIM card. To disable the PIN requirement feature, tap Start > Settings > Basic Settings tab > Security > SIM PIN , and then tap  next to Require PIN when phone is used .
SIM card blocked.	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

Your device does not show a signal (no bars next to the network icon)

- If you just turned on the device, wait about 2 minutes for your device to find the network and receive a signal.
- You may not be able to receive a signal in tunnels or elevators. Move to an open area.
- You may be between service areas. You should receive a signal when you enter a service area.


You forgot a security code, PIN, or PUK

If you forget or lose this or another code, contact the seller or your service provider.

Your display shows white lines

The display may show white lines if you have turned the device on after a long period of disuse or if you removed the battery without first turning off the device. The display should correct itself in a short time.

You enter a number, but the call is not dialed

- Ensure that you have pressed [].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

You select a contact to call, but the call is not dialed

- Ensure that the correct number is stored in the contact information.
- Re-enter and save the number (if necessary).

Another caller cannot hear you speaking

- Ensure that you are not blocking the built-in microphone.
- Move the built-in microphone closer to your mouth.
- If using a headset, ensure that it is properly connected.

The sound quality of a call is poor

- Ensure that you are not blocking the internal antenna and the Bluetooth antenna. The internal antenna and the Bluetooth antenna are located at the bottom of the device.
- When you are in areas with weak signals, you may lose reception. Move to another area and try again.

The battery does not charge properly or sometimes your device turns itself off while charging

- Disconnect the device from the charger, remove and reinstall the battery, and try charging again.
- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean and soft cloth and try charging the battery again.
- If the battery no longer charges completely, dispose of the old battery properly and replace it with a new battery.
- If you are using the PC data cable to charge the battery, install ActiveSync on your computer first.

Your device is hot to the touch

When you use applications that require more power, your device may heat up. This is normal and should not affect your device's lifespan or performance.

Your device cannot connect to the internet

- Ensure that you have entered valid settings for your internet service provider.
- Ensure that you have activated the wireless connection to your mobile service provider and that the signal is not obstructed.
- Ensure that you have entered the correct user name and password.

You cannot find a Bluetooth-enabled device

- Ensure that both devices have activated the Bluetooth wireless feature.
- Ensure that the distance between the devices is not more than 10 metres and that they are not separated by walls or other obstacles.
- Ensure that the settings for each device allow them to be visible to other devices.
- Ensure that both devices are compatible with Bluetooth wireless technology.
- Ensure that the correct PIN has been entered on both devices.

You cannot listen to music on a remote Bluetooth headset

- Ensure that your device is connected to the headset.
- Ensure that the music format you are trying to listen to is supported by the headset.
- Ensure that the distance between the headset and device is not more than 10 metres and that they are not separated by walls or other obstacles.

Safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your device.



Safety warnings

Keep your device away from small children and pets

Keep your device and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile devices and equipment with caution

Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device.
Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile devices and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your device is interfering with a pacemaker or other medical device, turn off the device immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the device in potentially explosive environments

Do not use your device at refuelling points (service stations) or near fuels or chemicals. Turn off your device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your device, hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the device to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



Safety precautions

Drive safely at all times

Avoid using your device while driving and obey all regulations that restrict the use of mobile devices while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile device in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your device or cause injury.

Turn off the device near medical equipment

Your device can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the device or disable the wireless functions when in an aircraft

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.
- Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Handle your device carefully and sensibly

- Do not disassemble your device due to a risk of electric shock.
- Do not allow your device to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the device. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.
- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.
- Your device is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- If your device has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your device may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your device emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your device in the normal position

Avoid contact with your device's internal antenna.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram.

During testing, the maximum SAR recorded for this model was 0.414 watts per kilogram when held at the ear and 0.882 watts per kilogram when worn on the body.* In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy. The World Health Organization (WHO) has stated that the scientific information available at present does not suggest a need for users to take any special precautions to prevent RF exposure when using mobile phones. The WHO notes that if you desire to reduce your exposure you can do so by limiting the time you use your phone or use a "hands-free" device to keep the phone away from your head and body.

*. When used with accessories that contain no metal and provide at least 1.5cm separation between the device (including the antenna, whether extended or retracted) and the wearer's body.


Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature

 indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider.

Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE,

SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Index

ActiveSync

- Exchange server, 80
- installing, 78
- schedule, 81
- synchronise, 79

alarm

- setting, 82
- stopping, 83

background image

- see Today Screen

battery

- charging, 18
- installing, 16

Bluetooth

- activating, 121
- connecting to other devices, 122

- receiving data, 124
- sending data, 123

browser

- see Opera

calculator 92

calendar

- see Schedule

calls

- answering, 48
- from Call Log, 50
- from Phonebook, 47
- international number, 48
- making, 47
- rejecting, 48

camera 54

Communities 110

Connected Home 128

contacts

- assigning photos, 45
- assigning ringtones, 46
- assigning speed dial numbers, 45
- copying and moving contact cards, 43
- creating contacts, 42
- organising, 44
- searching for contacts, 43

converter

- see Unit Converter

Digital Frame 69

Etiquette pause 27

Exchange Server

- see ActiveSync

FM radio

- listening, 71
- recording songs, 73
- saving stations, 72

games 77

GPS 119

help system 34

internet

- see Opera

Internet Sharing 118

Java 77

lock 21

Marketplace 113

Media Player

- creating a playlist, 67
- playing files, 65
- updating the library, 65

Memo 88

memory card 19

Messaging

- adding email accounts, 52
- sending email, 52
- sending multimedia, 51
- sending text, 50
- viewing, 53

Microsoft My Phone 113

Mode manager 25

notes

- creating, 87
- sketches, 87

Opera

- adding bookmarks, 103
- browsing, 101

Photo

- starting slideshows, 68
- viewing photos, 68

photos

- basic capturing, 54
- capturing in Action shot mode, 62
- capturing in Smile shot mode, 59
- capturing panoramic photos, 61
- mosaic, 60
- viewing, 55

Podcast 107

radio

- see FM radio

reset 23

RSS Reader 105

Schedule

- changing views, 86
- creating events, 85
- stopping event alarms, 86

SIM card 16

sketches 87

Smart Reader

capturing images, 95

translating text, 96

viewing captured images, 97

stopwatch 84

Streaming Player 104

Task Switcher 32

Tasks

creating, 91

marking as completed, 91

text input

Block Recognizer, 36

keyboard, 37

Letter Recognizer, 38

Samsung Keypad, 39

Transcriber, 40

themes

see Today Screen

Today screen

adding or removing items,
24

changing themes or
background images, 24

Unit Converter 94

USIM card 16

Video Editor 73

videos

playing, 58

recording, 57

Voice Recorder 89

volume

call volume, 48

system volume, 27

Widgets

customising widgets, 30

dragging to the Today

screen, 30

opening the toolbar, 28

Wi-Fi 125

world clock 84

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**
declare under our sole responsibility that the product

GSM Mobile Phone : GT-B7610

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2001 +A11:2004	SAR	EN 50360 : 2001 EN 62209-1 : 2006
EMC	EN 301 489- 01 V1.6.1 (09-2005) EN 301 489- 07 V1.3.1 (11-2005) EN 301 489- 17 V1.2.1 (08-2002) EN 301 489- 24 V1.4.1 (09-2007)	RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006) EN 301 908- 1 V3.2.1 (05-2007) EN 301 908- 2 V3.2.1 (05-2007)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road, Walton-on-Thames,
Surrey, KT12 2TD, UK* Identification mark: 0168

CE 0168

 
The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab. Blackbushe Business Park,
Saxony Way, Yateley, Hampshire, GU46 6GG, UK*
2009.06.17



Yong-Sang Park / S. Manager

(place and date of issue)

(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.