

ZTE BLADE A3

User Manual

LEGAL INFORMATION

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright © 2018 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. We offer self-service for our smart phone users. Please visit the ZTE official website (at www.ztedevices.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation. Android is a trademark of Google LLC; Oreo is a trademark of Mondelez International, Inc. group.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ZTE Corporation is under license.



microSDXC Logo is a trademark of SD-3C, LLC.

Qualcomm snapdragon

Qualcomm[®] Snapdragon[™] processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Other trademarks and trade names are those of their respective owners.

Instructional Icons

	NOTE	It means that the content is additional information, and the supplementary instruction or tips for the operation of the mobile phone.
	CAUTION	It means that if you ignore this safety information, it may cause slight damage to the equipment or make the part of the business interrupt.
	WARNING	It means that if you ignore this safety information, it may cause serious damage to the equipment or cause danger to personal safety.

Version No.: R1.0

Edition Time: March 27, 2018

Contents


Getting Started	8
Overview	8
Installing the nano-SIM Card(s) and the microSDXC™ Card	10
Charging Your Phone	14
Powering On/Off	16
Setting Up for the First Time	16
Knowing Keys	17
Getting to Know the Home Screen	18
Knowing the Basics	24
Monitoring the Phone Status	24
Managing Notifications	25
Security	27
Protecting Your Phone With Screen Locks.....	27
Protecting Your Phone With Screen Pinning	27
Connecting to Networks	29
Connecting to Mobile Data Network	29
Connecting to Wi-Fi Network	30
Connecting to Virtual Private Networks	31
Connecting to Devices	32
Bluetooth.....	32
Wi-Fi Direct®	32

Sharing Your Mobile Data Connection.....	33
Sharing Your Mobile Data Connection via USB	33
Sharing Your Mobile Data Connection via Bluetooth	34
Sharing Mobile Data Through a Wi-Fi Hotspot.....	35
Phone Calls	36
Making Calls	36
Receiving Calls.....	37
Contacts	39
Creating a Contact	39
Searching for a Contact.....	39
Messages.....	40
Opening the Messages Screen	40
Sending a Message.....	40
Changing Message Settings	42
Camera.....	42
Taking Pictures with Your Camera	42
Recording Videos with Your Camcorder	42
Opening Your Gallery	43
Music.....	43
Playing Your Music.....	43
Making Voice Memos	44
Using Your Google Applications	44
Settings.....	46
Languages & Input	46

Sound.....	46
Navigation Keys	47
Scheduled Power On/Off	47
Gestures & Motion	47
Mobile Networks	48
Location	48
Accounts	49
Accessibility	49
Reset.....	49
System Update	50
Setting the Date and Time	50
For Your Safety	51
General Safety	51
Distraction	52
Product Handling	53
Electrical Safety	57
Interference.....	58
Explosive Environments	60
Specific Absorption Rate (SAR)	61
CE Caution	62
Declaration of RoHS Compliance.....	63
Disposal of Your Old Appliance	64
EU DECLARATION OF CONFORMITY.....	65

Getting Started

Overview

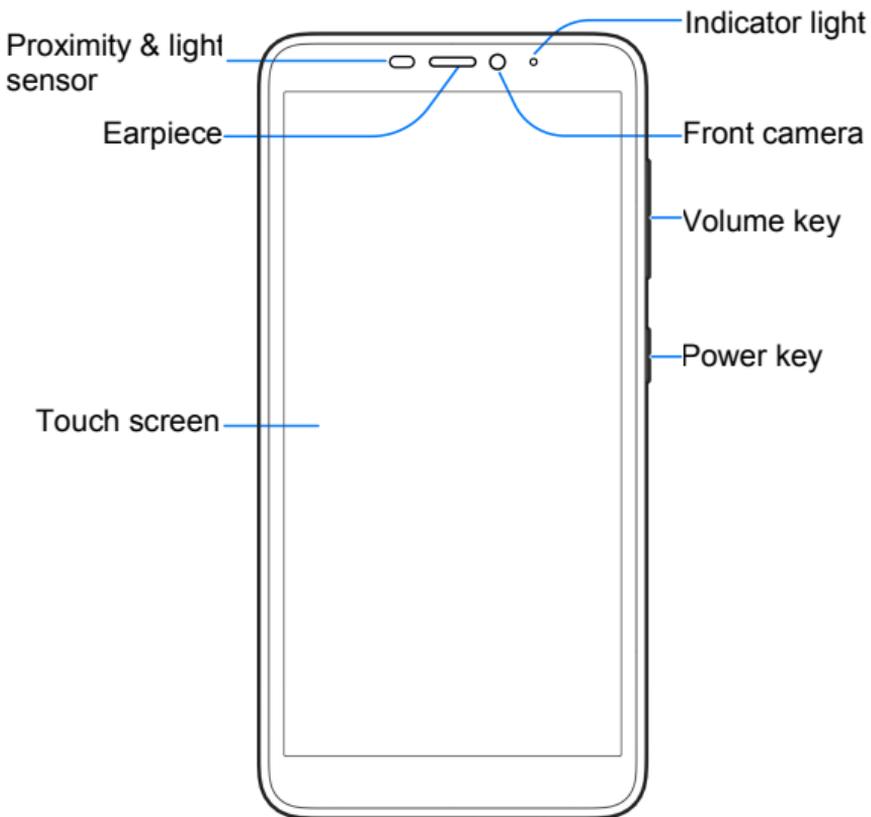



Installing the nano-SIM Card(s) and the microSDXC™ Card

The nano-SIM card can be installed or removed while the phone is turned on.


The microSDXC card (optional, not included) can be installed or removed while the phone is turned on. You need to unmount the microSDXC card before removing it.





WARNING!

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.


1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.

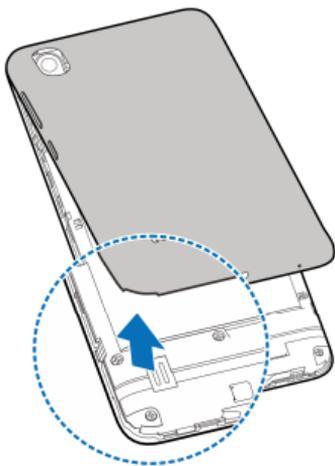


2. Hold your nano-SIM card and the microSDXC card with the metal contacts facing down and slide it into the card slot.

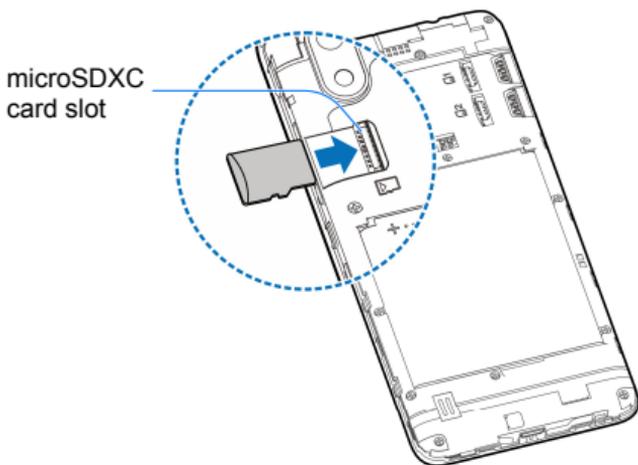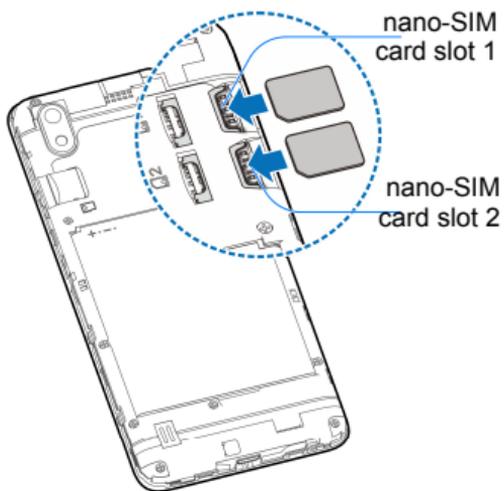

3. Insert the battery by aligning the golden contacts on the battery and those in the battery compartment. Gently push down on the battery until it clicks into place.

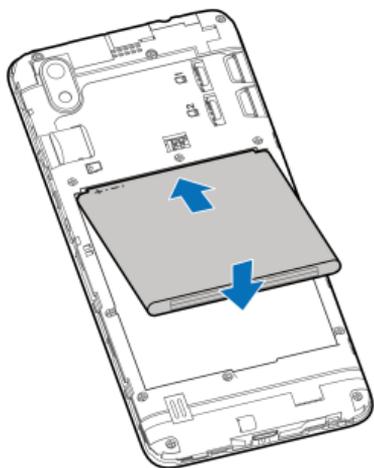

4. Replace the back cover.

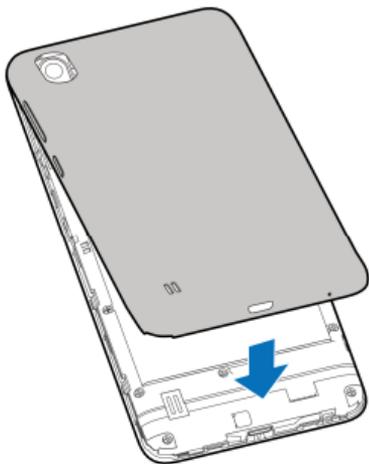

Charging Your Phone


Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the lock screen will show you the exact battery level on the status bar.

 **WARNING!**

Use only ZTE-approved chargers and USB cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

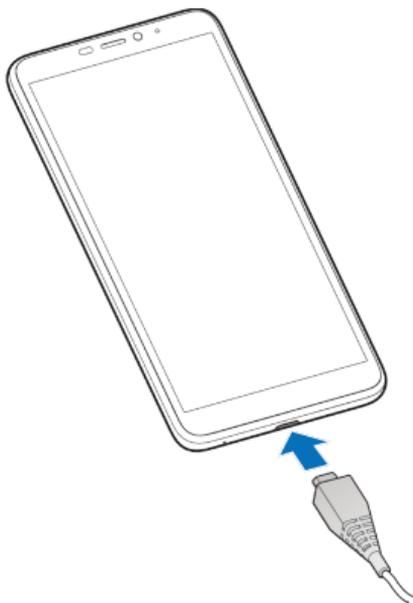

2. Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as  or , appear on the status bar.

3. Disconnect the charger when the battery is fully charged.



NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes.

Contact the customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off

- Press and hold the **Power** key to turn on your phone.
- To switch it off, hold **Power** key to open the options menu and touch **Power off**.

Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings, you need to do some settings before using it.

Touch the language field to select the language you want to use and then touch **START**. Then follow the prompts to set up Wi-Fi, Google services, set Date & time, enter Name, activate protection features and set other options.

Knowing Keys

Key	Function
Power key	<ul style="list-style-type: none">• Press and hold to turn on or off flight mode, restart or power off.• Press to turn off or on the screen display.
 Home key	<ul style="list-style-type: none">• Touch to return to the home screen from any application or screen.• Touch and hold to use Google Assistant.
 Back key	Touch to go to the previous screen.
 Recent apps key	Touch to see recently used apps.
Volume key	Press or hold either end of the key to turn the volume up or down.



NOTE:

The positions of the **Recent apps** key and the **Back** key are interchangeable through **^ > Settings > Features > Navigation keys.**

Getting to Know the Home Screen

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

- Touch the buttons, icons, or applications to select items or to open applications.
- Flick the screen to scroll up, down, left or right.
- Hold and drag to move particular items across the screen.
- Double-touch the screen to zoom in/out an image.

Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding folders, shortcuts, and more.

Extended Home Screen

Your home screen is extendable, providing more space for shortcuts, folders, and more. Simply swipe left or right on the screen to see the extended panels.

Choosing Your Wallpaper

You can set the wallpaper for the home screen and lock screen.

1. From the home screen, touch  > **Settings** > **Display** > **Wallpaper**.
2. Select a built-in static wallpaper for lock screen or home screen, or touch **My photos** to select a picture, and then use it as the wallpaper.



NOTE:

Other way to set the home screen wallpaper and the lock screen wallpaper:

Touch and hold an empty area of the home screen and touch **WALLPAPERS**. Then select a built-in image or an image from your gallery.

Removing Items from Your Home Screen

1. Touch and hold the item you want to delete.
2. Drag it to  **Remove** to delete it.
3. If the item is an application, drag it to  **Uninstall** and then touch **OK** to uninstall it.



NOTE:

Some preinstalled apps cannot be uninstalled.

Using the Touch Screen

Your phone's touch screen enables you to control actions through a variety of touch gestures.

- Touch

When you want to type using the onscreen keyboard, select items on the screen such as the application and settings icons, or press the onscreen buttons, simply touch them with your finger.



- Touch and Hold

To open the available options for an item (for example, a message or link in a web page), touch and hold the item.




- **Swipe or Slide**

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.




- **Drag**

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

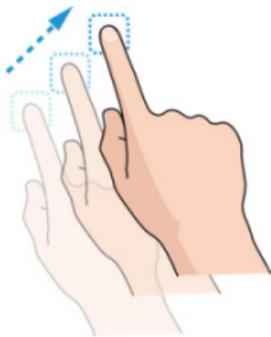

- Pinch

In some apps (such as Maps and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

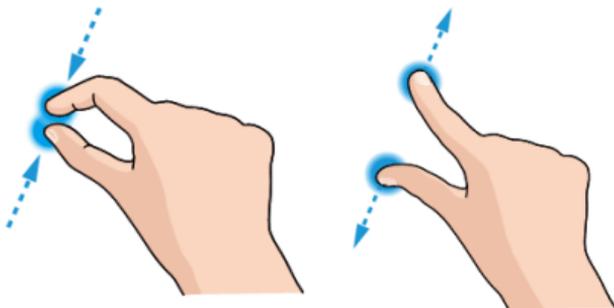

- Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

 **NOTE:**

The auto-rotate feature needs to be enabled for the screen orientation to automatically change. From the home screen, touch \wedge > **Settings** > **Display** > **Advanced** and slide on the **Auto-rotate screen** switch. You can also access the screen rotation control by sliding down the status bar twice and touch **Portrait**.

Using Do Not Disturb Mode

You can limit interruptions with Do not disturb mode. This mode silences your phone so that it doesn't make sounds or vibrate when you don't want it to.

1. From the home screen, touch  > **Settings** > **Sound** > **Do Not Disturb preferences**.
2. Touch the following options as you need:
 - ▶ Touch **Priority only allows** to set reminders, events, messages, alarms and callers that you specify as exceptions.
 - ▶ Touch **Block visual disturbances** to set Do not disturb mode to block visual disturbances such as notifications. Turn on/off the switch to choose whether to block visual notifications when the screen is on and off.
 - ▶ If you want to allow all notification alerts through most of the time, but want to limit alerts during certain times (like at night or on the weekends), touch **Add more** to set a rule for Do not disturb mode.

Knowing the Basics

Monitoring the Phone Status

The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

	3G connected		No signal
	LTE connected		No signal
	Do not disturb mode on (Priority only)		Airplane mode
	Do not disturb mode on (Total silence)		Bluetooth® on
	Do not disturb mode on (Alarms only)		Connected to a Wi-Fi network
	Battery low		Vibration on

	Battery full		Speaker on
	Battery charging		Phone microphone off
	Alarm set		GPS on
	Wired headset connected		Portable Wi-Fi hotspot on

Managing Notifications

Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

	New SMS/MMS		New Wi-Fi network detected
	New message(s) from the Gmail™ app		Downloading data
	Missed call		Sending data
	Call in progress		USB tethering on

Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up on the screen or touch the **Back** key.

Security

Protecting Your Phone With Screen Locks

1. From the home screen, touch **^ > Settings > Security & location > Screen lock.**
2. Touch **Swipe, Pattern, PIN or Password.**

You can also using the smart lock to protect your phone.

From the home screen, touch **^ > Settings > Security & location > Smart Lock.**



NOTE:

By using smart lock, you need to set the screen lock method first .

Protecting Your Phone With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

Turning On Screen Pinning

1. From the home screen, touch **^ > Settings > Security & location > Screen pinning.**

2. Touch the **On/Off** switch.
3. If you want to ask for the unlock pattern, PIN or password before unpinning the screen, switch on **Ask for PIN / password / unlock pattern before unpinning** when the screen lock has been set.

Pinning a Screen

1. Ensure that screen pinning is turned on.
2. Open the app you want to keep in view.
3. Touch the **Recent Apps** key.
4. If there are many app tabs, swipe up to find  on the front-most tab.
5. Touch .

Unpinning the Screen

To unpin the screen and return to normal use, touch and hold the **Back** key.

If you enabled the **Lock device when unpinning** option, unlock the screen with your pattern, PIN, or password, depending on your screen lock settings.

Connecting to Networks

Your phone supports two nano-SIM cards working at the same time. You can turn on or off the nano-SIM cards, choose the default card for calls and data, set the network mode or other mobile network options for each card.

Connecting to Mobile Data Network

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. From the home screen, touch  > **Settings** > **Network & Internet** > **Mobile network**.
2. Touch **Advanced** > **Access Point Names** >  (on the top of screen).
3. Touch each item to enter the information you get from your service provider.
4. Touch  > **Save** to complete.



NOTE:

To set the APN to default settings, on **APNs** screen touch  > **Reset to default**.

Turning on mobile data switch:

1. From the home screen, touch  > **Settings** > **Network & Internet** > **Dual SIM settings**.
2. Slide on the **Card 1** or **Card 2** switch next to a card.
3. Slide on the **Card 1 mobile data** or **Card 2 mobile data** switch to turn on mobile data.



NOTES:

- You can touch a card name to edit the name or view the number of the card.
- You can use either card for mobile data service, but not both at the same time.

Connecting to Wi-Fi Network

1. From the home screen, touch  > **Settings** > **Network & Internet** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to turn it on.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **CONNECT**.



NOTE:

Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

1. From the home screen, touch  > **Settings > Network & Internet > VPN.**
2. Touch  in the upper-right corner of the screen.
3. Enter information provided by your network administrator and touch **SAVE.**



NOTE:

If you have not set the screen lock method, you should set a lock screen Pattern, PIN or password first .

4. Touch the VPN that you want to connect to on the VPN screen.
5. When prompted, enter any requested credentials, and then touch **CONNECT.**

Connecting to Devices

Bluetooth

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters (32.8 feet). The Bluetooth devices must be paired before the communication is performed.

1. From the home screen, touch  > **Settings** > **Connected devices** > **Bluetooth**.
2. Slide the switch next to **Bluetooth** to turn on or off Bluetooth.



NOTE:

When Bluetooth is on, the  icon appears in the status bar.

Wi-Fi Direct®

Wi-Fi Direct allows Wi-Fi devices to share files and data directly by connecting to each other without the need for wireless access points (hotspots).

To connect via Wi-Fi Direct:

1. From the home screen, touch  > **Settings** > **Network & Internet** > **Wi-Fi**.

2. Slide up the screen and touch **Wi-Fi preferences > Advanced > Wi-Fi Direct**. Your phone will search for other devices enabled with Wi-Fi Direct connections.
3. Touch a device name below **Peer devices** to connect with it.

**NOTE:**

The other device will receive a connection prompt and need to accept the request for connection. Both devices may need to enter a common PIN.

4. Once connected the device is displayed as “Connected” in the **Peer devices** list.

Sharing Your Mobile Data Connection

You can share your phone’s data capabilities through USB tethering or Bluetooth tethering and you can connect to VPN.

Sharing Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.

1. Connect your phone with your computer via USB cable.
2. From the home screen, touch **^ > Settings > Network & Internet > Tethering.**
3. Switch **USB tethering** on. A new network connection will be created on your computer.



NOTE:

To stop sharing your data connection, switch **USB tethering** off or disconnect the USB cable.

Sharing Your Mobile Data Connection via Bluetooth

1. Pair your phone with other device via Bluetooth.
2. From the home screen, touch **^ > Settings > Network & Internet > Tethering.**
3. Switch **Bluetooth tethering** on. Other device is sharing your phone's data connection now.



NOTES:

- After the other device paired with your phone via Bluetooth, the other device should be set to Internet access in Paired devices dialog box.
- To stop sharing your data connection, switch off Bluetooth tethering.

Sharing Mobile Data Through a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. The feature requires a data connection on a mobile network and may result in data charges.



NOTE:

When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's Wi-Fi capability to access the Internet. You still remain connected to the Internet via your mobile data network.

1. From the home screen, touch  > **Settings > Network & Internet > Wi-Fi Hotspot.**
2. Slide the switch to the **On**  position. (If Wi-Fi was on, touch **OK** to turn it off.)
After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).
3. On another device, locate your phone via Wi-Fi and connect with it to start using the phone's mobile data.



NOTE:

To stop sharing your data connection, slide the switch to the **Off**  position.

Phone Calls

Making Calls

Calling from the Phone

1. From the home screen, touch .
2. Touch  and enter the phone number on the dialpad.
3. Touch  to delete incorrect digits or touch an entry in your list of contacts.
4. Touch  /  below the keypad to dial.



NOTE:

To make an international call, touch and hold the 0 key to enter the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.

Calling from Your Contacts

1. From the home screen, touch  > .
2. Touch  next to a contact in the list to place the call.

Calling from Your Call History

1. From the home screen, touch  > .

2. Touch  next to an entry in the list of calls history to call back.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. From the home screen, touch .
2. Touch the conversation and then find the message that contains the phone number you need.
3. Touch  / .

Receiving Calls

Answering a Call

When a call comes in, swipe  up or touch  to answer the call.

Rejecting a Call

When a call comes in, you may not want to answer it, or you may need to stop phone from ringing or vibrating. You can silence or reject an incoming call.

- Press the power key once or the volume key to silence a call.

- Slide  down to the bottom or touch  to reject a call.

Call Options

While you're on a call, the screen shows call options.

- **Mute:** touch  to mute the microphone. Then the caller can't hear you, but you can still hear the caller.
- **Contacts:** touch  to access the contact list.
- **Speaker:** touch  to use speakerphone, so you can talk and listen hands-free.
- **Add:** touch  to make a call.
- **Keypad:** touch  to use keypad to enter information.
- **Hold:** touch  to put a call on hold.

Call Settings

Call settings let you determine speed dial settings, send a message to quick responses, set call blocking, set voicemail, and other settings.

1. From the home screen, touch .
2. Touch  next to the **Search contacts**.
3. Touch **Settings**.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing. You can view and add contact information directly from Phone, email, and message applications.

Creating a Contact

1. From the home screen, touch  > .
2. Touch  to add a contact.
3. Touch  next to **Saving to** to choose where to save the contact. You can save the contact on the phone, email account or a nano-SIM card.
4. Enter the contact name, phone numbers, email addresses, or other information.
5. Touch **SAVE**.

Searching for a Contact

1. From the home screen, touch  > .
2. Touch  at the top of the screen.
3. Input the contact name or any information the contact has to search for it. The contacts matched will be listed.

Messages

You can use Messages to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messages Screen

From the home screen, touch .

The Messages screen opens, where you can create a new message, search for messages, delete messages, or open an ongoing message thread.

- Touch  to write a new text or multimedia message.
- Touch  to search for a message using keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.

Sending a Message

1. On the **Messages** screen, tap .
2. Add recipients in one of the following ways:
 - Enter the phone number or contact name directly in the "To" field. Touch **Send to <number>** or a match from your contacts displayed below the "To" field to add the number or contact as the recipient.

 **NOTE:**

While entering the recipient, touch  and  to switch between the numeric and the full keyboard.

- Touch a contact below the "To" field to whom you want to send the message.



NOTE:

If you add two or more recipients, the message may be sent as a group MMS where everyone can reply and see each other's messages.

3. Tap the **Text message** field and enter the content of your text message.
4. If you want to send a multimedia message, tap  to add stickers, take a photo or shoot a video clip, select other types of file, record an audio file, or add your current location (requires GPS to be turned on) to attach to the message.
5. Tap .



NOTES:

- When you installed two nano-SIM cards, you need to select one to send message.
- You can also include email addresses as recipients for a multimedia message.



NOTE:

Do not add a message subject or any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

Changing Message Settings

On the **Messages** screen, touch  > **Settings** on the top of messages screen to change the messages settings.

Camera

Taking Pictures with Your Camera

1. From the home screen, touch  > **PHOTO**.
2. Aim the camera at the subject and make any necessary adjustment.

 **NOTE:**

You can spread or pinch on the screen to zoom in or out before taking pictures.

3. Lightly touch . The **Volume** key can also be used to take a photo.

Recording Videos with Your Camcorder

1. From the home screen, touch  > **VIDEO**.
2. Aim the camera at the subject.



NOTE:

You can spread or pinch on the screen to zoom in or out before and during recording.

3. Touch  to start recording a video.



NOTE:

While the recording is in progress, touch  to pause the recording, or touch  to save the frame as a separate photo.

4. Touch  to stop recording.

Opening Your Gallery

Touch  on the home screen and select **Gallery** to view **PHOTOS** or **ALBUMS** of your pictures and videos.

Music

Playing Your Music

Play Music supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

1. Touch  on the home screen and select **Play Music**.

2. You can tap  > **Music library** to view all the music and playlists.
3. Tap a song to play it.

Making Voice Memos

Recorder enables you to record voice memos and listen to them whenever you like.

1. Touch  on the home screen and select **Voice Recorder**.
2. Touch  to start recording. During recording, you can do the following:
 - ▶ Touch  /  to pause or continue the recording.
 - ▶ Touch  to add time tags to the recording.
3. Touch **DONE** to stop recording.
4. Edit the file name and touch **SAVE** to save the recording. If you don't want to save the memo after recording it, touch **DELETE** then touch **DELETE** to delete it.

Using Your Google Applications

Signing in to your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the

web. And if you don't have an account, you can easily create one.

Open the Google apps to use Google services. Some apps are put in the **Google** folder on the home screen.



NOTE:

Some contents or Google services may not be available in certain regions.

- **Chrome:** Use the Chrome app to browse the Internet and get your bookmarks, browsing history, and more synced with your Google account.
- **Gmail:** Send and receive emails via your Gmail account or other personal email accounts.
- **Google Go:** Use Google search or get information when you need it with Google Go.
- **Maps Go:** Find your place and find your way in the world.
- **Assistant:** Your Google Assistant knows you by your Google account and can help you with your calendar, commute, and more.
- **Play Music:** Play music on the phone and on your Google account.
- **Play Store:** Buy and download apps, games, and other content from the Google Play Store.
- **Voice Search:** Search for information with your voice.
- **YouTube:** Watch video clips from YouTube.com, or

upload your own and share with the world.

- **Calendar:** Keep track of life's important events with Google Calendar synced across your devices.

Settings

The **Settings** app contains most of the tools for customizing and configuring your phone. Set ringtone, screen brightness, and settings for network, phone, web, music, video, photos and more. Set auto-lock and a passcode for security.

Languages & Input

From the home screen, touch  > **Settings** > **System** > **Languages & input** to configure options related to system language, input methods, text to speech output and so on.

Sound

From the home screen, touch  > **Settings** > **Sound**.

- You can turn volume up and down by dragging the slide in this page.
- **Also vibrate for calls:** Slide the switch to activate or deactivate vibration along ringing.
- **Notification mode:** touch to switch Ring / Vibrate / Mute mode when you receive calls.
- **Do Not Disturb preferences:** In this mode, you can

determine when you don't want to be disturbed.

- **Ringtones:** Your phone comes with a number of ringtones that you can use for incoming calls, messages and notifications.
- **Advanced:** Set other sounds and vibrations.

Navigation Keys

From the home screen, touch  > **Settings** > **Features** > **Navigation keys**. You can exchange the location of the **Recent apps** key and the **Back** key.

Scheduled Power On/Off

From the home screen, touch  > **Settings** > **Features** > **Scheduled power On/Off** to set the day and time when the phone automatically powers on or off. You can also touch the switches on the right to turn the features on or off.

Gestures & Motion

From the home screen, touch  > **Settings** > **Features** > **Gesture & motion**. You can control the phone with special finger gestures or moving the phone in different ways. Touch **Gesture & motion** to enter and touch the switches to enable each function; touch each function to view how to use it or try it out.

Mobile Networks

From the home screen, touch  > **Settings** > **Network & Internet** > **Mobile network** and then adjust any of the following settings.

- **Mobile data:** Access data using mobile network.
- **Data roaming:** Slide the switch on to get data service when roaming.
- **Data usage:** View the mobile data usage.
- **Preferred network type:** touch to select one network you want use.
- **Automatically select network:** Select preferred network automatically.
- **Network:** Display the network you used.
- **Access Point Names:** To connect to the Internet you can use the default APN. And if you want to add a new APN, please contact the service provider to get the necessary information.

Location

From the home screen, touch  > **Settings** > **Security & location** > **Location** to manage location services, which help your phone and apps determine your location. To use location-related applications, such as finding your location on

Google Maps, you must have location services used on your phone.

Slide the switch at the top to turn location services **on** or **off**.

When location is enabled, touch **Mode** to select location sources you want to use.

In the **Location** menu, touch **Google Location History** to configure Google location options.

Accounts

From the home screen, touch **^ > Settings > Accounts** to manage your web accounts and synchronization. Touch **Add account** to sign in to or create accounts on your phone.

Touch an account type to see that type of accounts you have added and adjust the accounts settings.

Accessibility

From the home screen, touch **^ > Settings > Accessibility** to configure accessibility plug-ins and services on your phone, such as using **Color inversion** or **High contrast text** for users with sight problems.

Reset

From the home screen, touch **^ > Settings > System > Reset options** to reset the Wi-Fi, mobile network and Bluetooth settings or the phone to factory reset.

System Update

From the home screen, touch  > **Settings** > **System** > **System Updates** to check, download and install system updates.

Setting the Date and Time

1. From the home screen, touch  > **Settings** > **System** > **Date & time**.
2. Set the date, time, time zone, and time format.
 - To adjust the date and time automatically, touch to turn on **Automatic date & time**.
 - To adjust the date and time manually, touch to turn off **Automatic date & time** and touch **Set date / Set time** to change the date and time.
 - To adjust the time zone automatically, touch to turn on **Automatic time zone**.
 - To adjust the time zone manually, touch to turn off **Automatic time zone** and touch **Select time zone** to set the correct time zone.
 - To adjust the time format, touch to turn on **Use 24-hour format**.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 5 mm away from your body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid extreme temperatures.		Switch off when asked to in hospitals and medical facilities.

	Avoid contacting with liquids. Keep your phone dry.		Switch off when told to in aircrafts and airports.
	Don't take your phone apart.		Switch off when near explosive materials or liquids.
	Only use approved accessories.		For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
	Don't rely on your phone for emergency communications.		

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its

accessories, only authorized personnel can do so.

- Do not expose your phone or its accessories to extreme temperatures, minimum - [10] and maximum + [55] degrees Celsius.
- The phone's normal operating temperature is 0°C ~ 45°C .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.
- Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the nano-SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the head was 0.359 W/kg*, and when tested at the body was 1.736 W/kg* with 5 mm distance.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with EN 50360, EN 50566, EN 62479, EN 62209-1 and EN 62209-2.

CE Caution

Battery Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

USB Port

This product shall only be connected to a USB interface of version USB 2.0.

Proper Use

As described in this guide, your device can be used only in right location. If possible, please do not touch the antenna area on your device.

Do not expose your device to extreme temperatures lower than - 10 °C and higher than + 55 °C.

Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that ZTE BLADE A3 manufactured by ZTE CORPORATION is in compliance with the Directive 2011/65/EU of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

ZTE BLADE A3 manufactured by ZTE CORPORATION meets the requirements of Directive 2011/65/EU.

Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

EU DECLARATION OF CONFORMITY



Hereby, ZTE Corporation declares that the radio equipment type ZTE BLADE A3 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address:

<http://certification.ztedevices.com>