

**ZTE Blade A452**

**LTE/WCDMA/GSM**

**Mobile Phone**

**Quick Start Guide**

**LEGAL INFORMATION**

Copyright © 2015 ZTE CORPORATION.

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

**Product Safety Information**

	Do not use while re-fuelling.
	Do not use hand-held while driving.
	This device may produce a bright or flashing light.
	For body-worn operation maintain a separation of 15 mm.
	Do not dispose of it in a fire.
	Small parts may cause a choking hazard.
	Avoid contact with magnetic media.
	This device may produce a loud sound.
	Avoid Extreme Temperatures.
	Keep away from pacemakers and other personal medical devices.
	Avoid any contact with liquid, keep it dry.
	Switch off when instructed in hospitals and medical facilities.

	Do not attempt to disassemble.
	Switch off when instructed in aircrafts and airports.
	Do not rely on this device for emergency communications.
	Switch off in explosive environments.
	Only use approved accessories.

**Getting to Know Your Phone**

The image contains two diagrams of the ZTE Blade A452 mobile phone. The left diagram shows the front view with labels: Indicator light, Proximity & Light Sensor, Earpiece, Front Camera, Touch Screen, Back Key, Home Key, Menu Key, Volume Key, and Power Key. The right diagram shows the back view with labels: Back Camera, Headset Jack, Flash, Battery Cover, Speaker, Charging/micro-USB Jack, and Main Microphone.

**Before Getting Started**

1. Remove the back cover.

<div data-bbox="176 1095 493 1670"><p>2. Install the SIM card.</p><p>3. Install the microSD card.</p></div>	<div data-bbox="617 1095 955 1798"><p><b>Charging the Battery</b></p><p>When you first get your new phone you'll need to charge the battery.</p><p>1. Connect the adapter to the charger jack.</p><p>2. Connect the charger to a standard AC wall outlet.</p></div>	<div data-bbox="1064 1095 1405 1808"><p>3. Disconnect the charger when the battery is fully charged.</p><p><b>Powering On/Off</b></p><p>Make sure the SIM card is in your phone and the battery is charged.</p><ul style="list-style-type: none"><li>Press and hold the <b>Power Key</b> to turn on your phone.</li><li>To turn it off, press and hold the <b>Power Key</b> to open the options menu. Touch <b>Power off</b> and then touch <b>OK</b>.</li></ul><p><b>Locking/Unlocking the Screen and Keys</b></p><p>When your phone is not in use for some time, it automatically locks the screen and the keys to save power and prevent accidental operations. You can also lock the screen and keys manually.</p><p>To lock the screen and keys, press the <b>Power Key</b>.</p><p><b>NOTE:</b> You can set how long the phone should wait before it automatically locks the screen and keys in <b>Sleep</b> of the <b>Display</b> settings.</p><p>To unlock the screen and keys:</p></div>	<div data-bbox="1505 1095 1846 1798"><p>1. Press the <b>Power Key</b> to turn the screen on.</p><p>2. Touch and hold the screen.</p><p><b>NOTE:</b> If you have set an unlock pattern, PIN or password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock.</p><p><b>Using the Touch Screen</b></p><p>Your phone's touch screen lets you control actions through a variety of touch gestures.</p><ul style="list-style-type: none"><li><b>Touch</b> When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with your finger.</li><li><b>Touch and Hold</b> To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.</li><li><b>Swipe or Slide</b> To swipe or slide means to quickly</li></ul></div>	<div data-bbox="1949 1095 2304 1596"><p>drag your finger vertically or horizontally across the screen.</p><ul style="list-style-type: none"><li><b>Drag</b> To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.</li><li><b>Pinch</b> In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).</li><li><b>Rotate the screen</b> For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.</li></ul></div>	<div data-bbox="2131 1702 2304 1766"><p>CE 0700</p></div>
7	8	9	10	11	