

# USER GUIDE



**SONIM XP5560**

**BOLT IS**

**(ECOM EX-HANDY 08/**

**EX-HSPA 08)**

**English**

**sonim®**  
**BUILT FOR LIFE™**

Copyright © 2013 Sonim Technologies, Inc.

**SONIM** and the Sonim logo are trademarks of Sonim Technologies, Inc. Other company and product names may be trademarks or registered trade-marks of the respective owners with whom they are associated.

### Disposal of Old Electrical and Electronic Equipment



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end-of-life.

### Disposal of Battery



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

### Guideline for Headphone and Earphone



To prevent possible hearing damage, please do not listen at high volume levels for long periods.

**General Information ————— 7**

Phone Models Covered  
 Network Services  
 Sonim Support Information  
 Use the Guide Effectively

**Your Safety Guidelines ————— 9**

Battery Performance  
 Battery Replacement  
 Avoid Short Circuit  
 Avoid High Temperatures  
 Battery Disposal  
 Personal Medical Devices  
 Child Safety  
 Emergency Calls  
 SAR Information

**Getting Started with XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) ————— 14**

Battery Usage  
 Inserting the Battery (Zone 1 models)  
 Inserting the Battery (Zone 2 models)  
 Removing the Battery (Zone 1 models)  
 Removing the Battery (Zone 2 models)  
 Charging the Battery  
 Set Battery Alert  
 Your SIM Card  
 Inserting the SIM Card (Zone 1 models)  
 Removing the SIM Card (Zone 1 models)  
 Inserting the SIM Card (Zone 2 models)  
 Removing the SIM Card (Zone 2 models)  
 Switching On  
 Home Screen  
 Key Shortcuts in Home Screen  
 Keypad Functions

**About Near Field Communication ————— 27**

Near Field Communication

**Your SONIM XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) ————— 28**

Main Menu  
 Main Menu Icons - without camera  
 Main Menu Icons - with camera  
 Home Screen Indicators  
 Key Operations without Your SIM Card

**Lone Worker Monitoring ————— 33**

Lone Worker Monitoring

**Managing Calls ————— 34**

Dial a Number  
 Dial an International Number  
 Dial a Number via Contacts  
 Dial a Number via the Call History  
 Making a PTT Call from Contacts  
 Managing Call History  
 Call Timers  
 Call Settings  
 Auto Answer  
 Any key Answer  
 Call Waiting  
 Caller ID  
 Call Forwarding  
 Fixed Dial  
 Advanced Settings  
 Receive a Call  
 Record a Call  
 Call Restrictions

**Managing Phone Settings ————— 38**

Time and Date Settings  
 Schedule Power On/Off Settings  
 Language Settings  
 Display Settings  
 Customizing Dedicated Keys  
 Managing Speed Dial Numbers

Power Saving Settings	
Auto Keypad Lock	
Firmware Details	
Network Selection	
Data Connection	
Data Account	
<b>Managing Network Settings</b>	<b>41</b>
<b>Managing Security Settings</b>	<b>42</b>
Restore Factory Settings	
<b>Managing Connectivity</b>	<b>44</b>
Sending Data via Bluetooth	
Receiving Data via Bluetooth	
Java Settings	
Data Roaming Settings	
USB Function	
<b>Managing Your Files</b>	<b>48</b>
<b>Managing Contacts</b>	<b>50</b>
Add a New Contact	
View the Contact Details	
Sending a Message from Contacts	
Dialing a Number from Contacts	
Edit the Contact Details	
Delete Contact	
Copy Numbers between Phone and SIM	
Move Numbers between Phone and SIM	
Sending Contact	
Selecting Multiple Contacts	
Caller Groups	
Phonebook Settings	
Searching Contacts	
<b>Managing Messages</b>	<b>55</b>
Write Message	
Manage Your Messages	
Drafts	
Outbox	
Sent Messages	
Archive	
Configuring Email Accounts	
Write Email	
Email Inbox	
Email Outbox	
Email Sent	
Email Draft	
Broadcast Messages	
Templates	
Message Settings	
MMS Settings	
<b>Managing Profiles</b>	<b>64</b>
Sound Settings	
<b>Tools</b>	<b>66</b>
Calendar	
Alarm	
Calculator	
Unit Converter	
World Clock	
Sound Recorder	
Notes	
Stopwatch	
Text Reader	
SIM Services	
<b>Applications</b>	<b>69</b>
Data Account and Java Settings	
Installing Java Application from WAP	
Installing Java Application from Memory Card	
<b>WAP Browser</b>	<b>70</b>
<b>Managing Push to talk Services</b>	<b>71</b>
Push to talk (Optional)	
Activating the PTT service	

Login and Logout of the PTT Service

PTT Home Screen

A corporate only subscriber will be able to:

PTT Related Key Functions

PTT Display Icons

Manage PTT Settings

Managing PTT Calls

Direct PTT Calls

Calls from PTT History Tab

Calls from PTT Contacts Tab

Calls from PTT Group Tab

Sending Alerts

Block Incoming PTT Calls

Manage PTT Contact List

Manage PTT Groups

Manage PTT Favorite Contacts

Manage PTT Favorite Groups

Supervisory Override

Accessing Other Phone Features during Active PTT

Call

Vibration of Incoming voice calls

## **Managing Multimedia Files ————— 83**

Camera (Optional)

Camera Options

Media Player

## **Hardcoded Shortcuts ————— 86**

## **Using Memory Card ————— 87**

Inserting Memory card into the Phone

## **End User License Agreement ————— 88**

Our Warranty

Comprehensive 3 Year Warranty

Our Warranty

What We Will Do

Phone Care

Conditions

## **FCC Statement ————— 91**

FCC Statement

## **Index ————— 93**



# COMPREHENSIVE 3- YEAR WARRANTY

6

- Please register your phone within 30 days at [www.sonimtech.com/register](http://www.sonimtech.com/register), to receive product information and updates. For more information related to the warranty, please refer to “Our Warranty” on page 88.

Congratulations on the purchase of a SONIM XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) mobile phone. This phone is a GSM/GPRS/EDGE/UMTS enabled handset with quad-band capabilities and has an intuitive, feature-rich user interface, which allows you to make the best use of the offered functions.

## Phone Models Covered

This user guide only covers SONIM XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone models:

- Ex-Handy 08 .0 –A, Ex-Handy 08 .1 –A, Ex-Handy 08 .2 –A, Ex-Handy 08 .3 –A, Ex-Handy 08 .4 –A, Ex-Handy 08 .5 –A, Ex-Handy 08 .4 ATT, Ex-Handy 08 .5 ATT, Ex-Handy 08 .0 –E, Ex-Handy 08 .1 –E, Ex-Handy 08 .2 –E, Ex-Handy 08 .3 –E, Ex-Handy 08 .4 –E, the Ex-Handy 08 .5 –E ( **NFC Model name:** Sonim XPand NFC **FCC ID:** WYPB01V008AA );
- Ex-HSPA 08 .0 –A, Ex-HSPA 08 .1 –A, Ex-HSPA 08 .2 –A, Ex-HSPA 08 .3 –A, Ex-HSPA 08 .4 –A, Ex-HSPA 08 .5 –A and Ex-HSPA 08 .0 –E, Ex-HSPA 08 .1 –E, Ex-HSPA 08 .2 –E, Ex-HSPA 08 .3 –E, Ex-HSPA 08 .4 –E, and the Ex-HSPA 08 .5 –E ( **NFC Model name:** Sonim XPand NFC **FCC ID:** WYPB01V008AA ).

The model name can be read on the phone label under the battery.

This phone utilizes the following 2G RF bands: GSM 850, GSM 900, DCS 1800, PCS 1900 bands and supports the UMTS 850, 1900 and 2100 bands or UMTS 900, 1700 and 2100 bands.

## Network Services

These are additional services that you can avail through your network service provider. To make the best of these services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Sonim Support Information

For additional product and support information, visit [www.sonimtech.com](http://www.sonimtech.com).

## Use the Guide Effectively

Familiarize yourself with the terminology and symbols used in the guide to help you use your phone effectively.

### HOME SCREEN

This is the screen displayed when the phone is in idle condition.

### PRESS

Means to press and release a key immediately. For example, Press 2 means that you press the key on the keypad that is labelled with the numeral 2 and the alphabets “ABC”.

**SELECT**

Means to either press the Left or Right Selection Key to apply the command indicated at the bottom of the screen. The Center navigation key can also be used to select options. For example, if this guide says **Select Menu > Messages > Write message**, you must press the Left Selection Key to select Menu, scroll to Messages and press the Left Selection Key, scroll to Write message and press the Left Selection Key. To return to the previous screen, press the Right Selection Key.

**PRESS & HOLD**

Means to press and hold a key for 2 seconds before releasing the key. This action is typically used when trying to switch on/off the phone or when using shortcut keys to access specific functions. For example: press and hold 1 to access voicemail.

**MENU OPTIONS**

Press **Options** to display menu options on the screen. The selection keys are used to accomplish the indicated option.

**SELECT MENU**

Means to press the **Left Selection Key** to select the **Menu** option or press the **Menu** key (centre) for the same result.

**A MENU ITEM SUFFIXED WITH THREE DOTS (...)**

Means more options are available but only one has been mentioned in the guide.



Signifies a Note.

**Options Commonly Used across Menu Items**

The following are common actions used across various menu items:

**BACK**

Displays the previous screen. Use the Right Selection Key to perform this function.

**CLEAR**

Deletes data character by character. Use the Right Selection Key to perform this function.

**OK**

Confirms an action. Use the Left Selection Key or the **Menu** key to perform this function.

**CLEAR KEY**

Use this key to delete while editing a message or delete a selected item in a list.

**BACK KEY**

Use this key to display the previous screen.



Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.



Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.



Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.



Do not expose the battery to high temperatures (in excess of 60°C).



Adhere to road safety laws. Do not hold/use a phone while you are driving; find a safe place to stop first. Use hands-free microphone while you are driving.



Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



Use only SONIM XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) approved charging equipment to charge your phone and avoid damage to your phone.



The symbol of the crossed-out wheeled bin indicates that this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end-of-life.





Ensure that only qualified personnel install or repair your phone.



The Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) is water-proof and can be submerged to 2 metres for 1 hour.

- Ensure to properly close the rubber cover of the charging connector and audio connector, to avoid deposits of water drops on these connectors, when the phone is immersed in water.
- Water droplets may condense under the display cover if the phone is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets will disappear at room temperature.

The Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or unbreakable if subjected to overwhelming impact. For best results and long product life, one should protect the Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) from salt water, dust and strong impacts.

## Battery Performance

A rechargeable battery powers your device. Use the battery only for its intended purpose. Never use any charger or battery that is damaged. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made. The full performance of a new battery is achieved only after three to four complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. Unplug the charger from the electrical plug and the device when not in use. Ensure that you do not leave the fully charged battery connected to the charger for longer time. If left unused, a fully charged battery will lose its charge over time.



There is a risk of explosion while charging if the battery has been replaced by an incorrect type.

## Battery Replacement

When the talk and standby times are noticeably shorter than normal, replace the battery with an original Sonim battery. If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to begin charging the battery.

## Avoid Short Circuit

Do not short-circuit the battery. An accidental short-circuit can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for

example, when you carry a spare battery in your pocket or purse. A short-circuit at the terminals may damage the battery or the connecting object.

## Avoid High Temperatures

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. For the best results, try to keep the battery between -20°C and +55°C (-4°F and 131°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

## Battery Disposal

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations and recycle when possible. Do not dispose as household waste. Do not dismantle, open or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of leak or a hazard seek medical help immediately.

## Personal Medical Devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, for example in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone.

Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter when required, especially when posted in hospitals and aeroplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and adversely affect their operation.

### Child Safety

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be detached and create a choking hazard.

### Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

### SAR Information

**The Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) has been certified in compliance with the Government's requirements for exposure to Radio Waves.**

When communicating over the wireless network, the mobile phone emits via the radio frequency waves low

levels of radio energy. The Specific Absorption Rate, or SAR, is the amount of RF energy absorbed by the body while using the phone and is expressed in watts/kilogram (W/kg).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, for example, ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.). These guidelines establish permitted levels of radio wave exposure for the general population.

Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

**SAR Data Information for residents in countries that have adopted the SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP). For example, European Union, Japan, Brazil and New Zealand.**

The limit recommended by ICNIRP is 2 W/kg averaged over ten (10) gram of tissue.

The highest SAR value for the Sonim XP5560 BOLT IS (Ex-Handy 08 .0 –E, Ex-Handy 08 .1 –E, Ex-Handy 08 .2 –E, Ex-Handy 08 .3 –E, Ex-Handy 08 .4 –E, and the Ex-Handy 08 .5 –E, Ex-HSPA 08 .0 –E, Ex-HSPA 08 .1 –E, Ex-HSPA 08 .2 –E, Ex-HSPA 08 .3 –E, Ex-HSPA 08 .4 –E, and the Ex-HSPA 08 .5 –E ) phones when tested by Sonim for use:

- By the ear is 0.908 W/kg (10g).
- Worn on the body is 0.907 W/kg (10 g) provided that the phone is used with a non-metallic accessory with the handset at least 1.5 cm from the body, or

with the original Sonim accessory intended for this phone and worn on the body.

### **SAR Data Information for residents in the United States and Canada**

In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, by the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for the Sonim XP5560 BOLT IS (Ex-Handy 08 .0 –A, Ex-Handy 08 .1 –A, Ex-Handy 08 .2 –A, Ex-Handy 08 .3 –A, Ex-Handy 08 .4 –A, Ex-Handy 08 .5 –A, Ex-Handy 08 .4 ATT, Ex-Handy 08 .5 ATT, Ex-HSPA 08 .0 –A, Ex-HSPA 08 .1 –A, Ex-HSPA 08 .2 –A, Ex-HSPA 08 .3 –A, Ex-HSPA 08 .4 –A, Ex-HSPA 08 .5 –A) phones when tested by Sonim for use:

- By the ear is 1.12 W/kg (1 g).
- Worn on the body is 1.10 W/kg (1 g).

For body-worn operation, this phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body, or with the original Sonim accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

This section provides information on using your Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone.

The list of items in the Sonim XP5560 phone box are:

- Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone
- Re-chargeable Battery
- Screw driver
- Safety box or data Cable
- Wall charger
- Belt clip
- Mini CD

### Battery Usage

- Use only a Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) certified battery that is designed for this phone model.
- The use of other batteries may void the warranty terms of your phone and cause damage.
- It is recommended to protect the battery from extreme temperature environments and moisture.
- Please keep the battery out of the reach of children.

### WARNING

**ONLY** use the battery model **Ex-BPH 08\*\*** or **Ex-BPH 28** and the **Safety Box (USB Cable)** model **SBH 07** with your **Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08)**.

**\*\* is replaced by letters for the differentiation of permissible versions of the battery module.**

### Inserting the Battery (Zone 1 models)

To Insert the IS battery, rotate both the IS battery screws in a clockwise direction. You can use the screwdriver provided to tighten the screws. Ensure not to overtighten the screws.

### Inserting the Battery (Zone 2 models)

# 1

#### Unscrew Cover

To open the battery cover, rotate both the battery cover screws in a counter clockwise direction (as shown in the figure). Sometimes, the battery cover may be tight and some extra effort is required to open it. You can use the screwdriver provided to open the screws.



14

# 2

#### Lift Cover

Lift the back cover to reveal the battery slot.



### 3 Insert Battery

Insert the battery and flush into the battery slot such that the three metallic contacts at the top of the battery are aligned with the metallic contacts within the battery compartment.



step 4 of “Inserting the Battery (Zone 1 models)” on page 14 and “Inserting the Battery (Zone 2 models)” on page 14. to close the cover.

#### WARNING

**DO NOT** remove or install your battery in your Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) in a hazardous environment.

#### Charging the Battery

The battery delivered with your mobile phone is not fully charged. We recommend that you charge your mobile for 5 hours before you use your mobile phone for the first time.

#### WARNING

**DO NOT** charge your Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) inside hazardous areas and/or with anything other than the provided Safety Box “SBH 07” (USB Cable)

**Charging your Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) with a different cable/ charger and/or in a hazardous environment will compromise the Intrinsically Safe nature of the device.**



There is a risk of explosion while charging if the battery has been replaced by an incorrect type.

### 4 Close Cover

Close the battery cover. Rotate the battery cover screws in clockwise direction. You can use the screwdriver provided to tighten the screws. Ensure not to overtighten the screws.

#### Removing the Battery (Zone 1 models)

To open the IS battery, rotate both the IS battery screws in a counter clockwise direction. Sometimes, the battery cover may be tight and some extra effort is required to open it. You can use the screwdriver provided to open the screws.

#### Removing the Battery (Zone 2 models)

Follow steps 1 and 2 of “Inserting the Battery (Zone 1 models)” on page 14 and “Inserting the Battery (Zone 2 models)” on page 14..

To remove the battery, lift the cover behind the phone and raise the upper end of the battery from the slot. Follow



If the battery is completely out of charge, it can take several minutes for the charging icon to appear when the charger is connected.

## 1 Insert Charger

Insert the charger plug into a power outlet

## 2 Connect to Phone

The charger port is located on the left side of the phone. To access the charger port, lift the cover with the USB sign. Insert the 3.5 mm jack/connector of the charger to the port. You can also use the standard USB cable and adaptor to charge the phone battery. Insert the adaptor to the charger port of the phone. Connect one end of the standard USB cable to the adaptor and the other end of the USB cable to the PC.

## 3 Charging Animation/Icon

If the battery is being charged when the phone is switched off, only the battery icon is displayed. If the battery is being charged while the phone is switched on, the bars in the battery charge icon on the home screen shows animation indicating that the battery is being charged. After the phone is fully charged the battery bars on the display stop scrolling. You can disconnect the charger from the phone.



### Set Battery Alert

When you set the battery alert, every time the battery charge is low you hear an alarm. To set the battery alert select **Menu > Settings > Profiles > any profile** (currently activate in the phone) **> Options > Customize > Extra tone > Warning**. Select to activate the alert.

### Your SIM Card

Purchase a SIM card from a mobile operator. The SIM card associates your network services (for example, phone number, data services, and so on) with your phone.



## Inserting the SIM Card (Zone 1 models)

---

### 1 Switch Off Phone

Ensure that the phone is switched off.

---

### 2 Remove Battery

To open the IS battery ,rotate both the IS battery screws in counter clockwise direction. Sometimes, the battery cover may be tight and some extra effort is required to open it. You can use the screwdriver provided to open the screws.

---

### 3 Place SIM Card

Place the SIM card by pushing it upward in the designated slot located under the battery.

---

### 4 Insert Battery

To Insert the IS battery, rotate both the IS battery screws in clockwise direction.You can use the screwdriver provided to tighten the screws. Ensure not to overtighten the screws.

---

## Removing the SIM Card (Zone 1 models)

---

### 1 Switch Off Phone

Ensure the phone is switched off.

---

### 2 Remove Battery

To open the IS battery ,rotate both the IS battery screws in a counter clockwise direction. Sometimes, the battery cover may be tight and some extra effort is required to open it. You can use the screwdriver provided to open the screws.

---

### 3 Remove SIM Card

Remove the SIM card by pushing it downward from the slot.

---

### 4 Insert Battery

To Insert the IS battery, rotate both the IS battery screws in an clockwise direction.You can use the screwdriver provided to tighten the screws. Ensure not to overtighten the screws.

---

## Inserting the SIM Card (Zone 2 models)

### 1 Switch Off Phone

Ensure that the phone is switched off.

### 2 Lift Cover

Lift the battery cover and remove the battery. For instructions refer “Inserting the Battery (Zone 1 models)” on page 14 and “Inserting the Battery (Zone 2 models)” on page 14..

### 3 Place SIM Card

Place the SIM card by pushing it upward in the designated slot located under the battery.



### 4 Lock Cover

Reinsert the battery and the cover. Turn the battery cover screws clockwise to lock the battery cover.

## Removing the SIM Card (Zone 2 models)

### 1 Switch Off Phone

Ensure the phone is switched off.

### 2 Lift Cover

Lift the battery cover and remove the battery. For instructions refer “Inserting the Battery (Zone 1 models)” on page 14 and “Inserting the Battery (Zone 2 models)” on page 14..

### 3 Remove SIM Card

Remove the SIM card by pushing it downward from the slot.

### 4 Lock Cover

Reinsert the battery and the cover.

# Parts of the SONIM XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08)

## Phone

The Sonim XP5560 BOLT IS keypad has 11 function keys and 12 alphanumeric keys. The left side of the phone has one key and the right side of the phone has three keys.



# Parts of the SONIM XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) Phone



\* Loneworker is enabled in some models of XP5560 BOLT IS.

If this feature is not present, short press the red button to activate camera (optional) and long press will activate torch.

# SONIM XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) Keypad

The following figure represents different keys in the phone key pad.

\* Loneworker is enabled in some models of XP5560 BOLT IS.

If this feature is not present, short press the red button to activate camera (optional) and long press will activate torch.



## Switching On

Press and Hold the **Power ON/OFF** key for 2 seconds to Power ON the phone.

When the phone is switched on, it tries to register with the network. After successful registration, the name of the service provider is displayed.

## Home Screen

Details such as the name of the service provider, date and time, battery charge status, and data service connectivity are displayed when the phone is in standby mode. Other optional indicators alarm and call forward will be displayed, if the feature is activated.



1. **Display icons**
2. **Battery charge indicator**
3. **Service provider**
4. **RSK command**
5. **LSK command**
6. **Date and day**
7. **Time**
8. **Network type and Signal strength indicator**

## Key Shortcuts in Home Screen

The following shortcuts can be accessed from the home screen.

Press	To Access
Menu Key	Main menu
Left Selection Key	Main menu
Right Selection Key	Contacts
Call/Accept/Send Key	All calls list
Up Arrow	Calendar
Down Arrow	Phonebook
Left Arrow	My files
Right Arrow	Write messages








The four functions that are performed using the arrow keys are set as factory defaults, To change these functions, select **Menu > Settings > Phone settings > Dedicated key**. Select the required arrow key and select **OK**.






You cannot use the arrow keys when a notification for example: 1 missed call, is displayed on the home screen.










## Keypad Functions





The following table displays the various keys and the corresponding functions they perform:

Keypad key	Operations
 <b>POWER ON/OFF/END CALL</b>	<ul style="list-style-type: none"> <li>• <b>Press</b> to end a call.</li> <li>• <b>Press and hold</b> to switch on or switch off the mobile phone.</li> <li>• <b>Press</b> when in Menu or Edit modes to return to Standby mode.</li> <li>• <b>Press</b> to reject an incoming call.</li> </ul>
 <b>CALL/ACCEPT/SEND</b>	<ul style="list-style-type: none"> <li>• <b>Press</b> to answer an incoming call.</li> <li>• After entering a phone number, <b>press</b> to make a call.</li> <li>• <b>Press</b> while in Standby mode to access All calls list.</li> </ul>
 <b>LSK/RSK</b>	<p>These keys are present immediately below the display screen.</p> <ul style="list-style-type: none"> <li>• <b>Press</b> the Left Selection Key (LSK) or Right Selection Key (RSK) to select the function indicated at the bottom of the screen. The indicated functions can vary according to different program definitions.</li> <li>• <b>Press LSK</b> to access the Menu in standby mode.</li> <li>• <b>Press RSK</b> to access the Contacts in standby mode.</li> </ul>
 <b>CLEAR (C)</b>	<p>This key is present below the LSK key.</p> <ul style="list-style-type: none"> <li>• Press this key to delete the text, while editing a message</li> <li>• Long press this key to delete the complete message.</li> <li>• Press this key to delete a selected item in a list.</li> </ul>
 <b>BACK</b>	<p>This key is present below the RSK key. Press this key to display the previous screen.</p>

Keypad key	Operations
 <b>MENU KEY (CENTRE)</b>	<p>Present at the centre of the navigation keys.</p> <ul style="list-style-type: none"> <li>• <b>Press</b> while in standby mode to enter the main menu.</li> <li>• <b>Press</b> when required to be used as a toggle key to select or clear a checkbox.</li> <li>• <b>Press</b> to perform similar tasks as the Left Selection Key.</li> <li>• <b>Press</b> to select the OK command.</li> <li>• <b>Press</b> to view missed call and new message notifications.</li> </ul>
 <b>NAVIGATION KEYS</b>	<p>The Left and Right Selection Keys and Power On/Off keys surround this key group. There are arrows on the key that denote the direction to scroll for information displayed on the screen.</p> <p><b>UP/DOWN</b></p> <ul style="list-style-type: none"> <li>• <b>Press</b> to move the cursor up or down in the text editor.</li> <li>• <b>Press</b> to view the pages in the text editor.</li> <li>• <b>Press</b> to browse menus/lists at the same level.</li> <li>• <b>Press</b> to browse the main menu.</li> <li>• <b>Press</b> to access features assigned as shortcuts.</li> </ul> <p><b>LEFT/RIGHT</b></p> <ul style="list-style-type: none"> <li>• <b>Press</b> to navigate between tabs.</li> <li>• <b>Press</b> to move the cursor left or right in the text editor.</li> <li>• <b>Press</b> to browse the main menu.</li> <li>• <b>Press</b> to view the previous or next picture when previewing pictures.</li> <li>• <b>Press</b> to access features assigned as shortcuts.</li> </ul>
<b>ALPHA-NUMERIC KEYS</b>	<ul style="list-style-type: none"> <li>• <b>Press</b> the required keys to enter the desired phone number and press  to make a call. Alternatively, enter the number and select <b>Options &gt; Call</b> to dial the number.</li> <li>• <b>Press</b> and hold any numeric key to access the shortcut /speed dial number assigned, while in standby mode.</li> <li>• Enter text while in the text editor.</li> </ul>



	<ul style="list-style-type: none"> <li>• <b>Press</b> and hold in standby mode to access your Voice mail.</li> <li>• When entering text, press to enter space.</li> </ul>
	<b>Press and hold</b> to set access Tone settings.
	<b>Press and hold</b> to access the Profiles.
	<b>Press and hold</b> to set the alarm.
	<b>Press and hold</b> to access the torch.
	<b>Press and hold</b> to access the Bluetooth.
	<b>Press and hold</b> to access the Browser.
	<b>Press and hold</b> to access shortcuts.
	<b>Press and hold</b> to access language list.

	The above preset functions of number keys (from 2 to 9) can also be changed to the speed dial functionality. For more information refer, <b>“Managing Speed Dial Numbers”</b> on page 39 .
	<ul style="list-style-type: none"> <li>• <b>Press and hold</b> to display ‘+’ used for dialing an international number, while in standby mode.</li> <li>• Press 0 in editor screen to get “.” in T9 or normal mode.</li> <li>• Press and Hold in text editor screen to get “0” in T9 and normal mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Press and hold</b> to lock the keypad.</li> <li>• With backlight on, <b>press</b> LSK followed by this key to unlock the keypad.</li> <li>• When entering text, <b>press</b> to display special characters, for example, period, comma, and so on. <b>Press</b> and hold to display the text input languages.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Press and hold</b> in standby mode to switch between Meeting on/off modes.</li> <li>• When entering text, press to switch between lower case, upper case or numeric.</li> <li>• Press and hold to enable/disable T9 mode.</li> </ul>

## Near Field Communication

Zone 2 models of Sonim XP5560 BOLT IS (ECOM Ex-HSPA 08) is equipped with the NFC feature. The NFC chipset is fixed to the battery cover. The NFC antenna connected to the core of the phone is located in the battery cover area where the NFC logo is printed.



Sonim XP5560 BOLT IS (ECOM Ex-HSPA 08) is not suitable for payment solutions.



The phone must always be powered on after firmly closing the battery cover in order to ensure proper functioning of the NFC.

## NFC Specifications

In NFC active or reader mode, Sonim XP5560 BOLT IS (ECOM Ex-HSPA 08) can detect the following card types:

- Mifare
- Felica
- Any ISO-14444-3 compliant tag types

The reading distance ranges between 0-3 cms. When in use the phone should be positioned within this range, for the NFC application to function properly.



It is recommended to perform interoperability tests before any deployments.

Sonim XP5560 BOLT IS (ECOM Ex-HSPA 08) supports Java based applications using Contactless Communication API 1.0 (JSR 257). Install your own NFC based applications to make use of the NFC functionality.

This model is a bar type phone with a single LCD screen. The graphic field of the screen is 240 (w) and 320 (h) pixels. The TFT technology used displays 262K colours.


## Main Menu

To access the phone menu, press the **Menu** key. The main menu which comprises the following 12 items appears.

## Main Menu Icons - without camera



## Main Menu Icons - with camera

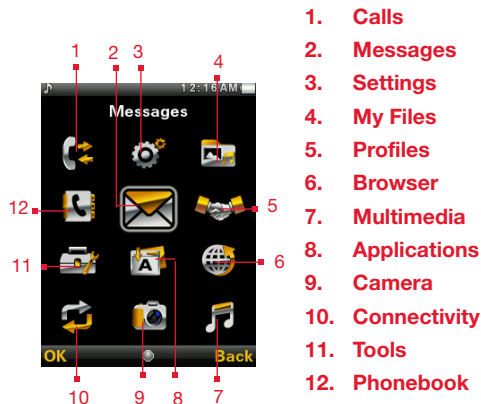

## Home Screen Indicators








The home screen indicators are visible when the phone is in standby mode. Some icons indicate the status of certain functions of the phone, for example, the battery charge indicator, the network status indicator, the date and time etc. Some icons are displayed only if the specific service is activated.





















The following table describes the display indicators on the top bar of the home screen in the Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone. These icons depend on the selected theme.





Some models of XP5560 BOLT IS (ECOM Ex-Handy 08

or Ex-HSPA 08) have PTT. For information related to PTT icons, refer [“PTT Display Icons” on page 73](#).




Display Indicators	Name	Description
 	<b>Battery</b>	Full green indicator represents maximum battery charge. Green indicator with empty space indicates decline in battery charge.
	<b>Roaming</b>	This icon is only displayed when your phone is registered with a non home network.
 	<b>GPRS</b>	G icon indicates that the phone is attached to 2G network and GPRS feature is available in the phone. Boxed G icon indicates that the phone is in active data connection and GPRS feature is available in the phone.
 	<b>EDGE</b>	E icon indicates that the phone is attached to 2G network and EDGE feature is available in the phone. Boxed E icon indicates that the phone is in active data connection and EDGE feature is available in the phone.

	<b>3G</b>	3G icon indicates that the phone is attached to 3G packet network
		Boxed 3G icon indicates that the phone is in active data connection in 3G packet network.
	<b>HSPA</b>	H icon indicates that the phone is attached to HSPA packet network
		Boxed H icon indicates that the phone is in active data connection in HSPA packet network.
	<b>Alarm Clock</b>	Indicates that the alarm clock has been set.
	<b>Stop watch</b>	Indicates that the Stopwatch is running.
	<b>Call Forward</b>	Indicates that the call forward function is enabled.
	<b>Unread Message</b>	Indicates that there are unread messages in the inbox.
	<b>Unread WAP Push message</b>	Indicates that there is a unread WAP Push message.

	<b>Unread MMS</b>	Indicates that there are unread MMS messages in the inbox.
	<b>Voice Message</b>	Indicates a new voice message.
	<b>Unread e-mail Message</b>	Indicates a new e-mail message.
	<b>Keypad Lock</b>	Indicates that the keypad is locked.
	<b>Bluetooth Connectivity</b>	Indicates that bluetooth is active.
	<b>Bluetooth CarKit/ Headset Connectivity</b>	Indicates that your device is paired and connected to a carkit or headset with bluetooth connectivity.
	<b>Wired Headset</b>	Indicates that a wired headset is connected.
	<b>Both Vibration and Ringing</b>	Indicates that the phone performs both vibration and ringing.
	<b>SD Card</b>	Indicates that SD card is mounted on the phone.




	<b>2G</b>	Indicates the signal strength when registered to 2G network.
	<b>HSPA</b>	Indicates the signal strength when registered to HSPA network.
	<b>3G</b>	Indicates the signal strength when registered to 3G network.
	<b>JAVA</b>	Indicates that the Java application is active and is available in the background.

The following table describes the display indicators on the call screen in the Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone:


Display Indicators	Name	Description
	<b>Active Call</b>	Indicates an active call.
	<b>Call on Hold</b>	Indicates a call on hold.
	<b>Call on Mute</b>	Indicates a call on mute.







	<b>Handsfree Call</b>	Indicates a handsfree call.
--	-----------------------	-----------------------------

The following table describes the display indicators on the home screen in the Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone:

Display Indicators	Name	Description
	<b>Incoming Call</b>	Indicates an incoming call.
	<b>Outgoing Call</b>	Indicates an outgoing call.
	<b>Missed Call</b>	Indicates a missed call.

If Loneworker application is enabled on your phone, an icon indicating the mode of the Lone Worker application will be displayed.

Display Indicators	Name	Description
	<b>Simple</b>	Indicates simple mode.

	<b>Tracking</b>	Indicates tracking mode.
	<b>Man down</b>	Indicates man down mode.
	<b>Alarm</b>	Indicates alarm mode.
	<b>GPS-Red</b>	GPS is ON but the location information is still not available. This icon will be displayed only if Loneworker is active.
	<b>GPS-Amber</b>	GPS is ON with limited satellite signal and the location information might be inaccurate. This icon will be displayed only if Loneworker is active.
	<b>GPS-Green</b>	GPS is ON and the location information is accurate. This icon will be displayed only if Loneworker is active.

The following menus can be accessed on the phone without the SIM card:

- Settings
  - Phone settings
  - AGPS settings
  - Security settings
  - Connectivity - Bluetooth
  - Restore factory settings
- Phonebook
- My files
- Tools
- Applications
- Multimedia
- Profiles
- Calendar
- Camera (some models)



## Lone Worker Monitoring

Here are some tips to get the best performance of the Lone Worker Monitoring feature.



Lone Worker Monitoring feature needs service subscription to work.

1. Please watch out for the GPS icon. If it is amber, the accuracy is poor. If it is green, the accuracy is OK. If it is red, it has not connected to the satellites. It may take more time to connect to the satellites if you are in non-ideal conditions like moving in a car or inside buildings. Always make sure that phone has maximum satellite view where ever possible, for example,
  - Make sure the GPS icon is green before starting to drive.
  - While in moving a car, always keep the phone on the dash board.
  - Carry the phone always on the belt holster instead of keeping it in the pocket.
  - Phone being in the vertical position gives better GPS performance.

It is advisable to make sure that the GPS icon is green before you get into a car and start moving.

2. Java applications that use the Camera and Audio recorder are incompatible with reliable lone worker operation. Please do not use such applications.
3. When the phone is powered on, it will take about

10 to 15 seconds for the lone worker application to startup and be fully operational. Please wait for 30 seconds before doing any operations on the phone.


4. The red button is active in all screens even when keypad is locked. It is also active in Java applications.




If in an alarm confirmation screen OK and Cancel are provided, selecting OK confirms the alarm and informs the service provider; selecting Cancel is used to indicate a false alarm and no information is sent to the service provider.

This section provides information on managing calls.



### Dial a Number

1. Use the numeric keys to enter the number and press .
2. Alternatively you can enter the desired phone number and select **Options > Call**.

### Dial an International Number



**Press** and hold the numeric key 0 till the + symbol is displayed. Enter the Country code, Area code (without preceding 0) and the phone number and press  or select **Options> Call**.

### Dial a Number via Contacts

1. On the home screen, select **Contacts**. Scroll to the phone number.
2. Press  to dial the number OR select **Options > Call**. Press  to disconnect.

### Dial a Number via the Call History

The Call History comprises separate lists for All calls, Missed calls, Dialed calls and Received calls.

1. To access the Call history, press  or select **Menu > Calls > Call history**. All the available call history is displayed.
2. Select a list, scroll to the number and press  to dial the number.

### Making a PTT Call from Contacts

On the home screen, select **Menu > Phonebook**. Select the contact. Select **Options > Make PTT Call**.



You can also view PTT contacts and groups in Phonebook.

### Managing Call History

Call history provides the call log of dialed, received and missed call information for voice and PTT calls. PTT IPA and missed call notifications will also be displayed. Contacts within the call history have the following options:

- **View:** You can view the details of the call such as the type of call, name, number, call time, call duration and times of call.
- **Call:** You can call the selected contact.
- **Send message:** You can send an SMS/MMS to the number. Enter the SMS/MMS and select **Options** to view the send options and send it accordingly.
- **Save to Phonebook:** You can save the number in Contacts. This option is displayed only if the number is not saved.
- **Edit before call:** You can edit the number before dialing.
- **Delete:** You can delete the number from the Call history.
- **Delete all:** You can delete all the numbers from the Call history.

The following options are present for PTT call history.

- **Make PTT Call:** Makes PTT call to the selected entry.
- **Send Alert:** Sends IPA to selected entry.

### Call Timers

- To view the total time spent on the last call, select **Menu > Calls > Call history > Options > Advanced > Call timers > Last call.**
- To view the total time spent on outgoing calls, select **Menu > Calls > Call history > Options > Advanced > Call timers > Dialed calls.**
- To view the total time spent on incoming calls, select **Menu > Calls > Call history > Options > Advanced > Call timers > Received calls.**
- To reset the time of all calls, select **Menu > Calls > Call history > Options > Advanced > Call timers > Reset all.**

### Call Settings

#### Auto Answer


Auto answer is enabled only if wired headset or Bluetooth headset/carkit is connected to the phone. When auto answer is activated, your incoming calls will automatically be answered. Select **Menu > Calls > Call settings > Earphone auto answer > On.**

#### Any key Answer

When enabled, you can press any key except  to answer a call.

To activate this feature, select **Menu > Calls > Call settings > Any key answer > On.**



Long pressing (press and hold) the Power on/off key  during a call will only end the call and not switch off the phone.

### Call Waiting

When call waiting is enabled and the phone is in conversation, the incoming number is displayed when you receive a call.

1. To enable this feature, select **Menu > Calls > Call settings > Call waiting > Activate.**
2. To cancel this feature, select **Menu > Calls > Call settings > Call waiting > Deactivate.** You will not be prompted when you receive an incoming call while your phone is busy. The caller will receive a busy signal.
3. To verify the call waiting status, select **Menu > Calls > Call settings > Call waiting > Query Status.**


### Caller ID

When you make a call, you can select whether or not to display your id to the receiver.

- Select **Menu > calls > Call settings > Caller ID > Set by network**, to allow the network operator to define the Caller ID settings.
- Select **Menu > Calls > Call settings > Caller ID > Hide ID**, to hide your id from the receiver.
- Select **Menu > Calls > Call settings > Caller ID > Send ID**, to display the ID to the receiver.

## Call Forwarding

You can forward your incoming calls to a number in the Contacts or a new number, provided your network operator supports this service. To access call forward settings, select **Menu > Calls > Call settings > Call Forwarding**. The Call forward options are mentioned below:

Options	Function
<b>Forward all voice calls</b>	Forward all incoming calls to a pre-designated number. When All calls forward is enabled, the icon  is displayed at the top of the screen when the phone is in standby mode.
<b>Forward if unreachable</b>	Forward calls when your phone is switched off or is out of coverage area.
<b>Forward if no answer</b>	Forward calls when you do not answer incoming calls.
<b>Forward if busy</b>	Forward calls when your phone is busy.
<b>Forward all data calls</b>	Forward all data calls.
<b>Cancel all forwards</b>	Deactivates the call forward option.

## Fixed Dial

FDN (fixed dialing numbers) is a SIM card-enabled feature. It restricts outgoing calls only to phone numbers listed in the FDN list. This feature can be activated only if PIN2 is entered. Contact your network operator if you do not have a PIN2.

## Advanced Settings

### Auto Redial

When auto redial is enabled, your phone will automatically redial within a set interval, if a call does not connect.

- To enable this feature select **Menu > Calls > Call settings > Advanced settings > Auto redial > On**.
- If the attempt to call is not successful, you will be prompted with the message to redial after a specific time. Select **Abort** to return to home screen.



### Call Time Display

You can select **Menu > Calls > Call settings > Advanced settings > Call time display > On** to activate the call time display.

### Call Time Reminder

When enabled, you receive a beep/tone as prompt at the set time period during a conversation. Select **Menu > Calls > Call settings > Advanced settings > Call time reminder > On**. Select **OK** and set the reminder time. You can set the reminder time between 30 to 60 seconds.

## Receive a Call

- To receive a call, press the **Accept** key  OR press **Left Selection** key. Select **Accept**.
- To reject a call press the **Power on/off** key  OR press **Right Selection** key. Select **Reject**.
- To receive another call while you are already speaking, enable the call waiting feature for calls. Select **Menu > Calls > Call settings > Call waiting**

> **Activate.**

### Record a Call

1. While on call, select **Options > Sound recorder**.
2. Select **Stop** to stop the recording. Save the record.
3. The recorded file is saved in the location **My files > Phone (or Memory card) > Audio**.

Depending on the settings, the storage location can be phone or memory card.

### Call Restrictions

You can restrict incoming and outgoing calls using Call restrictions options.

Select **Menu > Calls > Calling restrictions**. You can choose from the following options.

Options	Function
<b>Restrict incoming</b>	<ul style="list-style-type: none"> <li>• <b>Allow all</b> - allows all incoming calls</li> <li>• <b>Allow contacts</b> - allows calls from numbers in the phonebook contact list.</li> <li>• <b>Block reject - list</b> - blocks incoming calls from numbers in the call reject list</li> <li>• <b>Block all</b> - blocks all incoming calls.</li> </ul>

<b>Restrict outgoing</b>	<ul style="list-style-type: none"> <li>• <b>Allow all</b> - allows all outgoing calls</li> <li>• <b>Allow contacts</b> - allows outgoing calls restricted only to numbers in the phonebook contact list.</li> <li>• <b>Block all</b> - blocks all outgoing calls.</li> </ul>
<b>Manage reject list</b>	<p>To add a new number to the reject - list, select <b>Enter number</b> &gt; enter the number and select <b>Done</b>. Click <b>Options</b> to perform the following commands:</p> <p><b>Edit number</b> - modify the selected phone number.  <b>Delete number</b> - delete the selected phone number  <b>Delete all numbers</b> - delete all the phone numbers present in the reject list.</p>



To enable password protection for call restrictions setting, you must activate Safeguard feature and choose Restrict calls under settings. For more information refer "**Safeguard**" on page 42.

This section provides information on the various settings for the phone. To access, select **Menu > Settings > Phone settings**.

### Time and Date Settings

You can set and display the date and time on the phone. You can also select the display format.

- **Set home city:** To set the home city, select **Phone settings > Time and date > Set home city**.
- **Set time/date:** To set the date and time, select **Phone settings > Time and date > Set time/date**.
- **Set format:** To set date and time format, select **Phone settings > Time and date > Set format**.
  - The date formats supported are DD MM YYYY, MM DD YYYY, YYYY MM DD with the different date separators.
  - The time formats supported are 24 hr. and 12 hr.
- **Update with time zone:** To update the time automatically, when the time zone (home city) is changed, select **Phone settings > Time and date > Update with time zone > select On**.
- **Auto Update time:** To synchronize the time and date with the network details, select **Phone settings > Time and date > Auto update time > On**. This feature requires network support.

### Schedule Power On/Off Settings

To enable this feature, select **Phone settings > Schedule Power on/off > Select the time > Status > Enable and Power on/off**. Select the time after which the phone should be automatically switched on. Select **OK**. Select

**Disable** to disable this feature.

### Language Settings

You can change the phone's interaction language by selecting your preferred language.

- To set the language based on the SIM card, select **Phone settings > Language > Automatic**.
- To set the language to English, select **Phone settings > Language > English**.
- To set the language to Spanish, select **Phone settings > Language > Espanol**.

All the menu items, user feedback messages and text entry language are displayed in the language set based on the SIM card.

### Display Settings

You can activate and modify the display settings. Select **Phone settings > Display**.

1. **Wallpaper:** Allows you to set the background screen display using the embedded pictures available in your phone or from your own pictures that you have downloaded on to your phone or memory card. The selected wallpaper is displayed on the home screen.
2. **Screensaver:** Select this to make the screen saver appear on the home screen. User can select the screensaver image.
3. **Show date and time:** Select this to display date and time on the home screen.
4. **Themes:** Allows you to set the color theme and icons for the main menu and other screens. There

are two themes available. Select **Theme 1** or **Theme 2**. Select Options to activate the selected theme, update the theme automatically after set time period, and set the theme display order.

### Customizing Dedicated Keys

Dedicated keys are the navigation keys set to access specific functions. To assign specific function to the keys, select **Menu > Settings > Phone settings > Dedicated key > Select a key > press center key > select the new function > select OK**. You can also change the specific function previously assigned to the key.



When speed dial is activated, pre-defined functions set using **Dedicated keys** will be disabled.

### Power Saving Settings

You can set the backlight level and duration. Select **Menu > Settings > Phone settings > Power saving > LCD backlight**. Select the brightness level for the backlight of the screen. The screen display is active for the period chosen by you. The screen display active time can be selected between 5-60 sec.

### Auto Keypad Lock

To lock the keypad automatically, when the phone is in idle state, select **Menu > Settings > Phone settings > Auto keypad lock**. Select the time after which the keypad will be automatically locked. Select **None** to disable this feature.

### Firmware Details

To view the firmware version and IMEI number, select **Menu > Settings > Phone settings > Firmware details**.



When pre-defined functions are activated, speed dial numbers will be disabled.

### Managing Speed Dial Numbers

This option enables you to dial a number quickly via a shortcut.

1. Select **Menu > Settings > Phone settings > Dedicated key > Speed dial**. Select **Status > On**. The shortcut is set.
2. To add a new contact, select **Set numbers**. Select the number key (from 2 to 9) to which you want to assign the speed dial. Select the contact from the phonebook and save. The Speed dial is set.
3. To make a call, press and hold the shortcut designated number key for Speed dial while on home screen.

## Network Selection

To modify the network access settings, select **Menu > Settings > Network settings > Network selection**. The following network settings are displayed:

You can select your network, specify the network account, and indicate whether GPRS is required at all times.

- **New search:** Search the network for the phone to connect when you are selecting the network manually.
- **Select Network:** Select the network automatically or you can do it manually.
- **Selection Mode:** Select **Automatic** to set the phone to automatically select a cellular network available in your area, or select **Manual** to set the network manually. If manual mode is set, the user has to invoke **Select Network** to do network selection.

## Data Connection

To set registration preferences for accessing data connection, select one of the following options:

- **Always** - Register with the data connection, continuously.
- **When needed** - Register only when data transfer is required.

## Data Account

You can set the network account and view the data connection information.

You can add, view, edit and delete the accounts. You can edit the following information in the accounts: Account Name, APN, Username, Password, Authentication type, Advanced settings, MMSC/Homepage, Connection type, Use proxy, Proxy address, Proxy port, Proxy user name, Proxy password, Primary DNS, Secondary DNS, IP Address, and Subnet mask. Make the changes and select **OK**. Then **Add new packet data account** will pop up, select **Yes**.

## Service Selection

In service selection user can Set GSM/WCDMA/ Automatic mode.

## AGPS Settings

Your handset is equipped with a GPS receiver, that supports AGPS (Assisted GPS) functionality. This helps to calculate your current location. When an user accesses an application that requires GPS, then the receiver is turned on automatically. After the application is closed, it is turned off automatically.

A GPS receiver calculates its current location by monitoring broadcast signals from GPS satellites. Hence it is important that the handset is exposed to the sky.

AGPS feature helps the GPS receiver to acquire certain information through data connection and/or network messages. This information is used during the position calculation process. This significantly increases the ability to calculate position at low signals. It also speeds up the time required to calculate the position. Please note that some AGPS features could be network dependent. In some cases, AGPS uses external data connectivity, which may result in network charges.



To configure the AGPS on your phone, do the following:

1. Select **Menu > Settings > AGPS settings**.
2. Select **AGPS profiles** and then press **Select**. In AGPS profiles, select the required profile and click **Options > Activate**. You can also select **Edit**. Enter the name, address, data account, port, and TLS as provided by the service provider or operator.
3. Select **Done** to save the settings.

To prevent unauthorized use of your phone, you can set the PIN protection.

### PIN Protection

you can activate PIN protection, to prevent unauthorized use of your phone. The PIN is operator dependent.

To enable PIN protection,

- Select **Menu > Settings > Security settings > PIN protection > On**. Input PIN message pops up. Enter the PIN. Select **OK**. After this is set, every time you power on the phone, you will be requested to enter the PIN. If the PIN code is wrong you cannot access the phone.

### Change PIN

To change the PIN code select **Menu > Settings > Security settings > Change PIN**. You can change codes for PIN.

### Change PIN2

To change the PIN code,

1. Enable PIN2 before changing it. To enable PIN2, select **Menu > Calls > Call settings > Fixed dial > Mode > ON**.
2. To change PIN2, select **Menu > Settings > Security settings > Change PIN2**. You can change codes for PIN2.

### Phonelock Mode

In the phonelock mode, the phone can be unlocked only by entering a password. To enter the phonelock password, select **Menu > Settings > Security settings**

> **Phone lock**. Enter the default phone lock password, to lock the phone. Enter the password again to unlock the phone.



The default password for phonelock is **1234**.

If the phone lock is enabled, you will be requested to enter the password, when ever you power on the phone. To change the phonelock password, select **Menu > Settings > Security settings > Change phone lock password**. Enter the old password and the new password and select **OK**.

### Safeguard

You can set a password and prevent unauthorized usage of messages, phonebook, call history, my files, keypad and restrict calls of your phone. To use this application, do the following:

1. Select **Menu > Settings > Security settings > Safeguard > Settings > On**. Input password message pops up. Enter the password. Select **OK**. After this is set, everytime the particular option for which safeguard set is accessed, you will be requested to enter the password. If the password is wrong you cannot access the phone.
2. To activate the safeguard protection for accessing the messages, phonebook, call history, my files, keypad, restrict calls, options in your phone, select **Menu > Settings > Security settings > Safeguard > On**. Select Activation and select the required option to be protected.
3. To change the safeguard password, select **Menu > Settings > Security settings > Safeguard > Change password**. Enter the old password and

the new password. Re-enter the new password for confirmation and select **OK**.



The default password for safeguard is **1234**.

### Certificate Manager

You can view, edit key usages, and delete authorized certificates and user certificates.

### Restore Factory Settings

Select to reset the settings to the original factory settings. Please note that this can remove changes you have made to your settings.

To restore the factory settings, Select **Menu > Settings > Restore factory settings > Restore factory settings > Input phone password**.



The default password for restoring factory settings is 1234 or your phonelock password if it is changed.

You can access Bluetooth and data accounts.

## Bluetooth

Bluetooth is a wireless connection that enables to connect devices within short range, to exchange information.

The Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) is compliant with Bluetooth specification BT 3.0 supporting the following profiles: SPP, SAP, HFP, HSP, A2DP, AVRCP, DUN, PBAP, OPP, and FTP. This device can send images and audio files using Bluetooth connection.



There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service providers.

### Activate Bluetooth

Select **Menu > Settings > Connectivity > Bluetooth > Power > On**. Use the **Menu** key to toggle between on and off. When Bluetooth is activated, the Bluetooth icon is displayed on the home screen.

### Deactivate Bluetooth

Select **Menu > Settings > Connectivity > Bluetooth > Power > Off**. Use the **Menu** key to toggle between on and off.

### Pairing Devices

Pairing with Bluetooth Devices of Version V2.0 and below

1. Select **Menu > Settings > Connectivity > Bluetooth > Search new device**.
2. Select the device of your choice. Select **Pair**.

3. Enter a passcode (for example, 0000). The same passcode must be entered for the other device also.

4. Select **OK**.

5. When the other device accepts your request the message **Allow this device to connect automatically?** is displayed with options **Yes** and **No**.

If you select **Yes**, the other device can send any file via bluetooth without your confirmation.

If you select **No**, the other device cannot send a file without your confirmation.

6. Select **Yes/No** to enable/disable automatic connect in future.
7. When the other device rejects your request the message **Pairing Failed** is displayed on the screen.

### Pairing with Bluetooth Devices of Version V2.1 and above

1. Select **Menu > Settings > Connectivity > Bluetooth > Search new device**.
2. Select the device of your choice. Select **Pair**. **Passcode matched?** message pops up while pairing
3. Select **OK**.
4. When the other device accepts your request the message **Allow this device to connect automatically?** is displayed with options **Yes** and **No**.
5. Select **Yes/No** to enable/disable automatic connect in future.

- When the other device rejects your request the message **Pairing Failed** is displayed on the screen.



Prior to pairing the devices, ensure that the visibility settings for the pairing devices are activated. To activate the visibility settings, select **Menu > Settings > Connectivity > Bluetooth > Settings > Visibility > On**.



Do not pair with an unknown device for security reasons.

### Connecting a Bluetooth Headset

You can connect a bluetooth headset after pairing it with your phone.

- Select **Menu > Settings > Connectivity > Bluetooth > My device**.
- Select the paired Bluetooth headset.
- Select **Options > Connect**.  
When the connection is successful to the paired device the message **Handsfree Connected** is displayed on the screen.

When the connection is unsuccessful to the paired device the message **Connection failed** is displayed on the screen.



For more details, refer the user manual of the Bluetooth headset.

### Rename Paired Device

- Select **Menu > Settings > Connectivity > Bluetooth > My device**.
- Select the paired device.
- Select **Options > Rename**.
- Enter the new name.
- Select **OK**.

### Delete Paired Device

- Select **Menu > Settings > Connectivity > Bluetooth > My device**.
- Select the paired device.
- Select **Options > Delete**.



If you cancel the pairing with a device that is connected, pairing is removed and the connection is switched off immediately.

### Bluetooth Settings

- Select **Menu > Settings > Connectivity > Bluetooth > Settings**.
- Edit the following details.

Options	Description
<b>Visibility</b>	Select <b>On</b> to show your presence to other devices. Select <b>Off</b> to hide your presence from other devices.

<b>My name</b>	Select this option to change the name of your device.
<b>Storage</b>	Select the storage location.
<b>Remote SIM Mode</b>	Select this option to access the SIM card inserted in your phone using Bluetooth car kit.
<b>Sharing Permission</b>	Select this option to provide full control or read-only permission to the other device connected to your device.
<b>Add +</b>	Enable this option to add "+" automatically when we dial to a Phonebook contact from CarKit. This is Specific requirement for Ecom for Bury CC9060 carkit.

## About

You can view the device name, address and other support services.

## Sending Data via Bluetooth

You can transfer files to another compatible device.

1. Select **Menu > My files**.
2. To send an image file, select **Images >** select the file OR To send an audio file, select **Audio >** select the file OR To send any other file, select **Others >** select the file.
3. Select **Options > Send > via Bluetooth**.

4. Select the paired device to which you want to send the file.



**My devices** screen displays the paired devices. To send a data to an unpaired device, select **Search new device**. Select the unpaired device of your choice. Enter the passcode when you are asked to enter.

5. When the other device accepts your file, the message **Done** is displayed on the screen.
6. When the other device rejects the file, the message **Unfinished** is displayed on the screen.

## Receiving Data via Bluetooth

To receive data using Bluetooth, your device should be Bluetooth activated and must be visible to other devices.

1. When you receive a data, you are asked if you want to accept it.
2. Select **Accept** to receive data OR select **Reject** to refuse the data.
3. If you accept, the data will be stored in **My files > Images** or **Audio** or **Others**.



Confirmation is required only if **Authorize** option is set to **Always Ask** (Menu > Settings > **Connectivity > Bluetooth > My device > Select the device > Options > Authorize**) . If **Authorize** is set to **Always connect**, user confirmation is not asked when receiving data from other bluetooth device.

## Data Account

You can set the Network account and view the data connection information.

To set the data account, select **Menu > Settings > Connectivity > Data account** and create a new data account.

You can add, view, edit and delete the accounts. You can edit the following information in the accounts: Account Name, APN, Username, Password, Authentication type, Advanced settings, MMSC/Homepage, Connection type, Use proxy, Proxy address, Proxy port, Proxy user name, Proxy password, Primary DNS, Secondary DNS, IP Address, and Subnet mask. Make the changes and select **OK**. Then **Add new packet data account** will pop up, select **Yes**.

### Java Settings

To use the applications requiring internet service, Java settings must be set.

Select **Menu > Settings > Connectivity > Java Settings**. Select the required data account and save.

### Data Roaming Settings

Data roaming option enables/disables the usage of data service during roaming.

Select **Menu > Settings > Connectivity > Data Roaming**.

### USB Function

Phone can be connected to PC as a Mass storage using USB cable. When the phone is connected to the computer via a USB cable, the following two options are displayed:

- **Mass storage:** Select this to use your phone as mass storage device to transfer and synchronize data between the Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone and your computer.
- **COM port:** Select this to use the phone with PC-Sync software.



When the phone is connected to the computer via USB cable, you can select only to charge the phone by pressing the **Back** button. You need not select the Mass storage or COM port option.



When the phone is connected to the computer via USB cable in Mass Storage mode and the memory card is also present in the phone, the memory card and the phone memory are displayed as two separate drives in the computer.



When the phone is connected to the computer as mass storage, you cannot access the My files menu in the phone. To access the My files menu, disconnect the phone from the computer and reconnect in COM port mode.

Using the **My files**, you can store and manage audio, video files, image files, .jar files, .jad files and .txt files. You can preview the files, view their details and delete files. The internal storage capacity is approximately 99 MB.

1. To view your files select **Menu > My files > select Phone/Memory card > Options > Open**.
2. Scroll to a category and select one of the categories : **Audio, Images, Java, Others** or **Videos** and select **OK**.
3. For pictures, select the images stored in the Phone memory/memory card.
4. For sounds, select the audio files stored in the Phone memory/memory card.
5. Scroll to file from the displayed list and select **Options** to display further options.

For an image file, the following options are present.

Options	Function
<b>View</b>	View the image in full screen mode.
<b>Edit</b>	Resize the image or edit the image to add photo effects, adjust contrast and brightness, flip and rotate the images.
<b>Send</b>	Send the image to any phone as a multimedia message, E-mail or via Bluetooth.
<b>Use as</b>	Use the image as wallpaper, screen saver, power On/Off display and caller picture.

<b>New folder</b>	Create a new folder.
<b>Rename</b>	Rename the image.
<b>Delete</b>	Delete the image.
<b>Sort by</b>	Sort the images by name, type, time, and size.
<b>Mark several</b>	Select all the images or select one by one.
<b>Copy</b>	Copy a file to different folder.
<b>Move</b>	Move a file to different folder.
<b>Delete all files</b>	Delete all the images.
<b>Details</b>	View the creation date, size, and copyright details of the file.



Edit option will not be present for some images.

For an audio file, the following options are present.

Options	Function
<b>Play</b>	Play the audio file.
<b>Send</b>	Send the audio file to any phone as multimedia message, as an E-mail, or via Bluetooth.



<b>Use as</b>	Use the audio as ring tone for incoming call.
<b>New folder</b>	Create a new folder.
<b>Rename</b>	Rename a file.
<b>Delete</b>	Delete the audio file.
<b>Sort by</b>	Sort the audio files by name, type, time, or size.
<b>Mark several</b>	Select all the audio files or select one by one.
<b>Copy</b>	You can copy a file to different folder.
<b>Move</b>	You can move a file to different folder.
<b>Delete all files</b>	You can delete all the audio files.
<b>Details</b>	You can view the creation date, size, and copyright details of the file.

You can use the phonebook to maintain phone numbers of your contacts. This feature enables you to add, delete, dial phone numbers, send SMS and MMS messages. To access the contacts, select **Menu > Phonebook**. The contacts are displayed.



You can also use the **volume** keys to scroll through the contacts.

### Add a New Contact

- To add a new contact, select **Menu > Phonebook > Options > Add new contact**. Select SIM or phone and enter the name and phone number. Press **Menu** key to save and select **Save**.
- Alternatively, you can directly enter a number and select **Options > Save to Phonebook > Add new contact**. Select SIM or phone and enter the name and phone number. Press **Menu** key to save and select **Save**.
- You can also add a contact from **Call history** (refer “Managing Call History” on page 34) and Write message menu (refer “Write Message” on page 55).

The new number is updated in the Contacts list.



If **Phone** is selected as the storage location, then the user can add many details apart from the name and phone number. The user can add a maximum of 1000 contacts.

### View the Contact Details

On the home screen, select **Menu > Phonebook**. Select the contact. Select **Options > View** or press the **Menu**

key.

### Sending a Message from Contacts

You can send SMS and MMS messages to the contacts.

#### Sending SMS

- On the home screen, select **Menu > Phonebook**. Select the contact.
- Select **Options > Send message**.
- Enter the message and select **Options > Send to**. Select additional recipients, if any.
- Select **Options > Send**, to send the message.

#### Sending MMS

- On the home screen, select **Menu > Phonebook**. Select the contact.
- Select **Options > Send message > Options > Switch to MMS**.
- Enter the message and select **Options**. You can add the required picture, sound, video, subject, and slides to the message. Select the required file.
- Select **Options > Send to**. Select additional recipients, if any.
- Select **Options > Send**, to send the message.

### Dialing a Number from Contacts

On the home screen, select **Menu > Phonebook**. Select the contact. Select **Options > Call** or press the **call** key.

## Edit the Contact Details

You can enter or edit the contact details. On the home screen, select **Menu > Phonebook**. Select the contact. Select **Options > Edit**.

## Delete Contact

To delete a contact, select **Menu > Phonebook**. Select the contact and select **Options > Delete > A message appears Delete?** Select **Yes** to delete.

## Copy Numbers between Phone and SIM

- To copy a selected number from SIM card to Phone memory, select **Menu > Phonebook > Options > Copy > To phone**. Select **OK**.
- To copy a selected number from Phone memory to SIM card, select **Menu > Phonebook > Options > Copy > To SIM**. Select **OK**.
- To copy a selected number from SIM card or Phone memory to a file, select **Menu > Phonebook > Options > Copy > To file**. Select **OK**.

## Move Numbers between Phone and SIM

To move a selected number from SIM card to Phone memory or Phone memory to SIM card, select **Menu > Phonebook > Options > Move**. Select **OK**. Moved records are deleted from the source location.



When the contact details are moved from Phone to SIM, only the contact name and mobile number is saved in the SIM card.

## Sending Contact

You can send contact information by SMS, MMS, e-mail or Bluetooth.

### Send Contact by SMS

- Select **Menu > Phonebook**. Select the contact.
- Select **Options > Send business card > As text message**. Select additional recipients, if any.
- Select **Options > Send** to send the contact information.

### Send Contact by MMS

- Select **Menu > Phonebook**. Select the contact.
- Select **Options > Send business card > As MMS**.
- Enter the message and select **Options**. You can add the required picture, sound, video, subject, and slides to the message. Select the required file.
- Select **Options > Send to**. Select additional recipients, if any.
- Select **Options > Send**, to send the contact information.

### Send Contact by e-mail

- Select **Menu > Phonebook**. Select the contact.
- Select **Options > Send business card > As Email**. Enter the following details:
  - To:** You can enter the recipient's e-mail address.

- **CC:** You can enter the e-mail address of the recipient, to whom a copy of the e-mail has to be sent.
  - **BCC:** You can enter the e-mail address of the recipient, to whom a blind copy of the e-mail has to be sent.
  - **Subject:** You can enter the subject of the e-mail.
  - **Attachments:** By default the selected contact details are attached. You can also include other attachments, if any.
  - **Priority:** You can set the priority for the message.
3. Select **Done** > A message appears displaying the size of the message > Select **Yes** to send the message.



You will not be able to send the contact by e-mail, if e-mail account is not configured. To configure the e-mail account, refer Refer **"Configuring Email Accounts"** on page 60.

### Send Contact by Bluetooth

1. Select **Menu > Phonebook**. Select the contact.
2. Select **Options > Send business card > Via Bluetooth**.
3. If Bluetooth is not on, the user will get a prompt to turn it on.
4. Select the paired device to which you want to send the name card.
5. If the device is not paired, select **Search new**

**device** and then select the device.

6. When the other device accepts the contact, **Done** message will be displayed.

### Selecting Multiple Contacts

To select multiple contacts, select **Menu > Phonebook > Options > Mark several**. To select the contacts, scroll to the required contacts and do one of the following:

- Select **Options > Mark**.
- Press the **Menu** key.
- Select **Options > Mark all** to select all the contacts in the phonebook. Once the contacts are marked, the following options are displayed:


Options	Function
<b>Unmark</b>	Unmark the selected contact.
<b>Send message</b>	Send an SMS/MMS message to all the marked contacts.
<b>Send business card</b>	Send a business card to the marked contacts
<b>Backup contacts</b>	Export the contact details of the marked contacts as UDX file.
<b>Delete marked</b>	Delete all the selected contacts.
<b>Mark all</b>	Select all the contacts in the phonebook. This option is displayed only if all the contacts are not selected.

<b>Unmark all</b>	Unmark all the selected contacts. This option is displayed only if all the contacts are marked.
-------------------	---

## Caller Groups

You can create a new group, add a new contact to the group, and manage the groups.

- To create a new group, select **Menu > Phonebook > Options > Caller groups > Add new group**. You can assign a name, ringtone and picture for the group.
- To add a new contact in a group, select **Menu > Phonebook**. Select the contact. Select **Options > Caller groups**. Select a group. Select **Options > View members > Options > Add members**. The phonebook is displayed. Select the phone numbers to be added to the group.

	Only the contacts stored in phone memory can be added to the group.
--	---

- To manage a group, select **Menu > Phonebook > Options > Caller groups**. Select a group and then select **Options**. The following options are displayed.

Options	Function
<b>View members</b>	You can view the contacts in the group.
<b>Delete</b>	You can delete the group.

<b>Delete all</b>	You can delete all the groups.
<b>Send message</b>	You can send an SMS/MMS message to the contacts in the group.
<b>Group settings</b>	You can rename the group, assign a ring tone to the group, and add a picture to the group.

## Phonebook Settings

To view or define settings for your phonebook, select **Menu > Phonebook > Options > Phonebook settings**.

- Preferred storage:** You can select either SIM or Phone or both as the default memory location to store the contacts.
- My number:** You can manage your own information. The following sub-menus are present.
  - Edit my number:** Enter your name and other personal details such as Mobile number, Home number, Company name, Email address, Office number, and Fax number. Select **OK** and **Save**.
  - Send my number:** You can send your information to any number via SMS, MMS, e-mail and bluetooth.
  - Delete:** Delete the contact information.
- Extra Numbers:** You can view some special purpose phone numbers. The following sub-menus are present.
  - Owner numbers:** Contains the number and

name of the owner. You can edit or delete the information.

- **Service numbers:** Contains the service numbers provided by the operator.
- **Memory status:** You can view the number of contacts stored in the SIM and mobile phone.
- **Copy contacts:** You can copy all the selected records from SIM card to phone memory and from phone memory to SIM card.
- **Move contacts:** You can move all the selected records from SIM card to phone memory and from phone memory to SIM card.
- **Delete all contacts:** You can delete all the contact records stored in the SIM card and phone memory.

### Searching Contacts

1. Select **Menu > Phonebook**.
2. Type the contact name.
3. The contact will be displayed.

SMS and MMS are convenient and inexpensive means of communication. You can send a text message to other people via SMS service. MMS allows you to send messages by including multimedia content such as pictures, audio files, video files, and so on.

You can use the **Messages** in your phone to send an SMS and MMS message to other mobile phones or any other equipment that can receive SMS and MMS.



The MMS feature is available only if you subscribe it from your network operator.

To access the messages function select **Menu > Messages**. The list of options are displayed.

### Write Message

You can create SMS and MMS messages.

### SMS Messages

1. To create a SMS message select **Menu > Messages > Write message**.
2. Enter the message in the text pane. The text input mode is displayed at the top left of the screen. Press and release # to select the appropriate text input mode.
3. Enter the message and select **Options**. The following options are present:



When you add a multimedia attachment, the message is automatically converted to a multimedia message. MMS charges will apply, based on the operator.

Options	Function
<b>Send to</b>	You can select recipients for the message. You can enter a new number or select from the Phonebook.
<b>Insert symbol</b>	You can select the required symbol to include in the message.
<b>Input Method Options</b>	You can set the input options to T9, add a new T9 word or enable auto completion and alphabetic prediction under <b>Advanced Settings</b> .
<b>Edit options</b>	You can mark the required text of a message, select Copy all to copy the complete text or Cut all to cut the complete message and paste at a desired location.
<b>Add picture</b>	You can add a picture to the message. You can also take new picture with the camera (optional).
<b>Add sound</b>	You can add a sound to the message. You can also record a new sound using a sound recorder and save it in the folder.
<b>Add video</b>	You can add a video to the message. You can also record new video with Camera (optional).
<b>Add subject</b>	You can add a subject to the message.

<b>Slide options</b>	You can set to display a slide either behind or before the message and set the slide display timings.
<b>Switch to MMS</b>	You can switch to MMS and send the message as a MMS.
<b>Advanced</b>	You can use a message template stored in Templates folder. You can attach a file, contact details, and insert bookmarks.
<b>Save to drafts</b>	You can save the message as a draft in Draft folder.
<b>Save as template</b>	You can save the message as a template in Templates folder.
<b>Details</b>	You can view the details of the message such as message type, subject, size, number of recipients, and attachment list.

4. Select **Send to** and select the recipients of the message.
5. Select **Options > Send**, to send the message.



Instead of selecting **Options**, press the **Menu** key to quickly send the message to a number in Phonebook.

### MMS Messages

1. To write a MMS message select **Menu > Messages > Write message**.
2. Enter the message in the text pane. The text input mode is displayed at the top left of the screen. Press and release # to select the appropriate text input

mode.

3. Enter the message and select **Options**. The following options are present:



For sending multimedia messages, different charges will apply, based on the operator.

Options	Function
<b>Send to</b>	You can select recipients for the message. You can enter a new number or select from the Phonebook.
<b>Insert symbol</b>	You can select the required symbol to include in the message.
<b>Input Method Options</b>	You can set the input options to T9, add a new T9 word or enable auto completion and alphabetic prediction under <b>Advanced Settings</b> .
<b>Edit options</b>	You can mark the required text of a message, select Copy all to copy the complete text or Cut all to cut the complete message and paste at a desired location.
<b>Add picture</b>	You can add a picture to the message. You can also take new picture with the camera (optional).
<b>Add sound</b>	You can add a sound to the message. You can also record a new sound using a sound recorder and save it in the folder.



<b>Add video</b>	You can add a video to the message. You can also record new video with Camera (optional).
<b>Add subject</b>	You can add a subject to the message.
<b>Preview MMS</b>	You can preview the message before sending.
<b>Slide options</b>	You can set to display a slide either behind or before the message and set the slide display timings.
<b>Advanced</b>	You can use a message template stored in Templates folder. You can attach a file, contact details, and insert bookmarks.
<b>Save to drafts</b>	You can save the message as a draft in Draft folder.
<b>Save as template</b>	You can save the message as a template in Templates folder.
<b>Details</b>	You can view the details of the message such as message type, subject, size, number of recipients, and attachment list.

4. Select **Options > Send to** and select the recipients of the message.
5. Select **Options > Send**, to send the message.



Instead of selecting **Options**, press the **Menu** key to quickly send the message to a number in Phonebook.

## Manage Your Messages

The inbox, draft, outbox and sent folders display the number of stored messages in parenthesis.

### Inbox

The Inbox stores and displays all the incoming SMS and MMS messages.

To access the Inbox, select **Menu > Messages > Inbox**. The Inbox displays a list of messages.

1. Scroll to a message and select **Options** to view the following list of options.
  - **View:** You can view the message.
  - **Reply:** You can send a text or multimedia message to the sender of that message.
  - **Call sender:** You can call the sender of the message.
  - **Forward:** You can send the message to another recipient.
  - **Delete:** You can delete the message.
  - **Delete all:** You can delete all the messages.
  - **Save to Phonebook:** You can save the numbers to the phonebook.
  - **Sort by:** You can sort the messages based on Sender, Subject, unread/read, Message size and Message type.
  - **Move to Archive:** You can move the selected message to archive.
  - **Mark several:** You can select multiple messages, one by one.

- **Mark as unread:** You can mark a message as unread.
  - **Advanced:** You can copy and move messages from the phone memory to SIM card or from SIM card to phone memory.
  - **Details:** You can view the details of the message such as from, message type, received date and storage for SMS messages and from, to, cc, Number of recipients, subject, priority, type received date, size and storage for MMS messages.
2. To open a message, scroll to a message and press the **Menu** key.
  3. After a message is opened other functions can be performed. Select **Options** to list the following options: **Reply, Call sender, Forward, Delete, Edit options, Save as Template, Save to Phonebook, Details** and also other **Advanced** options to use the number, URL, e-mail, USSD, copy or move the messages from phone memory to SIM card or from SIM card to phone memory.

## Drafts

Messages that have been saved to be sent later are stored in Draft.

1. To access unsent messages, select **Menu > Messages > Drafts**.
2. Select **Options** to view the following list of options.
  - **View:** You can view the message.
  - **Send:** You can send the message.
  - **Edit:** You can edit the message.

- **Delete:** You can delete the message.
  - **Delete all:** You can delete all the messages.
  - **Sort by:** You can sort the messages based on Sender, Subject, unread/read, Message size and Message type.
  - **Mark several:** You can select multiple messages, one by one.
  - **Advanced:** You can copy and move messages from phone memory to SIM card or from SIM card to phone memory.
  - **Details:** You can view the details of the multimedia or e-mail message.
3. Press the **Menu** key to view the message.
  4. Select **Options > Send** to send the message.

## Outbox

Messages that were undelivered to the recipient due to some reason are stored in Outbox.

1. To access undelivered messages, select **Menu > Messages > Outbox**.
2. Select **Options** to view the following list of options.
  - **View:** You can view the message.
  - **Resend:** You can resend the message.
  - **Edit:** You can edit the message.
  - **Delete:** You can delete the message.
  - **Delete all:** You can delete all the messages.
  - **Sort by:** You can sort the messages based on Recipient, Subject, unread/read, Message size

and Message type.

- **Mark several:** You can select multiple messages, one by one.
  - **Advanced:** You can copy and move messages from phone memory to SIM card or from SIM card to phone memory.
  - **Details:** You can view the details of the multimedia or e-mail message.
3. Press the **Menu** key to view the message.
  4. Press **Options > Resend** to send the message.

## Sent Messages

Messages that have been sent and delivered are stored in Sent.

1. To access sent messages, select **Menu > Messages > Sent**.
2. Select **Options** to view the following list of options.
  - **View:** You can view the message.
  - **Forward:** You can send the message to another recipient.
  - **Delete:** You can delete the message.
  - **Delete all:** You can delete all the messages.
  - **Sort by:** You can sort the messages based on Subject, Message size and Message type.
  - **Move to Archive:** You can move the selected message to archive.
  - **Mark several:** You can select multiple messages, one by one.

- **Advanced:** You can copy and move messages to the phone memory.
- **Details:** You can view the details of the message such as message type, subject, size, number of recipients, and attachment list.

3. Press the **Menu** key to view the message.



The SMS messages are saved in Sent messages, only if it is activated in **Messages > Message settings > Text message > Common settings > Save sent message**.

The MMS messages are saved in Sent messages, only if it is activated in **Messages > Message settings > Multimedia message > Common settings > Sending > Enable Send and save option**.

## Archive

You can save the received or sent messages in the archive folder. To archive a message, select **Menu > Messages > Inbox/Sent Messages >** select the message > select **Move to Archive**.

## Email Messages

You can send, receive, and manage e-mail messages. To access, select **Menu > Messages > Email**.



The E-mail account has to be configured, created and activated to access the e-mail messages.

## Configuring Email Accounts

You have to configure and create an e-mail account to access the e-mail functionality.

1. To create an e-mail account **Menu > Messages > Email > A message appears Start to create account? > Select Yes.**
2. Select the specific pre-defined Email service provider.  
For Gmail, Yahoo, Hotmail pre-configured settings are available. This can be accessed with just User name & password.
3. Enter the e-mail address and password and select **OK.**

If you get a certificate error, while retrieving or sending email, complete the procedure provided below, and install the new certificate.

### Installing New Certificate

When certificate for an account is not installed in the phone, you will get an error. You can install the required certificate using the following steps.

1. In the certificate error screen, select **Options** or press the center **Menu** key.

Certificate installation screen to install the new certificate is displayed.

2. Select **Install > OK.**
3. Enter a certificate **Label** name in the editor.

Certificate label is a unique user-defined name for the new certificate. You can enter any name, to identify the certificate, easily.

**Example:** yahooCERT1

4. Select **Options > Done.**

**Certificate imported** message is displayed, once the certificate is installed successfully.

If you want to create other Email accounts,

1. Select **Other Email accounts.**
2. Enter the e-mail address and select **Options > Next.**
3. Select a protocol and select **Options > Next.**
4. Select a data account and select **Options > Next.**
5. Enter the incoming server address and select **Options > Next**
6. Enter the outgoing server address and select **Options > Next.**
7. Enter the user name and select **Options > Next.**
8. Enter the password and select **Options > Next.**
9. Enter the account name (if it is not displayed) and select **Options > Done.** The e-mail account is saved.



Instead of selecting **Options > Next**, press the **Menu** key to quickly go to the next step.

### Write Email

1. To write an e-mail, select **Menu > Messages > Email > Select the Email Account > Options > Write Email.**
2. Enter the following details:

- **To:** You can enter the recipient's e-mail address.
  - **Subject:** You can enter the subject of the e-mail.
3. Select Options to enter the following details:
    - **Edit:** You can edit the subject or content.
    - **Address:** You can enter the e-mail address of the recipient, to whom a copy or blind copy of the e-mail has to be sent.
    - **Add Attachments:** You can also include attachments.
    - **Priority:** You can set the priority for the message.
    - **Save to Drafts :** You can save the e-mail to draft and send later.
    - **Size:** View the size of the mail.
    - **Exit:** Exit without sending.
  4. Select **Options > Send**.

## Email Inbox

The Inbox stores and displays all the incoming messages.

1. To access the inbox, select **Menu > Messages > Email > Select the Email Account > Options > View > Inbox**. The inbox displays a list of messages.

If you get a certificate error, while retrieving or sending email, refer **"Installing New Certificate"** on page 60, and install the new certificate.

2. Scroll to a message and select **Options** to view the

list of inbox options.

3. To open a message, scroll to a message and press the **Menu** key.
4. To reply, select **Options > Reply** or press **Menu** key. The reply screen with default sender, recipient and subject details are displayed.
5. Press the **Menu** key to edit to the content section.
6. Navigate to the beginning of the message to enter new content.
7. Type the content and select **Options > Done** or press the **Menu** key.
8. Select **Options > Send**, to reply to the message.

## Email Outbox

Messages that were undelivered to the recipient due to some reason are stored in Outbox.

1. To access undelivered messages, select **Menu > Messages > Email > Select the Email Account > Options > View > Outbox**.
2. Select **Options** to display the outbox options.
3. Press the **Menu** key to view the message.
4. Press **Options > Send** to send the message.

## Email Sent

Messages that have been sent and delivered are stored in Sent.

1. To access sent messages, select **Menu > Messages > Email > Select the Email Account >**

**Options > View > Sent.**

2. Select **Options** to display the sent options.
3. Press the **Menu** key to view the message.

**Email Draft**

Messages that have been saved to be sent later are stored in Drafts.

1. To access unsent messages, select **Menu > Messages > Email > Select the Email Account > Options > View > Draft.**
2. Select **Options** to view the draft options.
3. Press the **Menu** key to view the message.
4. Press **Options > Send** to send the message.

**Broadcast Messages**

Broadcast messages are sent by the network operator, to all the users connected to the mobile network. You can select to receive broadcast messages. On the home screen, select **Menu > Messages > Broadcast message.**

- **Receive mode:** Select **On** to get information about the reception tower.
- **Read message:** Select this to read the message.
- **Languages:** Select the required language.
- **Channel settings:** Select, add, edit, and delete channels.

**Templates**

When you send messages to contacts, you can use the

predefined messages stored in Templates folder. You can use a text message template for an SMS message and multimedia message template for an MMS message. On the home screen, select **Menu > Messages > Templates.**

**Message Settings**

To view or define settings for your messages, select **Menu > Messages > Message settings.**

**SMS Settings**

Select **Message settings > Text message** to edit the following SMS settings:

- **Profile settings:** View and edit the profile name, SMSC address, and type of message.
- **Voicemail Server:** Configure the voicemail server.
- **Common settings:** Set the following options:

Settings	Function
<b>Save sent message</b>	Save the sent messages.

- **Memory status:** View the number of messages stored in the SIM and mobile phone.
- **Preferred Storage:** You can select mobile phone or memory card as the storage location of messages.

**MMS Settings**

Select **Message settings > Multimedia message** to edit the following MMS settings:

- **Data Account:** Select the MMS data account.
- **Common settings:** Set the following options:

Settings	Function
<b>Compose</b>	You can set the slide time, creation mode, picture size and select to insert signature automatically. You can enter the text, picture, video, or sound for the signature.
<b>Sending</b>	You can set the validity period, activate to receive the delivery and read reports, priority, delivery time and save the sent message.
<b>Retrieval</b>	You can select to retrieve the message in home network or while roaming. You can also allow or reject anonymous mails and advertisements, You can send the read report and delivery report.
<b>Preferred storage</b>	You can select phone or memory card as the storage location for messages.
<b>Memory status</b>	You can view the number of messages stored in phone and memory card.

You can activate and modify various settings on your Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone using Profiles.

On the home screen, select **Menu > Settings > Phone settings > Profiles** to display the options.

You can also access Profiles from **Menu > Profiles**.

You can customise the profiles to use features such as tone settings, ring volume, alert type, ring type and extra tone. There are six environment profiles present in this phone. General is the default profile, while the other profiles are Meeting, Outdoor, Silent, Flight mode and Headset.



You cannot change the parameters for the Silent mode.

- **General:** The default profile where all sounds are enabled. Parameters in this mode can be changed. Select **Menu > Settings > Phone settings > Profiles > General > Options > Customize** to open the Customize screen. You can use this screen to choose tone settings, ring volume, alert type, ring type or extra tone. Select **Menu > Settings > Phone settings > Profiles > General > Options > Activate** to activate this profile.
- **Meeting:** Here only the vibrate mode is enabled. Parameters in this mode can be changed. Select **Menu > Settings > Phone settings > Profiles > Meeting > Customize** to open the Customize screen. You can use this screen to choose tone settings, ring volume, alert type, ring type or extra tone. Select **Menu > Settings > Phone settings > Profiles > Meeting > Activate** to activate this profile. You can also **press and hold** the # key to

activate the meeting mode from the home screen.

- **Outdoor:** Here both the vibrate and ring modes are enabled. Parameters in this mode can be changed. Select **Menu > Settings > Phone settings > Profiles > Outdoors > Options > Customize** to open the Customize screen. You can use this screen to choose tone settings, ring volume, alert type, ring type, or extra tone.
- **Silent:** Here all the alerts are on mute. Select **Menu > Settings > Phone settings > Profiles > Silent > Activate** to activate this profile.



Alarm tone will be played even in Silent profile.

- **Flight mode:** Select **Menu > Settings > Phone settings > Profiles > Flight mode** to open the Flight mode screen. Select **Flight mode** to activate this profile. In this mode, you cannot make or receive calls but can play Media player. You can deactivate the flight mode only by selecting **Menu > Settings > Phone settings > Profiles > Flight mode > Normal mode**.
- **Headset:** Headset mode is activated automatically when wired headset is inserted. User cannot change to other profiles except Flight mode when wired headset is inserted. Parameters in this mode can be changed. Select **Menu > Settings > Phone settings > Profiles > Headset > Customize** to open the Customize screen. You can use this screen to choose Tone settings, Volume, Alert type, Ring type or Extra tone.



## Sound Settings

Select **Menu > Settings > Phone settings > Profiles > General > Customize**. Changing it effects the current set profile. The following sound settings are displayed:

1. **Tone settings:** You can set the tone for incoming calls, messages, and keypad.
2. **Volume:** You can set the volume for ringtone and keytone.
3. **Alert Type:** You can set the alert type for incoming calls and messages. You can select Ring only, Vibrate only, Vibrate and Ring, Vibrate then ring.
4. **Ring type:** You can set the ringtype for your calls. You can select Repeat, Ascending or Beep once.



You can download and store ring tones over Bluetooth or WAP. The supported ringtone formats are MIDI, MP3, WAV, AAC and AMR.

5. **Extra tone:** You can set tones for warning, error, and connect tone for calls.

This section contains miscellaneous features supported by the handset.

## Calendar

The calendar enables you to set appointments, schedule reminders when required, set alerts and repeat specific settings. Tasks can be viewed on daily and weekly basis.

1. To access the calendar and its associated functions, select **Menu > Tools > Calendar**. The calendar for the current month is displayed. Use the navigation keys to navigate across months.
2. Select **Options** to view the list of options available.
  - **View:** You can view the list of events for the day.
  - **View all:** You can view all the events.
  - **Add event:** You can enter a new event.
  - **Delete event:** You can delete an event.
  - **Jump to date:** You can go to a particular date and view the events for that date.
  - **Go to today:** You can access the current date.
  - **Go to weekly view:** You can view the list of events for the week.



When you are in weekly view, the option changes to Go to monthly view to view the calendar of the month.

## Edit Events

Select **Menu > Calendar > Options > View**. Select the event. Select **Options > Edit**. Make the changes. Select

**Done** and **Save**.

## Alarm

You can set alarm for a particular time. Select **Menu > Tools > Alarm**.

1. To set a simple alarm, select **Menu > Tools > Alarm > Edit > On**. Enter the time and select **Repeat > Once**. Select **Done**.
2. To set a recurrent alarm, select **Menu > Tools > Alarm > Edit > On**. Enter the time and select **Repeat > Everyday** or **Custom**. Using the **Menu** key, select the day and select **Done**.
3. To set the alarm tone, select **Menu > Tools > Alarm > Edit > Alarm tone > Tone**. Select the alarm tone.
4. To enable snooze, select **Menu > Tools > Alarm > Edit > Snooze**. Use the **left and right arrow** keys to set the time for snooze.



The alarm will work even if the phone is switched off or is in Silent mode.

## Calculator

The calculator in this phone is designed to perform simple mathematical calculations.


1. Select **Menu > Tools > Calculator**.
2. To enter the numbers, press the numeric keys.
3. To use mathematical operators use the navigation keys.

Navigation Key	Operation
<b>Up</b>	+ (Addition)
<b>Down</b>	- (Subtraction)
<b>Left</b>	* (Multiplication)
<b>Right</b>	/ (Division)

4. After performing the calculations, press the **Menu** key for the final result.

The following calculator options are also displayed.

Options	Function
<b>MC</b>	Clears number from memory
<b>MR</b>	Reads the number from memory
<b>M+</b>	Adds a number to the number in memory and stores the result in memory
<b>M-</b>	Subtracts a number to the number in memory and stores the result in memory

	This phone accepts numbers up to a maximum of 12 digits per entry.
--	--

### Unit Converter

You can convert one type of physical units to another type. Select **Menu > Tools > Unit converter**.

1. Select the type of physical unit. Use the Right or Left navigation keys to scroll. For example, Weight from

Kg to Pound.

2. Scroll down and enter the value in Kg slot or Pound slot, for example, 10 Kg and select **OK**.
3. The Weight 10 Kg is converted to pounds and is displayed in the Pound slot.

You can select **Unit converter > Currency converter** to convert the currency based on rate. Enter the rate and then enter the local value of the currency. The equivalent foreign value of the currency is displayed.

### World Clock

You can view the time of major cities in different time zones using this function. You also have the option to use Daylight Saving Time (DST).

The local time is displayed in the lower half of the screen.

1. To view the international clock, select **Menu > Tools > World clock**.
2. To view the time of different cities, select the required city using the navigation keys and the time is displayed.
3. To set Daylight Saving Time (DST), select **Menu > Tools > World clock > Options > Daylight saving time for foreign city > On**.
4. To set the home city, select **Menu > Tools > World clock > select the home city and select Options > Set Home city**.

## Sound Recorder

Select **Menu > Tools > Sound recorder**.

1. To record an audio file, select **Options > New record**.
2. To temporarily stop the recording, select **Pause**.
3. To continue with the recording, select **Continue**.
4. To end the recording, select **Stop**. A message appears **Save audio?** > Select **Yes**. The recorded audio file is stored under **My files**. For more information refer **"Managing Your Files" on page 48**.

## Audio Playback

The user can do instant playback of the recorded audio within the sound recorder. To listen to a recorded audio file, select **Menu > Tools > Sound recorder > Options > List**. You can also select **Menu > My files > Open > Phone > Open > Audio > Open** to access the audio files.

## Notes

Select **Menu > Tools > Notes** to store the required information.

## Stopwatch

Select **Menu > Tools > Stopwatch** to start and stop the timer, as required.

## Text Reader

Select **Menu > Tools > Text reader** to view and read the .txt files.

## SIM Services

You can access certain services provided by the operator using this menu. This feature can be accessed via **Menu > Tools > SIM services**.

You can download more Java applications via WAP, Bluetooth, SD Card or Java Application Manager.

### Data Account and Java Settings

To use the applications requiring internet service, the Java settings must be set.

Select **Menu > Settings > Connectivity > Java Settings**.  
Select the required data account and save.


### Installing Java Application from WAP

Configure WAP. Launch WAP. Browse to the http/WAP link where the file (.jar or .jad) is present. Select the file. The installation process begins. Once the application is installed successfully, it will be displayed in the **Applications (Java box)**.

### Installing Java Application from Memory Card

Select **Menu > My files > Memory card**. Select the file (.jar or .jad). The installation process begins. Once the application is installed successfully, it will be displayed in the Java box.



Some Java applications running in the foreground can be pushed to the background by pressing the  key.

This phone is equipped with a browser that provides wireless connectivity and access to the Internet. This feature is available only if you subscribe to a data service from your network operator for Internet access. You need to consult your local operator for more details.



If you are unable to view WAP web pages because of change in WAP parameters or change in WAP web address or contents, please consult your network operator and Internet Content Provider (ICP) for updates.

Select **Menu > Browser**. The following sub menus are displayed:

- **Homepage:** This is the page that is displayed first when you open the WAP browser.
- **Bookmarks:** Use this menu to add and manage your bookmarks and go directly to the corresponding web address. You can also edit or delete bookmarks via this menu.
- **Input address:** Enter a web address directly and browse.
- **Last Web Address:** View the last visited Web page.
- **Recent Pages:** View web pages which you have viewed previously. Click on them to open the pages.
- **Stored pages:** You can view the pages that are saved.
- **Service messages:** This is the inbox for WAP push messages.
- **Settings:** The following configurations can be set via this menu:
  - **Homepage:** Set the homepage.

- **Data Accounts:** In this menu, existing accounts are listed on the display. Scroll to the required account and select **OK**.
- **Browser options:** You can clear cache, cookies and authentication information.
- **Preferences:** You can set the time out, select to display or not display images in the web pages and you can enable or disable the cookies and cache.
- **Security settings:** You can view the trusted certificates.
- **Service message settings:** You can decide whether or not to receive the push messages from operators and web portals. You can enable service loading.
- **Restore browser settings:** You can restore to the original browser settings.

## Push to talk (Optional)

Push to talk (PTT) application is available on some models of Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone.



You can access PTT services only if you subscribe to PTT from your service provider.

## Activating the PTT service

When you switch ON the phone, the first time, you can activate your PTT service by :

1. Simply pressing the PTT button (on the left side of the phone) OR Select **Menu > Push-to-talk > Select Yes** to activate PTT service.
2. Once registered, a **Login successful** message is displayed. A Green Icon is displayed at the top left corner of the home screen. The PTT service will retrieve PTT contacts and groups if they exist for your company or corporation.




Press and release the **PTT** button located in the left side of the phone, to use PTT service.

PTT button is enabled by default. To disable PTT launch from left side button, select **Menu > Settings > Dedicated key > PTT Button > select Off**. PTT button can be disabled only when PTT is logged out.


## Login and Logout of the PTT Service

- To logout the PTT service, select **Menu > Push to talk > Options > Settings > Logout > Select Yes**.

Once you logout the PTT service,  is displayed.

- To login, select **Menu > Push to talk > Select Yes**. Once you login the PTT service,  is displayed at the top left corner of the home screen indicating your available status.

## PTT Home Screen

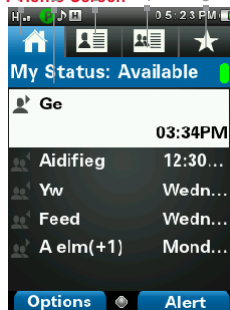

1. **PTT history tab/ Home tab**
2. **Presence status**
3. **Contacts tab**
4. **Groups tab**
5. **Favorite tab**

## PTT Overview

A PTT subscriber can have both public and corporate contacts. Public contacts are created on the phone. You can add up to 300 public contacts and 30 public groups each containing 30 members.

Corporate administrator for the company stores the Corporate contacts to the phone. You can add up to 1000 contacts and 100 corporate groups each containing up to 250 members per group.



The maximum number of supported contacts depends on the software configuration.

You cannot edit or delete corporate contacts and groups. These are managed by the corporate administrator.

A PTT subscriber will be able to:

- Create groups with other public contacts.
- Create group with mix of public and corporate contacts.
- Rename public contacts, groups or any group members.
- Delete public contacts.
- Delete any groups created by the PTT subscriber.
- Make PTT calls to public and corporate contacts.
- Initiate a PTT quick group call to public contacts.
- Initiate a PTT quick group call to a mix of corporate and public contacts.
- Initiate a PTT fixed group call to a mix of corporate and public contacts.
- Send alerts to public and corporate contacts.
- Add contacts and groups as favorites.
- Change availability status.

If a company has a corporate administrator, they can further restrict the PTT capability on the handset by making the profile as corporate only.

A corporate only subscriber will be able to:

- Make corporate PTT calls.

- Initiate a corporate fixed PTT group call.
- Initiate a PTT quick group call to other corporate contacts.
- Change availability status.
- Send alerts to other corporate contacts.
- Add contacts and groups as favorites.
- Log off.

### Disallowed Corporate Only Subscriber Rights

A corporate only subscriber will not be able to:

- Create any contacts or groups.
- Add group members to a group.
- Edit contacts or groups. The user can only add contacts and groups as favorites.
- Delete any contacts or groups and its members.

### PTT Related Key Functions

PTT related keys present in your Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone are:




Key	Function
<b>PTT key</b>	<ul style="list-style-type: none"> <li>• Displays the PTT home tab.</li> <li>• Initiate a PTT call.</li> <li>• Used for call control</li> </ul>




<b>Volume keys</b>	<ul style="list-style-type: none"> <li>Adjusts the volume during an PTT conversation.</li> <li>Navigates up and down the PTT Contacts list.</li> </ul>
<b>LSK</b>	Activates the menu options displayed at the bottom of the screen.
<b>RSK</b>	<ul style="list-style-type: none"> <li>Sends alert to a selected contact.</li> <li>Toggles between favorite groups and contacts in <b>Favorites</b> tab.</li> </ul>
<b>Navigation keys</b>	Scrolls horizontally or vertically to access a desired menu option.
<b>Power on/ Power off/ End call key</b>	<ul style="list-style-type: none"> <li>Switch on/off the phone.</li> <li>Return to the home screen when the phone is in any other screen.</li> <li>Ends an PTT call.</li> </ul>

### PTT Display Icons

The common PTT display icons are:

Icon	Description
	Indicates that PTT is activated in your phone, but you are not logged in.
	Indicates you are logged-on to PTT service and is available to answer PTT calls.
	Indicates you are in Do not disturb mode.

	Indicates a new notification.
--	-------------------------------

### Manage PTT Settings

To access the PTT Settings, press and release the **PTT** button or select **Menu > Push to talk**. The Home tab with call history is displayed. Select **Options**. The following options are displayed.

- My Status:** Set one of the following options to indicate your online presence.
  - Available** - Indicates your online presence to other contacts.
  - Do not Disturb** - Indicates that you are not available for calls.
- View History** : View call/alert history specific to the selected contact.
- Search:** Search for a contact or group entry.
- Call:** Make a PTT call to the selected contact.
- Send Alert:** Send an alert to the selected contact.
- Delete:** Delete the selected contact from the call history.
- Delete All:** Delete all the calls and alerts from the call history.
- Settings:** You can set the alerts, name, sort and so on.
- Help:** View the help for specific functionality.

Options	Details
<b>Vibrate Alert</b>	Enable or disable vibrate mode for incoming PTT alerts.
<b>Audible Alert</b>	Enable or disable audible alerts for incoming PTT alerts.
<b>Alert Repeat</b>	<p>Set the incoming alert notification to</p> <ul style="list-style-type: none"> <li>• <b>Once</b> - The audible alert occurs once when the notification is displayed.</li> <li>• <b>Repeat</b> - The audible alert occurs immediately, and every 20 seconds for up to 10 minutes, until user clears the notification.</li> <li>• <b>Continuous</b> - The audible alert occurs immediately, and every 20 seconds until the user clears the notification.</li> </ul>
<b>Notification Control</b>	Notifications for alerts and missed PTT calls.

<b>Set Default PTT Tab</b>	<p>Set the default tab when the PTT button is pressed or PTT application is accessed. By default it is set to PTT Home or history tab. To set the default tab, From the <b>PTT settings &gt; Set Default PTT Tab</b>, select one of the following tabs.</p> <ul style="list-style-type: none"> <li>• Home</li> <li>• Contacts</li> <li>• Groups</li> <li>• Favourites</li> </ul>
<b>Sort Contact List</b>	Sort the contacts based in alphabetical order or online presence.
<b>PTT Tones</b>	<p>Controls PTT tone volume. By default the tones will be set at a volume level-03. To set this option, select <b>PTT settings &gt; PTT tones &gt; PTT Alert tones</b> or <b>PTT In call tones</b>, select the desired tone and set the volume level.</p> <ul style="list-style-type: none"> <li>• Incoming call alert tone</li> <li>• Missed call alert tone</li> <li>• Instant personal alert tone</li> <li>• Floor acquired tone</li> <li>• Floor free tone</li> <li>• Floor error tone</li> </ul>

<b>Headset setting for PTT tones</b>	<p>Reduces the loudness of the PTT tones and normalizes volume for a headset. By default the option is disabled. To edit this option, select PTT settings &gt; Headset Settings for PTT Tones</p> <ul style="list-style-type: none"> <li>• <b>Enable</b> - normalizes headset volume</li> <li>• <b>Disable</b> - switches to headset volume</li> </ul>
<b>Volume</b>	Increase or decrease the call volume
<b>Display Name</b>	Edit the existing login name .
<b>Show tutorial</b>	View the tutorial for specific functionality
<b>Capacity</b>	View the contacts, groups and favourites storage capacity.

<b>Mute incoming call</b>	<p>Mute the incoming call volume,</p> <ul style="list-style-type: none"> <li>• <b>When Phone silent</b> - If native profile is set to silent or vibrate only, then the PTT audio and in call tones will be muted. (set by default on activating silent or vibrate only profile)</li> <li>• <b>Use App volume</b> - On selecting this, PTT audio and in call tones are heard through the loudspeaker.</li> </ul>
<b>Auto start</b>	<ul style="list-style-type: none"> <li>• <b>Enable</b> - PTT will automatically login after the phone restarts.</li> <li>• <b>Disable</b> - PTT login will not happen automatically. Once the phone restarts user has to press the PTT button (left side button) or select the PTT icon on the main menu for PTT application to login. If phone lock is enabled, then PTT login will not happen automatically until the user enters the correct phone password.</li> </ul>

<b>Use Bluetooth for Audio</b>	<p><b>Enable</b> - On enabling this, the PTT media, in call tones and notification tones would be played through the BT accessory connected.</p> <p><b>Disable</b> - On disabling this, the PTT media, in call tones and notification tones would be played through the phone loudspeaker even though BT accessory is connected.</p>
<b>Speaker phone default setting</b>	<p>Activates or deactivates the loudspeaker. By default loudspeaker is enabled. You can select one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>Speakerphone off with incoming call vibrate alert</b> - loudspeaker is disabled when incoming call is set to vibrate alert.</li> <li>• <b>Speakerphone off with incoming call Vibrate/audible alert</b> - loudspeaker is disabled when incoming call is set to vibrate or audible alert.</li> <li>• <b>Speakerphone on</b> - loudspeaker is enabled when incoming call is set to vibrate or audible alert.</li> </ul>

<b>Receive call in background</b>	<p>Always starts incoming PTT calls in the background. By default this option is disabled. To set this option, select <b>PTT settings &gt; Receive PTT call in Background</b> and select one of the following options</p> <ul style="list-style-type: none"> <li>• <b>Enable</b> - starts incoming PTT call in background.</li> <li>• <b>Disable</b> - starts incoming PTT call in the main screen.</li> </ul>
<b>Restore Defaults</b>	Restore PTT settings to factory default settings.
<b>Reject Voice Call when PTT call in progress</b>	<p>Directs voice calls to voicemail or sends busy signal when the user is in a PTT call. By default this option is disabled. To set this option, select <b>PTT settings &gt; Reject voice call when PTT call in progress</b></p> <ul style="list-style-type: none"> <li>• <b>Enable</b> - rejects voice call when the user is in an active PTT call.</li> <li>• <b>Disable</b> - notifies about incoming voice call when the user is in an active PTT call.</li> </ul>
<b>About</b>	View the details of the PTT application
<b>Logout</b>	Logout of PTT session.

## Managing PTT Calls

A user can make or receive a one-to-one call or one-to-many call (group call). Calls can be dialled directly, from the call history/home tab, from the PTT contact or group tab or from the favorite tab.



You cannot call any recipient who is in **Do not disturb** or **Offline** status.



If a call has no response from both initiator and receiver, it is automatically disconnected after a short time interval.



For one-to-one calls, the terminated call will be considered by the client as a 'Missed call' if the receiver never speaks during the entire call.

## Direct PTT Calls

To dial a PTT call directly:

1. Enter the phone number of a contact using the dial pad on the home screen.
2. Press and hold the **PTT** button.
3. Continue to hold the **PTT** button to speak.
4. Release the **PTT** button when you finish speaking.
5. To end the call, press **End Call (RSK)** key or **End** key.

## Calls from PTT History Tab

The PTT history tab is the home screen for PTT. It

maintains logs of all outgoing PTT calls, received PTT calls and missed PTT calls and alerts.

To access the PTT history screen, press and release the PTT button or select **Menu > Push to talk**.

You can make PTT calls from conversation history by scrolling to the an entry in the list and pressing the **PTT** button.

You can also get more details by highlighting an entry and selecting **Options > View history** to see the call and alert records for the specific entry.

The **Search** screen is activated by touching a key on the dial pad.

## Calls from PTT Contacts Tab

You can make a one-to-one call and quick group call, from the PTT Contacts tab.

### One-to-One Call

This is a simple PTT session where just one caller and one recipient are involved in the conversation.

1. Press and release the **PTT** button or select **Menu > Push to talk**. Go to **Contacts tab**, to display the list of **PTT Contacts**.
2. Scroll to the contact you want to call. Press and hold the **PTT** button. The Screen displays **PTT Private Call in progress**.
3. Continue to hold the **PTT** button to speak.
4. Release the **PTT** button when you finish speaking.
5. To end the call, press **End Call (RSK)** key or **End** key.

## Quick Group Call

You can quickly make a single call to many contacts in the PTT Contacts list.

1. Press and release the **PTT** button or select **Menu > Push to talk**. Go to **Contacts tab**, to display the list of **PTT Contacts**.
2. Mark the required contacts to whom you want to call. You can add up to 10 contacts to initiate a quick group call.
3. Press and release the **PTT** button. You can also select **Options > Call** to initiate a quick group call.
4. Continue to hold the **PTT** button while you are speaking. Release the **PTT** button when you finish speaking.
5. To end the call, press **End Call (RSK)** key or **End** key.

## Calls from PTT Group Tab

You can make a call to a group by going to the groups tab and selecting a group.

1. Press and release the **PTT** button or select **Menu > Push to talk**. Select **Groups tab** to display the existing list of **PTT groups**.
2. Scroll to the PTT group you want to call. Press and hold the **PTT** button to call the selected group. The Screen displays **PTT Group Call**.
3. Continue to hold the **PTT** button while you are speaking.
4. Release the **PTT** button when you finish speaking.

5. To end the call, press **End Call (RSK)** key or **End** key.

## Sending Alerts

You can send an alert to an individual to let them know that you want to speak to them, it is a great way of getting someone's attention in a more discreet way.

1. Press and release the **PTT** button or select **Menu > Push to talk**. Select **Contacts tab**.
2. Select a contact and press **RSK Alert**.
3. The alert is sent to the contact.





Popup alert is displayed until you act up on it and alert sound will be played after every 20 seconds if alert set to **repeat or continuous**. Alert pop and alert sound are dependent on the respective settings.



You can send an alert only to the individuals who are online. If your status is set to DND, you cannot send an alert.

## Block Incoming PTT Calls

Press and release the **PTT** button or select **Menu > Push to talk**. Select **Options > My Status > Do not disturb**, to block incoming calls from the other PTT members.  is displayed at the top of the screen indicating that **Do not disturb** option is enabled. presence icon  is displayed next to the contact name in the PTT Contacts list of the other contacts.

## Manage PTT Contact List

To access the PTT Contacts, press and release the **PTT** button or select **Menu > Push to talk**. Select **Contacts** tab. The contacts tab contains the list of members whom you want to call or send alerts. Your contact list can be created or copied from your existing list of contacts in your phonebook.

Select a contact and select **Options**. By default the first contact is selected. The following options are displayed.



Some of the options may not be available depending on corporate account setup.

- **View Details :** View contact details for the selected contact.
- **View History :** View call/alert history specific to the selected contact.
- **Search:** Search for a contact in the Contacts.
- **Delete:** Delete the selected contact from the Contacts.
- **Call:** Dial a PTT call to the selected contact.
- **Personal Alert:** Send an alert to the selected contact.
- **New Group:** You can add a new group and also include a new member to the group.
- **Settings:** You can edit PTT settings such as the alerts, volume, and display name, and also logout of the PTT session. For more information refer, "[Manage PTT Settings](#)" on page 73.
- **Help:** View the help for specific functionality.

## Add Contact

To add a new contact to the PTT Contacts list, do the following:

1. Press and release the **PTT** button or select **Menu > Push to talk**. Select **Contacts** tab > **New Contact**.
2. Select **Manual** to add the contact details manually or select **Phone** to select a contact from phonebook.
3. Enter the Contact name and Contact number or select the specific contact from the phonebook.
4. Select **ON** to add the contact to the Favorite Contacts list.
5. Select **Save**. The contact is added to the PTT Contacts.

## Contact Options

1. Select a **Contact** in the Contacts tab and then select **Options > View Details > Options** to view following Contact Options:



Some of the options will not be displayed for corporate contacts.

- **Add/remove as Favorite:** Add/remove the selected contact to/from **Favorite Contacts**.
- **Call:** Make a PTT call to the selected contact.
- **Personal Alert:** Send an alert to the selected contact. For more information refer, "[Sending Alerts](#)" on page 78.
- **Edit:** Edit the contact details.
- **Delete:** You can delete a selected contact from the Contacts list.

## Manage PTT Groups

To access the PTT groups, press and release the **PTT** button or select **Menu > Push to talk**. Select **Groups** tab. The Groups tab contains the list of groups with contacts whom you want to call.

Select a group and select **Options**. By default the first group is selected. The following options are displayed.

- **View Details** : View details for the selected group.
- **View History** : View call history specific to the selected group.
- **Search**: Search for a group in the groups list.
- **Delete**: Delete the selected group from the groups list.
- **Call**: Dial a PTT call to the selected group.
- **Settings**: You can edit PTT settings such as the alerts, volume, and display name, and also logout of the PTT session. For more information refer, “Manage PTT Settings” on page 73.
- **Help**: View the help for specific functionality.

### Add Group

To add a new group to the PTT groups list, do the following:

1. Press and release the **PTT** button or select **Menu > Push to talk**. Select **Groups** tab > **New Group**.
2. Enter the Group name.
3. Select **ON** to add the group to the Favorite Groups list.

4. Select **Add Members**. Select members from PTT Contacts and select **Add**.
5. Select **Save**. The new group is created.

### Groups Options

1. Select a **Group** in the Groups tab and then select **Options > View Details > Options** to view the following group Options:
  - **Call Group**: Make a PTT call to the selected contact.
  - **Edit Group**: Edit the group details.
  - **Delete Group**: Delete a selected group from the Groups list.
  - **Rename Contact**: Edit the selected contact name.
  - **Add /Remove as Favorite**: Add or remove the selected group to/from **Favorite Groups**.

80

## Manage PTT Favorite Contacts

To access the PTT Favorite contacts, press and release the **PTT** button or select **Menu > Push to talk**. Select **Favorites** tab. The Favorite Contacts tab contains the list of PTT contacts added as favorites for easy access.



If Favorite Groups is displayed, press RSK to toggle to Favorite Contacts.

Select a Contact and select **Options**. By default the first contact is selected. The following options are displayed.

- **View Details** : View details for the selected contact.
- **View History** : View call/alert history specific to the



selected contact.

- **Search:** Search for a contact in the favorite contacts list.
- **New Favorite/group:** Add a contact/group from PTT contacts to the Favorite contacts list.
- **Remove Favorite:** Delete a contact from the Favorite contacts list.
- **Call:** Dial a PTT call to the selected contact.
- **Settings:** You can edit PTT settings such as the alerts, volume, and display name, and also logout of the PTT session.
- **Help:** View the help for specific functionality.

## Add Favorite Contact

To add a contact to the PTT favorite contacts list, do the following:

1. Press and release the **PTT** button or select **Menu > Push to talk**. Select **Favorite Contact** tab > **Add Contact**.
2. Select the contact from PTT contacts list.
3. Select **Save**. The contact is added to the PTT Favorite Contacts.

## Favorite Contact Options

1. Select a **Contact** in the Favorite Contacts tab and then select **Options > View Details > Options** to view following Contact Options:
  - **Remove as Favorite:** Remove the selected contact from **Favorites Contacts**.
  - **Call:** Make a PTT call to the selected contact.

- **Send Alert:** Send an alert to the selected contact.
- **Edit:** Edit the contact details.

## Manage PTT Favorite Groups

To access the PTT Favorite groups, press and release the **PTT** button or select **Menu > Push to talk**. Select **Favorites** tab. The Favorite Groups tab contains the list of PTT groups added as favorites for easy access.



If Favorite Contacts is displayed, press RSK to toggle to Favorite Groups.

Select a group and select **Options**. By default the first group is selected. The following options are displayed.

- **View Details :** View details for the selected group.
- **View History :** View call history specific to the selected group.
- **Search:** Search for a group in the groups list.
- **New Favorite:** Add a group from PTT groups to the Favorite groups list.
- **Remove Favorite:** Delete a group from the Favorite groups list.
- **Call:** Dial a PTT call to the selected group.
- **Settings:** You can edit PTT settings such as the alerts, volume, and display name, and also logout of the PTT session.
- **Help:** View the help for specific functionality.

## Add Favorite Group

To add a group to the PTT Groups favorite list, do the following:

1. Press and release the **PTT** button or select **Menu > Push to talk**. Select **Favorite Group** tab > **Add Group**.
2. Select the group from the group list.
3. Select **Save**. The group is added to the PTT Favorite Groups.

### Favorite Group Options

1. Select a **Group** in the Favorite Groups tab and then select **Options > View Details > Options** to view following Contact Options:
  - **Call Group:** Make a PTT call to the selected group.
  - **Edit Group:** Edit the group details.
  - **Rename:** Edit the selected contact name.
  - **Remove as Favorite:** Remove the selected group from **Favorite Groups**.

### Supervisory Override

If this feature is enabled, you can configure the PTT settings such that the user can be assigned as the supervisor of a group. If the supervisor override is enabled,

- supervisor user will be able to take floor even if the floor is occupied. Supervisor icon (👤) will be displayed next to the user name when the supervisor takes floor.



Supervisory override feature will be enabled in your phone only if your client supports it.



Sonim client cannot be given the supervisory override privilege. It can be the terminator end in any of the group calls consisting of supervisory override privilege enabled members.

### Accessing Other Phone Features during Active PTT Call

You can make regular voice calls, access browser, messaging while in the active PTT session by pushing the PTT call to Background from the **Options > Go back** from the PTT call session screen.

When PTT call is in background, you can continue to use PTT key for floor control. PTT call screens will not be displayed and audio control will work as usual.

82

### Vibration of Incoming voice calls

When PTT call is in receiving state and a GSM call is received then the phone will vibrate and PTT audio will continue to play.

## Camera (Optional)

Some models of Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) has a 2MP (megapixel) camera for taking pictures. The pictures can then be saved in your phone.

- Select **Menu > Camera** OR short press the **camera key**. The camera is switched on.
- Select the **Menu** key OR press the **camera key** to shoot the picture. The picture is automatically saved in **Menu > My files > Phone > Images**.
- After clicking the picture, select **LSK (Options)** to display the following options:
  - **Forward:** You can send the picture to another phone as multimedia message, e-mail or via Bluetooth.
  - **Delete:** You can delete the selected file.
  - **Photo editor:** You can edit the captured images.



Select **Menu > Camera > Press LSK > Photo Album > Select an image > Options > Use as** to set the saved image as wallpaper, screensaver, and caller picture. Refer "**Managing Your Files**" on page 48 for further information.

## Camera Options

To view the camera options, select **Menu > Camera > Press LSK**. The following options are displayed.

While taking a picture, you can use the navigation arrow keys to quickly access various camera options.

- **Video Recorder/Camera:** You can switch to **Video recorder** mode or **Camera** mode, to shoot a video or take photographs, or select **Photo Album** to view the saved images. Select an image and click **Options** to view the image options such as send the photo, rename the photo, delete the photo, and so on. Refer "**Managing Your Files**" on page 48 for further information.
- **Capture mode:** You can select the required Capture mode, from the following options: Normal, Continuous Shot, and Add frame.
- **Scene mode:** You can select Auto for the scene mode to be automatic or Night mode for the image shot at night.
- **Image size:** You can select the picture size from the following options: Wall paper, QVGA, VGA, 1MP and 2MP.
- **Highlight:** You can enable or disable automatic flash.
- **Self-timer:** You can enable the self-time and set it to 5 or 10 seconds. The picture will be shot only after the set time, after pressing the **Menu** key.
- **White balance:** You can select the required white background color balance.
- **Effects:** You can select the required color effects for the image to be taken.
- **Advanced settings:**
  - **Storage:** You can set the default storage location for pictures as **Phone memory** OR **Memory card**.
  - **Image Quality:** You can select the picture quality from the following options: Fine, Good

or normal.

- **Time stamp:** You can add time stamps to the images.
- **Shutter sound:** You can select the shutter sound from the provided options.
- **Anti-Flicker :** You can set the frequency of flicker as **50 Hz OR 60 Hz.**
- **Restore default:** Select this to reset the camera settings to the original factory camera settings.

## Media Player

You can use the built-in media player to play the audio and video files. To access media player, select **Menu > Multimedia > Media player**. The following sub-menus are listed:

### Now Playing

You can view the audio/video files that is currently being played. You can pause, stop, play the previous song, or the next following song by using the navigation arrow keys. Select **Options > Settings** to display and set the following settings:

Settings	Function
<b>Player settings</b>	Define the background display settings, shuffle the playlist, and song repeat sequence of the playlist. You can play the audio in background. A strip in the home screen indicates that audio is playing in background. You can also define the sound effects and Bass enhancement.

<b>Audio settings</b>	You can define the play speed of the audio.
<b>Network settings</b>	You can select and edit the network profile required for streaming audio files.

## My Playlists

You can view all the stored playlists. Select **Options** to display the following options:

- **Open:** You can open a playlist and select **Options**. The following options are displayed:

Options	Function
<b>Play</b>	Play a selected file.
<b>Details</b>	View the details of the file.
<b>Move up</b>	Select a file that is at the top of the list by moving up. This option is available only if there are more than one file.
<b>Move down</b>	Select a file that is at the bottom of the list by moving down. This option is available only if there are more than one file.
<b>Add</b>	Include a new file to the playlist.
<b>Remove</b>	Remove a file from the playlist.
<b>Send</b>	Send a file as a multimedia message, E-mail, or via bluetooth to another user.
<b>Use</b>	Use the file as a ringtone.

- **New:** You can add a new playlist.
- **Delete all:** You can delete all the playlists.
- **Delete:** You can delete a playlist.
- **Rename:** You can rename a playlist.
- **Storage:** You can store the playlist in phone/  
memory card (if present on the phone).



You can play .mp3, .wav, .amr, and .aac audio files. You can play MPEG and 3GP video files.

The following are a set of special shortcuts related to voice calls. Some of these features may require network support.

- Enter 0 followed by SEND - releases all held calls or sets User Determined User Busy (UDUB) for a waiting call.
- Enter 1 followed by SEND - Releases all active calls (if any exist) and accepts the other (held or waiting) call.
- Enter 1X followed by SEND - Releases a specific active call X.
- Enter 2 followed by SEND - Places all active calls (if any exists) on hold and accepts the other (held or waiting) call.
- Enter 2X followed by SEND - Places all active calls on hold except call X with which communication shall be supported.
- Enter 3 followed by SEND - Adds a held call to the conversation.
- Enter 4 followed by SEND - Connects two calls and disconnects the subscriber from both calls (ECT).
- Enter 4 \* "Directory Number" followed by SEND - Redirects an incoming or a waiting call to the specified directory number.
- Enter 5 followed by SEND - Activates the completion of calls to busy subscriber request.
- Enter "Directory Number" followed by SEND - Places all active calls (if any exists) on hold and sets up a new call to the specified directory number.
- Enter END - Releases the subscriber from all calls (except a possible waiting call).



"X" is the numbering (starting with 1) of the call given by the sequence of setting up or receiving the calls (active, held or waiting) as seen by the served subscriber. Calls hold their number until they are released. New calls take the lowest available number.



Where both a held and a waiting call exist, the above procedures shall apply to the waiting call (that is, not to the held call) in conflicting situation.

You can increase the storage capacity by inserting an optional memory card into the slot inside the phone. You can perform the following functions on the memory card.

- Formatting of the memory card.
- Viewing memory details such as free space and total space.
- Storing user data.



The maximum capacity supported is up to 16 GB.

### Inserting Memory card into the Phone

1. Ensure the phone is switched off.
2. Lift the battery cover and remove the battery. For instructions refer “Inserting the Battery (Zone 1 models)” on page 14 and “Inserting the Battery (Zone 2 models)” on page 14.
3. Slide and lift the silver clip over the designated slot located below the SIM card slot.



4. Place the memory card in the designated slot and close the silver clip



5. Replace the battery and the cover. Turn the battery cover screws clockwise to lock the battery cover.



When the Sonim XP5560 BOLT IS (ECOM Ex-Handy 08 or Ex-HSPA 08) phone is connected to a computer in mass storage mode, the memory card is displayed as a separate drive in the computer.



When you are logged in to PTT, you cannot access Mass storage as it will not be recognized and the message “**Currently not available**” will pop up.

## Our Warranty

This wireless device, (the “Device”) contains software owned by Sonim Technologies, Inc. (“Sonim”) and its third party suppliers and licensors (collectively, the “Software”). As user of this Device, Sonim grants you a non-exclusive, non-transferable, non-assignable license to use the software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the life of this Device. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect. Sonim and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sonim, and, to the extent that the Software contains material or code of a third party, such third party shall be entitled third party beneficiaries of these terms. The validity, construction and performance of this license shall be governed by the laws of Delaware, United States.

## Comprehensive 3 Year Warranty

Sonim provides this Comprehensive three-year warranty for your mobile phone (hereinafter referred to as

“Product”).

You may register your phone at [www.sonimtech.com/](http://www.sonimtech.com/) register to receive further information about your product. Should your Product need service, please contact Sonim customer support.

## Our Warranty

Subject to the conditions of this Comprehensive 3-year Warranty, Sonim warrants this product to be free from major defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of three (3) years.

## What We Will Do

If during the warranty period, this product fails to operate in accordance with its specifications under normal use and service, due to defects in design, material or workmanship, Sonim’s authorized distributors or service partners, in the country/region where you purchased the product, will repair or replace at the sole discretion of Sonim, with the same or better model in the same or better condition as detailed below:

1. If a device is out-of-warranty, then additional repair charges may apply;
2. You will be advised of the charges in advance of any work being performed;
3. You will have the option to approve the charges and have the repair performed, or you may choose to have your device returned to you unrepared;
4. Any repair charges will be billed to you through Sonim’s Authorized Distributor.

Please note that some of your personal settings,



downloads or other information may be lost when your Sonim Product is repaired or replaced. Sonim does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss.

You should always make backup copies of all the information stored on your Sonim Product such as downloads, calendar and contacts before handing in your Sonim Product for repair or replacement.

## Phone Care

Each Sonim phone has a designated IP class for dust and water protection, according to the IEC Ingress Protection (IP) Standard 60529. This means that the phone is dust protected and can be submerged into 2 m deep water for up to 60 minutes. Immersion in deeper water can damage it and must be avoided.

Sonim phones are solid and built for heavy duty use. Its design protects against disassembly or mechanical damage when subjected to forces equal to free fall from the height of 2 meters. Subjecting the phone to stronger impact and forces can damage it and must be avoided.

## Conditions

1. The warranty is valid whether or not the product has been registered.
2. The warranty is valid only if the original proof of purchase issued to the original purchaser by an authorized service provider, specifying the date of purchase and serial number for this Product, is presented with the Product to be repaired or replaced. Sonim reserves the right to refuse warranty service if the device is found to be out of warranty under the conditions as set forth herein.

3. If Sonim repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sonim.
4. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse or abuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sonim device specifications and instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to software or hardware modification or adjustment, acts of God or damage resulting from liquid interacting with the product beyond what is described as acceptable in the user guide for the product. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out - this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sonim recommends that you use only batteries and chargers approved by Sonim. Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and cannot be adjusted. Up to three defective pixels are deemed acceptable.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a any person other than a Sonim-authorized person. Tampering

with any of the seals on the Product will void the warranty.

6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sonim-branded original accessories intended for use with the Product.
7. The 3-year warranty does not cover 3rd party accessories or any 3rd party software applications, which are instead covered to the extent provided by the original vendor guarantee for these products.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

**WARNING:** Changes or modifications made to this equipment not expressly approved by Sonim Technologies, Inc. for compliance could void the user's authority to operate the equipment.

### FCC Statement

Sonim XP5560 BOLT IS Ex-Handy 08 .x -A and Ex-HSPA 08 .x -A ( **NFC Model name:** Sonim XPand NFC **FCC ID:** WYPB01V008AA ) devices comply with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## IC Statement

The following is valid for the Sonim XP5560 BOLT IS Ex-Handy 08 .x -A and Ex-HSPA 08 .x -A devices:

1. This Class B digital apparatus complies with Canadian ICES-003.
  2. This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.
  3. This device must accept any interference, including interference that may cause undesired operation of the device.
- This device complies with RSS-310 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.

## A

- Activating PTT service 71
- Add a Favorite PTT Group 82
- Add a new PTT contact 79, 81
- Add a new PTT Group 80
- Add new contact 50
- Alarm clock 66
- Audio
  - Playback 68

## B

## Battery

- Charging indicator 16
- Usage Information 14

## Block Incoming PTT Calls 78

## Bluetooth connectivity 44

- Activation 44
- Connecting headset 45
- Deactivation 44
- Deleting paired device 45
- Device pairing 44
- Renaming paired device 45
- Sending data to paired device 46
- Settings 45
- Specifications 44
- Supported Profiles 44

## Bookmarks 70

## C

- Calendar 66
  - Editing events 66
- Call accept/Send key 21
- Call history/list 34
- Call Restriction 37
- Calls on hold/waiting 35
- Camera
  - Options 83
- Clear key 21
- Contact Options 79, 81, 82

## Contacts

- Add 50
- Caller groups 53
- Multiple contacts 52
- My number 53
- Phonebook settings 53
- Search 54
- Send message 50
- View details 50

## D

- Direct PTT call 77
- Display settings 38

## E

- E-mail 59
  - Configuring Email account 60
  - Draft 62
  - Inbox 61
  - Outbox 61

- Sent 61
- Write 60

## F

- Flight mode 64

## H

- Hardcoded Shortcuts 86
- Homepage 70

## I

- International number dialling 34

## J

## Java

- Installing Java Application From Memory Card 69
- Installing Java Application From WAP 69

## K

## Keypad

- Accept/Send 23
- Back 23
- Clear 23, 67
- End call 23
- Function keys 19
- LSK/RSK 23
- Navigation keys 24
- Power On/Off 23

**L**

- Language Settings** 38
- Left Selection Key** 21
- Login and Logout of PTT Service** 71
- Loneworker monitoring** 33
- Lone Worker Monitoring** 33

**M**

- Memory card** 87
  - Insert 87
- Menu**
  - WAP 33
- Messages**
  - Broadcast 62
  - Drafts 58
  - e-mail 57
  - Inbox 57
  - MMS 56
  - Outbox 58
  - Sent 59
  - Settings 62
  - SMS 55
  - Template 62

**N**

- Near Field Communication (NFC)** 27
- Network Connectivity** 44

**O**

- One-to-One PTT Call** 77

**P**

- Profiles** 64, 65
  - Flight 64
  - General 64
  - Headset 64
  - Meeting 64
  - Outdoor 64
  - Silent 64
- PTT call me alerts** 78
- PTT Calls** 77
- PTT conversation history** 77
- PTT Corporate only subscriber** 72
- PTT Group Call** 78
- PTT related key functions** 72
- PTT Settings** 73

**Q**

- Quick Group PTT Call** 78

**R**

- Recording a call** 37
- Restricting incoming calls** 37

**S**

- Security Settings** 42
- Send a PTT call me alert** 78
- Silent mode** 64
- Sound Recorder** 68
- Speed dial** 39

**T**

- Themes** 38
- Tools**
  - Alarm clock 66
  - Calculator 66
  - Calendar 66
  - Notes 68
  - SIM card menu 68
  - Sound recorder 68
  - Stopwatch 68
  - Text reader 68
  - Unit converter 67
  - World clock 67

**U**

- Unit converter** 67
- USB function** 47

**V**

- Voicemail**
  - Server settings 62

**W**

- WAP** 33
  - Address 70
  - Service inbox 70
  - Settings 70
- World clock** 67
- Write Messages** 55